

bizhub C360/C280/C220

User's Guide [Network Administrator]



Table of contents

1 Introduction

1.1	Welcome	. 1-2
1.1.1	User's guides	1-2
1.1.2	User's Guide	
1.2	Conventions used in this manual	. 1-4
1.2.1	Symbols used in this manual To use this machine safely	1-4
	Procedural instruction	1-4
	Key symbols	1-5
1.2.2	Original and paper indications	1-5
	Original and paper sizes	1-5
	Original and paper indications	1-5
1.3	Display modes of PageScope Web Connection	
1.3.1	[Tab Function Display]	
1.3.2	[List Function Display] Main Menu	1-6 1-7

2 Connecting to network

2.1	Basic settings for TCP/IP communication	
	[TCP/IP Settings]	
	[Device Setting]	
2.2	Communicating using IPv6	
	[TCP/IP Setting]	

3 Using PageScope Web Connection

3.1	Using PageScope Web Connection	3-2
3.1.1	[TCP/IP Settings]	3-2
3.1.2	[PSWC Settings]	3-3
3.1.3	[TCP Socket Settings]	3-3
3.1.4	[Device Certificate Setting]	
3.2	Logging in to the administrator mode	3-5
3.3	Specifying the display mode of the administrator mode [Display Setting] [Tab Function Display] [List Function Display]	3-7 3-7
3.4	Using Popup Help [Help Display Setting] Popup Help Display Example	3-8
3.5	Configuring Settings for each Purpose via Wizard	3-9
3.5.1	Screen Components	3-9
3.5.2	[Wizard]	3-10
3.6	Disabling Flash View	
3.7	Specifying the Automatic Logout Time	3-12 3-12

4 Scanning

4.1	Sending scanned data to a computer on network	4-2
4.1.1	[TCP/IP Setting]	4-3
4.1.2	[Client Setting]	4-3

4.1.3	[WINS Setting]	. 4-4
4.1.4	[Direct Hosting Setting]	
4.1.5	[LLMNR Setting]	
4.2	Sending scanned data to your computer (Scan to Home)	
4.2.1	[TCP/IP Setting]	
4.2.2	User authentication (Active Directory)	
4.2.3	[Scan to Home Settings]	
4.2.4	[Client Setting]	
4.2.5	[WINS Setting]	
4.2.6	[Direct Hosting Setting]	
4.2.7	[LLMNR Setting]	
4.3	Sending scanned data by E-mail	
4.3.1	[TCP/IP Setting]	
4.3.2	E-mail Transmission	
	[E-mail TX (SMTP)]	
	[Administrator E-Mail Address]	4-10
4.3.3	SMTP over SSL/Start TLS	4-10
	[E-mail TX (SMTP)]	
	[Certificate Verification Setting]	
4.3.4	SMTP Authentication	
4.3.5	POP before SMTP	
	[POP before SMTP] [E-mail RX (POP)]	
4.3.6	POP over SSL [E-mail RX (POP)]	
	[Certificate Verification Setting]	
4.3.7	APOP Authentication	
4.3.7 4.4	Sending scanned data to the user's E-mail address (Scan to Me)	
4.4 .1	[TCP/IP Settings]	
4.4.2	User Authentication	
4.4.2	When the MFP authentication is selected	
	When the Active Directory authentication is selected	4-18
	When the NTLM or NDS authentication is selected	4-18
4.4.3	Scan to E-Mail	4-18
4.4.4	SMTP over SSL/Start TLS	4-18
4.4.5	SMTP Authentication	4-18
4.4.6	POP before SMTP	4-18
4.4.7	POP over SSL	4-18
4.4.8	APOP Authentication	4-19
4.5	Sending scanned data by E-mail (with digital signature)	4-20
4.5.1	[TCP/IP Settings]	4-20
4.5.2	Scan to E-Mail	4-20
4.5.3	Registering a certificate	4-21
4.5.4	[S/MIME]	4-21
4.5.5	SMTP over SSL/Start TLS	4-21
4.5.6	SMTP Authentication	4-21
4.5.7	POP before SMTP	4-21
4.5.8	POP over SSL	4-22
4.5.9	APOP Authentication	4-22
4.6	Sending scanned data by E-mail (Encryption by public key)	4-23
4.6.1	[TCP/IP Settings]	4-23
4.6.2	Scan to E-Mail	4-23
4.6.3	[S/MIME]	4-24
4.6.4	SMTP over SSL/Start TLS	4-24
4.6.5	SMTP Authentication	4-24
4.6.6		
4.0.0	POP before SMTP	4-24

4.6.8	APOP Authentication	4-25
4.7	Sending scanned data to the FTP server	4-26
4.7.1	[TCP/IP Settings]	4-26
4.7.2	[FTP TX Setting]	4-26
4.8	Sending scanned data to the WebDAV server	4-28
4.8.1	[TCP/IP Settings]	4-28
4.8.2	[WebDAV Client Settings]	4-29
4.8.3	WebDAV over SSL	4-30
4.9	Importing images by TWAIN scan	4-32
4.9 4.9.1	Importing images by TWAIN scan [TCP/IP Settings]	
		4-32
4.9.1	[TCP/IP Settings]	4-32 4-32
4.9.1 4.9.2	[TCP/IP Settings] [SLP Setting]	4-32 4-32 4-33
4.9.1 4.9.2 4.9.3	[TCP/IP Settings] [SLP Setting]	4-32 4-32 4-33 4-33
4.9.1 4.9.2 4.9.3 4.9.4	[TCP/IP Settings] [SLP Setting] [TCP Socket Setting] [Network TWAIN]	4-32 4-32 4-33 4-33 4-34
4.9.1 4.9.2 4.9.3 4.9.4 4.10	[TCP/IP Settings] [SLP Setting] [TCP Socket Setting] [Network TWAIN] Using the WS scan function	4-32 4-33 4-33 4-33 4-34 4-34

5 Printing

5.1	Printing (LPR/Port9100)	5-2
5.1.1	[TCP/IP Settings]	5-2
5.1.2	[LPD Setting]	5-2
5.1.3	[RAW Port Number]	5-3
5.2	Print (SMB)	5-4
5.2.1	[TCP/IP Settings]	5-4
5.2.2	[Print Setting]	5-5
5.2.3	[WINS Setting]	5-5
5.2.4	[Direct Hosting Setting]	5-5
5.2.5	[LLMNR Setting]	5-5
5.3	Print (IPP)	5-6
5.3.1	[TCP/IP Settings]	5-6
5.3.2	[IPP Setting]	5-7
5.3.3	[IPP Authentication Settings]	5-8
5.4	Print (IPPS)	5-9
5.4.1	[TCP/IP Settings]	5-9
5.4.2	[IPP Setting]	5-9
5.4.3	[Device Certificate Setting]	5-9
5.4.4	[IPP Authentication Setting]	5-9
5.5	Printing (Bonjour)	
5.6	Printing (AppleTalk)	5-11
	[AppleTalk Settings] 5	5-11
5.7	Printing (Netware)	5-12
5.7.1	[NetWare Settings]	
	In Remote Printer mode using the NetWare 4.x Bindery Emulation	
	In NetWare 4.x Remote Printer mode (NDS)	
	In the NetWare 4.x/5.x/6 Print Server mode (NDS)	
	For NetWare 5.x/6 Novell Distributed Print Service (NDPS)	
5.7.2	[NetWare Status]	5-16
5.8	Using the WS print function 5	5-17
5.8.1	[TCP/IP Settings]	5-17
5.8.2	[Web Service Common Settings]	5-17
5.8.3	[Printer Settings]	5-18

	5.9 5.9.1	Using Data Saved in a Cellular Phone or PDA [Bluetooth Setting]	
	5.9.2	[System Connection Setting]	5-20
6	Sendir	ng and receiving network faxes	
	6.1	Sending Internet faxes	
	6.1.1	[TCP/IP Settings]	
	6.1.2	[Network Fax Function Settings]	
	6.1.3	[Machine Setting]	
	6.1.4	[Header Information]	
	6.1.5	Scan to E-Mail	
	6.1.6	[Network Fax Setting]	
		[I-Fax Advanced Setting]	
		[Black Compression Level]	
	o 4 -	[Color/Grayscale Multi-Value Compression Method]	
	6.1.7	SMTP over SSL/Start TLS	
	6.1.8	SMTP Authentication	
	6.1.9	POP before SMTP	
	6.1.10	POP over SSL	
	6.1.11	APOP Authentication	
	6.2	Receiving Internet faxes	
	6.2.1	[TCP/IP Settings]	
	6.2.2	[Network Fax Function Settings]	
	6.2.3	[E-mail RX (POP)]	
	6.2.4	[Network Fax Setting] [I-Fax Advanced Setting]	
		[Internet Fax RX Ability]	
	6.2.5	POP over SSL	
	6.2.6	APOP Authentication	-
	6.3	Sending and receiving IP address faxes	
	6.3.1	[TCP/IP Settings]	
	6.3.2	[Network Fax Function Settings]	
	6.3.3	[SMTP TX Setting]	
	6.3.4	[SMTP RX Setting]	
	6.3.5	[Network Fax Setting]	
	0.0.0	[Black Compression Level]	
		[Color/Grayscale Multi-Value Compression Method]	
		[IP Address Fax Operation Settings]	
	6.3.6	[Header Information]	6-18

7 Using User Authentication

7.1	Restricting users of this machine (MFP authentication)	7-2
7.1.1	[General Settings]	. 7-3
7.1.2	[Administrative Setting]	. 7-4
7.1.3	User Registration	. 7-6
7.1.4	Account Track Registration	. 7-8
7.2	Restricting users of this machine (Active Directory)	7-10
7.2.1	[TCP/IP Settings]	7-10
7.2.2	[External Server Settings]	7-11
7.2.3	[General Settings]	7-12
7.2.4	[Administrative Setting]	7-12
7.2.5	[Default Function Permission]	
7.2.6	[Date/Time Setting]	7-14
7.3	Restricting users of this machine (Windows domain or workgroup)	
7.3.1	[TCP/IP Settings]	7-15

7.3.2	[External Server Settings]	7-16
7.3.3	[General Settings]	7-17
7.3.4	[Administrative Setting]	7-17
7.3.5	[Default Function Permission]	7-17
7.3.6	[Client Settings]	7-18
7.3.7	[WINS Setting]	7-18
7.3.8	[Direct Hosting Setting]	7-18
7.4	Restricting users of this machine (NDS over IPX/SPX)	7-19
7.4.1	[External Server Settings]	7-19
7.4.2	[General Settings]	7-20
7.4.3	[Administrative Setting]	7-20
7.4.4	[Default Function Permission]	7-21
7.4.5	[NetWare Settings]	7-21
7.5	Restricting users of this machine (NDS over TCP/IP)	7-22
7.5.1	[TCP/IP Settings]	7-22
7.5.2	[External Server Settings]	7-23
7.5.3	[General Settings]	7-24
7.5.4	[Administrative Setting]	7-24
7.5.5	[Default Function Permission]	7-24
7.6	Restricting users of this machine (LDAP)	7-25
7.6.1	[TCP/IP Settings]	7-25
7.6.2	[External Server Settings]	7-26
7.6.3	[General Settings]	7-27
7.6.4	[Administrative Setting]	7-27
7.6.5	[Default Function Permission]	7-27
7.6.6	LDAP over SSL	7-28
	[External Server Settings]	7-28
	[Setting Up LDAP]	
	[Certificate Verification Setting]	7-29

8 Reinforcing security

8.1	Registering the certificate of this machine for SSL communications	. 8-2
8.1.1	[Device Certificate Setting]	8-3
8.1.2	[Create and install a self-signed Certificate]	8-4
8.1.3	[Request a Certificate]	8-5
8.1.4	[Install a Certificate]	8-6
8.1.5	[Import a Certificates]	8-7
8.1.6	[SSL Setting]	8-7
8.1.7	[Remove a Certificate]	8-8
8.2	Using device certificates depending on protocol	. 8-9
8.2.1	[Device Certificate Setting]	8-10
8.2.2	[Protocol Setting]	8-10
8.3	Managing a device certificate	8-11
8.3.1	[Device Certificate Setting]	8-11
8.3.2	[Export Certificate]	8-11
8.4	Registering a user certificate in this machine	8-13
8.4.1	[E-mail]	8-14
8.4.2	[Automatically Obtain Certificates]	8-15
8.4.3	Certificate validation	
	[Certificate Verification Level Settings]	
	[Certificate Verification Setting]	
8.5	Restricting the use of the SMB address registered in the address book	
8.5.1	[TCP/IP Settings]	
8.5.2	User Authentication	8-19
8.5.3	[Scan to Authorized Folder Settings]	
8.5.4	[Client Setting]	8-19

8.5.5		
0.0.0	[WINS Setting]	
8.5.6	[Direct Hosting Setting]	. 8-19
8.5.7	[LLMNR Setting]	. 8-19
8.6	Using Web services to secure communication from Vista/Server 2008	0 20
8.6.1	to this machine via SSL [TCP/IP Settings]	
8.6.2	[Device Certificate Setting]	
8.6.3	[Web Service Common Settings]	
8.0.3 8.7	Using Web services to establish an SSL communication from this machine	. 0-20
0.7	to Vista/Server 2008	8-21
8.7.1	[TCP/IP Settings]	. 8-21
8.7.2	[Web Service Common Settings]	
	[Certificate Verification Setting]	. 8-22
8.8	Filtering IP addresses	8-23
8.8.1	[TCP/IP Settings]	. 8-23
8.8.2	[IP Filtering]	. 8-24
8.9	Communicating using IPsec	8-25
8.9.1	[TCP/IP Settings]	. 8-25
8.9.2	[IPsec]	. 8-26
8.9.3	[IKE]	. 8-26
	[IKE Settings]	. 8-27
8.9.4	[SA]	
	[SA Setting]	. 8-27
8.9.5	[Peer]	
8.10	Using IEEE802.1X authentication	8-29
	-	
8.10.1	[TCP/IP Setting]	
8.10.1 8.10.2	[Device Certificate Setting]	. 8-29 . 8-29
	[Device Certificate Setting] [IEEE802.1x Authentication Setting]	. 8-29 . 8-29 . 8-30
8.10.2	[Device Certificate Setting] [IEEE802.1x Authentication Setting] Certificate validation	. 8-29 . 8-29 . 8-30 . 8-31
8.10.2 8.10.3	[Device Certificate Setting] [IEEE802.1x Authentication Setting] Certificate validation [IEEE802.1x Authentication Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-31
8.10.2 8.10.3 8.10.4	[Device Certificate Setting] [IEEE802.1x Authentication Setting] Certificate validation [IEEE802.1x Authentication Setting] [Certificate Verification Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-31 . 8-32
8.10.2 8.10.3 8.10.4 8.10.5	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-31 . 8-32 . 8-33
8.10.2 8.10.3 8.10.4	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-31 . 8-31 . 8-32 . 8-33 8-34
8.10.2 8.10.3 8.10.4 8.10.5 8.11	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-31 . 8-32 . 8-33 8-34 . 8-34
8.10.2 8.10.3 8.10.4 8.10.5	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-31 . 8-32 . 8-33 . 8-34 . 8-34 . 8-36
8.10.2 8.10.3 8.10.4 8.10.5 8.11 8.12	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-31 . 8-33 . 8-33 . 8-34 . 8-36 . 8-36
8.10.2 8.10.3 8.10.4 8.10.5 8.11	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-31 . 8-32 . 8-33 . 8-34 . 8-34 . 8-36 . 8-36 . 8-37
8.10.2 8.10.3 8.10.4 8.10.5 8.11 8.12	[Device Certificate Setting]	. 8-29 . 8-30 . 8-31 . 8-31 . 8-32 . 8-33 . 8-34 . 8-34 . 8-36 . 8-36 . 8-37 . 8-37
8.10.2 8.10.3 8.10.4 8.10.5 8.11 8.12 8.13	[Device Certificate Setting]	. 8-29 . 8-30 . 8-31 . 8-31 . 8-33 . 8-33 . 8-33 . 8-34 . 8-36 . 8-36 . 8-37 . 8-38
8.10.2 8.10.3 8.10.4 8.10.5 8.11 8.12 8.13	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-32 . 8-32 . 8-33 . 8-34 . 8-36 . 8-36 . 8-37 . 8-37 . 8-38 . 8-38 . 8-39
8.10.2 8.10.3 8.10.4 8.10.5 8.11 8.12 8.13 8.14	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-32 . 8-32 . 8-33 . 8-34 . 8-36 . 8-36 . 8-37 . 8-37 . 8-38 . 8-38 . 8-39
8.10.2 8.10.3 8.10.4 8.10.5 8.11 8.12 8.13 8.14	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-32 . 8-33 . 8-34 . 8-36 . 8-36 . 8-36 . 8-37 . 8-38 . 8-38 . 8-39 . 8-39 . 8-40
8.10.2 8.10.3 8.10.4 8.10.5 8.11 8.12 8.13 8.14 8.15	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-32 . 8-33 . 8-34 . 8-36 . 8-36 . 8-36 . 8-37 . 8-38 . 8-38 . 8-39 . 8-39 . 8-40
8.10.2 8.10.3 8.10.4 8.10.5 8.11 8.12 8.13 8.14 8.15	[Device Certificate Setting]	. 8-29 . 8-29 . 8-30 . 8-31 . 8-32 . 8-32 . 8-34 . 8-34 . 8-36 . 8-36 . 8-37 . 8-37 . 8-38 . 8-38 . 8-39 . 8-39 . 8-40 . 8-42

9 Cooperating with applications

9.1	Using applications that communicate with this machine with TCP Socket	9-2
9.1.1	[TCP/IP Settings]	. 9-2
9.1.2	[Device Certificate Setting]	. 9-2
9.1.3	[TCP Socket Setting]	. 9-3
9.2	Linking an OpenAPI system with this machine	9-4
9.2.1	[TCP/IP Settings]	. 9-4
9.2.2	[SSDP Settings]	. 9-5
9.2.3	[Device Certificate Setting]	. 9-5
9.2.4	[OpenAPI Setting]	. 9-6

9.2.5	Certificate validation [Certificate Verification Level Settings] [Certificate Verification Setting]	
9.3	Using the FTP server and WebDAV server functions	
9.3.1	[TCP/IP Settings]	
9.3.2	[Device Certificate Setting]	
9.3.3	[FTP Server Setting]	
9.3.4	[WebDAV Server Settings]	
9.4	Canceling the connection with applications [System Connection Setting]	

10 Managing

10.1	Specifying the date and time of this machine	10-2
10.1.1	[Manual Setting]	10-3
10.1.2	[TCP/IP Settings]	10-3
10.1.3	[Time Zone]	10-3
10.1.4	[Time Adjustment Setting]	10-4
10.2	Searching for the E-mail address in the LDAP server	10-5
10.2.1	[TCP/IP Settings]	10-5
10.2.2	[LDAP Setting]	10-6
10.2.3	[Setting Up LDAP]	10-7
10.2.4	LDAP over SSL	10-8
	[Setting Up LDAP]	
	[Certificate Verification Setting]	
10.2.5	DNS server setting	
10.2.6	[Date/Time Setting]	
10.3	Displaying this machine on the network map	
10.3.1	[TCP/IP Settings]	
10.3.2	[LLTD Setting]	
10.4	Monitoring this machine by SNMP Manager	10-12
10.4.1	[TCP/IP Settings]	10-12
10.4.2	[NetWare Settings]	10-12
10.4.3	[SNMP Setting]	
10.5	Reporting the status of this machine (by E-mail)	
10.5.1	[TCP/IP Settings]	10-15
10.5.2	[E-mail TX (SMTP)]	10-15
10.5.3	[Status Notification Setting]	10-16
10.5.4	SMTP over SSL/Start TLS	10-17
10.5.5	SMTP Authentication	10-17
10.5.6	POP before SMTP	10-17
10.5.7	POP over SSL	10-17
10.5.8	APOP Authentication	10-17
10.6	Reporting the status of this machine (TRAP)	10-18
10.6.1	[TCP/IP Settings]	10-18
10.6.2	[NetWare Setting]	10-19
10.6.3	[TRAP Setting]	10-19
10.6.4	[Status Notification Setting]	10-20
10.7	Reporting the counter information of this machine (by E-mail)	
10.7.1	[TCP/IP Settings]	10-21
10.7.2	[E-mail TX (SMTP)]	10-22
10.7.3	[Total Counter Notification Settings]	10-23
10.7.4	SMTP over SSL/Start TLS	10-24
10.7.5	SMTP Authentication	10-24
10.7.6	POP before SMTP	10-24
10.7.7	POP over SSL	10-24

10.7.8	APOP Authentication	10-24
10.8	Checking the counter of this machine [Counter]	
10.9	Checking the machine ROM version	
10.10	Importing and exporting the machine configuration information [Import/Export]	
10.11	Using the timer functions [Power Save Setting] [Weekly Timer Setting]	10-28
10.12	Displaying a network error code [Network Error Code Display Setting]	
10.13	Initializing the configuration information [Network Setting Clear] [Reset] [Format All Destination]	10-31 10-31
10.14	Enhancing the functions of this machine [Get Request Code] [Install License]	10-33
10.15	Outputting job logs [Create Job Log] [Download Job Log]	10-35
10.16	Configuring settings for printing blank pages [Blank Page Print Settings]	
10.17	Configuring settings for skipping jobs [Skip Job Operation Settings]	
10.18	Configuring Outline PDF Settings [Outline PDF Setting]	
10.19	Managing Single Color /2 Color Output [User/Account Common Setting]	

11 Registering

11.1	Registering Font or Macro [Edit Font/Macro]	
11.2	Registering machine information [Machine Setting]	
11.3	Registering support information [Register Support Information]	
11.4	Register Header/Footer Program [Header/Footer Registration]	
11.5	Registering Address Book [Store Address] [Icon]	11-7
11.6	Registering a group [Group]	
11.7	Registering a program destination	
11.8	Registering Temporary One-Touch Destination	
11.9	Registering the E-mail subject and body [Subject] [Text]	11-29
11.10	Simplifying entering E-mail addresses [Prefix/Suffix]	
11.11	Using Data Management Utility	11-31
11.11.1	Starting up Data Management Utility	
11.11.2	Managing copy protect data	

[System] [Edit]	
Managing stamp Data [Stamp List]	
[Edit]	
Managing font or macro [Font/Macro List] [System]	
	[Edit] Managing stamp Data [Stamp List] [System] [Edit] Managing font or macro [Font/Macro List]

12 Configuring Settings for User Box Functions

12.1	Configuring the environmental settings for using User Boxes [Delete Unused User Box]	
	[Delete Secure Print File]	
	[Delete Time Setting]	
	[Document Delete Time Setting]	
	[Document Hold Setting]	
	[External Memory Function Settings]	
	[User Box Operation]	
	[ID & Print Delete Time]	
12.2	Specifying the maximum number of Public User Boxes	12-10
	[Public User Box Setting]	12-10
12.3	Changing User Box settings	12-11
	[Open User Box]	
12.4	Creating new User Boxes	
	[Create User Box]	
12.5	Changing System User Box settings	
	[Open System User Box]	
12.6	Creating a new System User Box [Create System User Box]	12-16 12-16
	[· · - · · · · · · · · · · · · ·	

13 Configuring Settings for Printer Function

13.1	Configuring initial settings for the printer function [Basic Setting]	13-2
13.2	Configuring the initial settings for the PCL print function [PCL Setting]	
13.3	Configuring the initial settings for the PS print function [PS Setting]	13-5 13-5
13.4	Configuring the initial settings for the TIFF print function	13-6
13.5	Configuring the initial settings for the XPS print function [XPS Settings]	13-7 13-7
13.6	Specifying the timeout of the interface [Interface Setting]	
13.7	Disabling the direct print function Direct Print Settings	13-9 13-9
13.8	Restricting users from obtaining device information using password	

14 Configuring Settings for Fax Functions

14.1	Configuring Settings to Print a Stamp when Sending a Fax [Fax TX Settings]	
14.2	Configuring Settings to Print the Header/Footer Position [Header/Footer Position]	
14.3	Configuring settings for telephone and fax lines [Line Parameter Setting]	

14.4	Configuring settings to send or receive faxes [TX/RX Settings]	
14.5	Configuring settings for the fax functions [Function ON/OFF Setting] [Memory RX Setting] [Closed Network RX] [Forward TX Setting] [Incomplete TX Hold] [PC-Fax RX Setting] [TSI User Box Settings] [TSI User Box Registration]	. 14-7 14-7 14-8 14-9 14-10 14-11 14-12 14-13
14.6	Configuring Settings for PBX Connection [PBX Connection Setting]	
14.7	Configuring Settings to Output Fax Reports	
14.8	Using extension lines [Multi Line Settings]	
14.9	Registering the Sender Name and Fax ID	
14.10	Using a fax server [Application Registration]	
14.11	Using the Fax Server Communicating in E-Mail Format [System Connection Setting]	

15 Appendix

15.1	Product specifications (Network functions)	15-2
15.2	Displaying the [Network Settings] Screen (Control Panel)	15-3
15.3	[Network Settings] menu list (Control Panel)	15-5
15.3.1	[Network Settings] (1/2) [TCP/IP Settings] [NetWare Settings] [HTTP Server Settings] [FTP Settings] [SMB Settings] [LDAP Settings]	
	[E-Mail Settings] [SNMP Settings] [AppleTalk Settings] [Bonjour Setting]	
15.3.2	[Network Settings] (2/2) [TCP Socket Settings] [Network Fax Settings] [WebDAV Settings] [Web Service Settings] [SSDP Settings] [Detail Settings] [IEEE802.1x Authentication Settings] [Bluetooth Setting]	
15.4	Network Error Codes	15-19
15.5	Glossary	15-31

16 Index

16.1	Index by item	16-2
16.2	Index by button	16-4

Introduction

1 Introduction

1.1 Welcome

Thank you for purchasing this machine.

This User's Guide describes the functions, operating instructions, precautions for correct operation, and simple troubleshooting guidelines of this machine. In order to obtain maximum performance from this product and use it effectively, please read this User's Guide as necessary.

1.1.1 User's guides

Printed manual	Overview
[Quick Guide Copy/Print/Fax/Scan/Box Opera- tions]	This manual describes operating procedures and the functions that are most frequently used in order to en- able you to begin using this machine immediately. This manual also contains notes and precautions that should be followed to ensure safe usage of this ma- chine. Please be sure to read this manual before using this machine.

User's guide CD manuals	Overview
[User's Guide Copy Operations]	 This manual describes details on copy mode operations and the settings of this machine. Specifications of originals and copy paper Copy function Maintaining this machine Troubleshooting
[User's Guide Enlarge Display Operations]	 This manual describes details on operating procedures of the enlarge display mode. Copy function Scanning function G3 fax function Network fax function
[User's Guide Print Operations]	This manual describes details on printer functions.Printer functionSetting the printer driver
[User's Guide Box Operations]	 This manual describes details on the boxed functions using the hard disk. Saving data in user boxes Retrieving data from user boxes Transferring and printing data from user boxes
[User's Guide Network Scan/Fax/Network Fax Operations]	 This manual describes details on transmitting scanned data. E-mail TX, FTP TX, SMB TX, Save in User Box, WebDAV TX, Web Services G3 fax IP Address Fax, Internet Fax
[User's Guide Fax Driver Operations]	This manual describes details on the fax driver function that transmits faxes directly from a computer.PC-FAX
[User's Guide Network Administrator]	 This manual describes details on setting methods for each function using the network connection. Network settings Settings using PageScope Web Connection

User's guide CD manuals	Overview
[User's Guide Advanced Function Operations]	 This manual describes details on functions that become available by registering the optional license kit and by connecting to an application. Web browser function Image panel PDF Processing Function Searchable PDF My panel and My address functions
[Trademarks/Copyrights]	This manual describes details on trademarks and copyrights.Trademarks and copyrights

1.1.2 User's Guide

This User's Guide is intended for users ranging from those using this machine for the first time to administrators.

It describes basic operations, functions that enable more convenient operations, simple troubleshooting operations, and various setting methods of this machine.

Note that basic technical knowledge about the product is required to enable users to perform troubleshooting operation. Limit your troubleshooting operations to the areas explained in this manual.

Should you experience any problems, please contact our service representative.



1.2.1 Symbols used in this manual

Symbols are used in this manual to express various types of information.

The following describes each symbol related to correct and safe usage of this machine.

To use this machine safely

▲ WARNING

This symbol indicates that a failure to heed the instructions may lead to death or serious injury.

▲ CAUTION

This symbol indicates that negligence of the instructions may lead to mishandling that may cause injury
or property damage.

NOTICE

This symbol indicates a risk that may result in damage to this machine or documents. Follow the instructions to avoid property damage.

Procedural instruction

- ✓ This check mark indicates an option that is required in order to use conditions or functions that are prerequisite for a procedure.
- 1 This format number "1" represents the first step.
- 2 This format number represents the order of serial steps.
 - → This symbol indicates a supplementary explanation of a procedural instruction.

The operation procedures are described using illustrations.

This symbol indicates transition of the Control Panel to access a desired menu item.



This symbol indicates a desired page.

1

Reference

This symbol indicates a reference.

View the reference as required.

Key symbols

[]

Key names on the **Touch Panel** or computer screen, or a name of user's guide are indicated by these brackets.

Bold text


Key names, part names, product names and option names on the control panel are indicated in bold text.

1.2.2 Original and paper indications

Original and paper sizes


The following explains the indication for originals and paper described in this manual.


When indicating the original or paper size, the Y side represents the width and the X side the length.

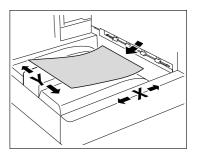


Original and paper indications

  $\hfill \square$ indicates the paper size with the length (X) being longer than the width (Y).



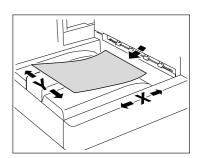

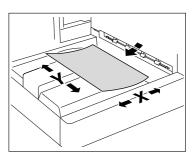

1.3 Display modes of PageScope Web Connection

The display modes of the **PageScope Web Connection** administrator modes are classified into two display modes: [Tab Function Display] and [List Function Display]. This manual shows an example where the [List Function Display] is set as the display mode.

This section provides an overview of each display mode. In either display mode, the available items are the same.

Reference

• For details on specifying the display mode, refer to page 3-7.

1.3.1 [Tab Function Display]

In the default setting, the screen is displayed in [Tab Function Display].

In [Tab Function Display], click the desired icon to change the menu.

🍇 Administrator						Logout	?	^
	Ready to Scan							
	In Menu (Admin Mode)			2			C	
Meter Count	Total Counter							
ROM Version	Total	0						
Import/Export	Total Duplex	0						
Importexport	# of Originals	0						
Status Notification Setting	# of Used Paper	0						
Total Counter Notification Setting	Copy Counter							
Nato/Time Setting		Full Color	Black	Single Color	2 Color	Total		~

1.3.2 [List Function Display]

In [List Function Display], change the menu from the list box. Select the desired menu in the drop-down list, click [Display].

	🌆 Administrator				Logout	?	^		
		Ready to Scan				I	~		
Maintanana	Display]	To Main Me		
Maintenance ▼ Maintenance System Settings		otal Counter					TO Main Me	mu	
Security		Total	0						
User Auth/Account Track		Total Duplex	0						
Network Box		# of Originals	0						
Print Setting Store Address Fax Settings		# of Used Paper Copy Counter	0						
Wizard			Full Color	Black	Single	2 Color	Total		~

Main Menu

If you log in to the administrator mode while [List Function Display] is selected, the main menu appears first.

The main menu displays a list of all the menus in the administrator mode. Select the desired setting in the drop-down list, and click [Display] to display each setting screen.

Reference

• Click [To Main Menu] on each setting screen of the administrator mode to return to the main menu.

	🌆 Administrator		.ogout 🤶 🚬
	Ready to Scan		
	Ready to Print		S
Maintenance		Box	
Maintenance related settings Confirm ROM version, Import		User Box creation and operation. Document can be printed and routed from the Use	r Box.
Meter Count	V Display	Open User Box 🛛 💽 Display	
System Settings		Print Setting	
Initial settings. User Box and Stamp settings	5.	Print Settings Fonts and XPS Settings.	
Machine Setting	Display	Basic Setting 🗾 Display	
Security		Store Address	
Security related settings. Administrator Password and Settings.	Address Permission	Destination (addresses) registration. E-mail, Subject and Prefix/Suffix Settings.	
PKI Settings	V Display	Address Book 🔽 Display	
User Auth/Account Trac	ĸ	Fax Settings	
User Authentication and Acco External Server and Group Us		Fax Settings. Fax Functions and Fax Report Settings.	
General Settings	Display	Header/Footer Position 🛛 🖌 Display	
Network		Wizard	
Network-related Settings. E-mail and Open API Setting:	3.	Wizard Setup is performed. The setting can be easily performed by following th outlined procedures.	e



2 Connecting to network

2.1 Basic settings for TCP/IP communication

Configure settings to use this machine in the TCP/IP network environment.

These settings are required before using this machine via the network.

NOTICE

To enable changed network settings, turn the main power of this machine off and on again.

To turn the main power switch off and on, first turn the main power off, and then turn it on after 10 or more seconds have elapsed. Not doing so may result in an operation failure.


[TCP/IP Settings]

In [Administrator Settings] on the Control Panel, select [Network Settings] -> [TCP/IP Settings].

Reference

For details on how to go to the [Network Settings] screen, refer to page 15-3.

For details on the menu structure of the [Network Settings] in the **Control Panel**, refer to page 15-5. For details on how to use this machine in the IPv6 environment, refer to page 2-4.

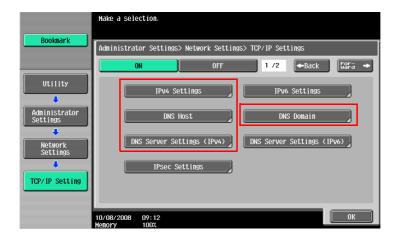

Item	Description	Prior check
[ON]/[OFF]	Select [ON].	

[IPv4 Settings]

Item	Description	Prior check
[IP Application Method]	Select whether to automatically obtain the IP address or directly specify it.	IP application meth- od
[Auto Input]	To automatically obtain the IP address, select the auto- matic retrieval method.	
[IP Address]	To directly specify the IP address, enter the IP address of this machine.	IP address of this machine
[Subnet Mask]	When directly entering the IP address, configure the sub- net mask of the network to be connected.	Subnet mask of this machine
[Default Gateway]	When directly entering the IP address, specify the default gateway of the network to be connected.	Default gateway of this machine

bizhub C360/C280/C220

[DNS Host]

Item	Description	Prior check
[Dynamic DNS Set- tings]	Select [Enable] when automatically registering the host name specified in [DNS Host Name] with the DNS server that supports the Dynamic DNS function.	Is Dynamic DNS supported?
[DNS Host Name]	Specify the host name of this machine (up to 63 charac- ters).	

[DNS Domain]

Item	Description	Prior check
[Domain Name Auto Retrieval]	Select whether to automatically obtain the domain name. This item is necessary when DHCP is enabled.	Can it be obtained automatically using DHCP?
[Search Domain Name Auto Re- trieval]	Select whether to automatically obtain the search domain name. This item is necessary when DHCP is enabled.	Can it be obtained automatically using DHCP?
[Default DNS Do- main Name]	When not automatically obtaining the domain name, specify the name of the domain that contains this machine (up to 255 characters, including the host name).	Default Domain Name
[DNS Search Do- main Name 1] to [DNS Search Do- main Name 3]	Specify the DNS search domain name (up to 253 charac- ters).	

[DNS Server Settings (IPv4)]

Item	Description	Prior check
[DNS Server Auto Obtain]	Select whether to automatically obtain the DNS server ad- dress. This item is necessary when DHCP is enabled.	Can it be obtained automatically using DHCP?
[Priority DNS Serv- er]	Enter the address of the primary DNS server if you do not obtain the DNS server address automatically.	Server address
[Secondary DNS Server 1] to [Sec- ondary DNS Server 2]	Specify the addresses of the secondary DNS servers.	Server address

[Device Setting]

In [Administrator Settings] on the **Control Panel**, select [Network Settings] >> [Forward] >> [Detail Settings] >> [Device Setting].

	Specify the network speed.	
Bookmark	Administrator Settings> Detail	Settings> Device Setting
	MAC Address	Network Speed
Utility		Auto Setting
Administrator Settings		10Hbps Half Duplex 10Hbps Full Duplex
Network Settings	LLTD Setting	100Mbps Half Duplex Full Duplex
+	Enable	16bps Full Duplex
Detail Settings	Disable	TODAS LULL DUPLEN
Device Setting	10/08/2008 09:14 Menory 100%	ОК

Item	Description	Prior check
[MAC Address]	Displays the MAC address of the network interface card of this machine.	
[Network Speed]	Specify the network speed.	

2.2 Communicating using IPv6

Configure settings for IPv6 communication.

These settings are required if you want use this machine with an IPv6 address assigned. You can use IPv6 together with IPv4, but you cannot use IPv6 alone.

When you use this machine in an IPv6 environment, the following restrictions apply.

- Printing with SMB is not supported (but it is allowed for the Direct Hosting service).
- No scanned data can be sent with SMB (but it is allowed for the Direct Hosting service).
- SMB browsing is not supported (available for Publication Service).
- NTLM authentication is not supported (but it is allowed for the Direct Hosting service).
- You cannot use the IP filtering function.
- You cannot use the installer of the printer driver (available for Windows Vista or Server 2008).
- You cannot display PageScope Web Connection in Flash.

Reference

For details on the Direct Hosting service, refer to the sections listed below.

"Sending scanned data to a computer on network" (p. 4-2)

"Print (SMB)" (p. 5-4)

"Restricting users of this machine (Windows domain or workgroup)" (p. 7-15)

bizhub C360/C280/C220

In the administrator mode of **PageScope Web Connection**, select [Network] → [TCP/IP Setting] → [TCP/IP Setting].

	Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	2
Network V Dis	splay	E To Main Menu
▼ TCP/IP Setting	TCP/IP Setting	
► TCP/IP Setting	* is reflected after reset.	
► IP Filtering		
▶ IPsec	TCP/IP* (Turn the main switch OFF, and the	ON v
E-mail Setting	Network Speed	Auto
LDAP Setting	IP Address Setting Method*	Auto Setting
► IPP Setting		F DHCP*
FTP Setting		□ BootP* ARP/PING*
SNMP Setting		AutolP*
SMB Setting	IP Address	0.0.0.0
SMB Setting Web Service Settings	Subnet Mask	0.0.0.0
	Default Gateway	0.0.0.0
 Bonjour Setting Notificare Setting 	IPv6	ON 🔽
NetWare Setting AppleTalk Setting	Auto IPv6 Setting*	ON M
AppleTalk Setting	DHCPv6 Setting	ON 🛩
Network Fax Setting	Link-Local Address Global Address	
WebDAV Settings	Prefix Length	
OpenAPI Setting		
TCP Socket Setting	Gateway Address	
IEEE802.1X Authentication Setting	RAW Port Number	
▶ LLTD Setting	Port 1	9100 (1-65535)
Bluetooth Setting	Port 2	9112 (1-65535)
•	Port 3	9113 (1-65535)
	Port 4	9114 (1-65535)
	Port 5	9115 (1-65535)
	Port 6	9116 (1-65535)
	DNS Host DNS Host Name	
	Dynamic DNS Setting	Disable 🗸
	LLMNR Setting	Enable V
	DNS Domain Name Setting	
	DNS Domain Auto Obtain	Enable 💌
	DNS Search Domain Name Auto Retrieval	Enable 💌
	DNS Default Domain Name	
	DNS Search Domain Name1	
	DNS Search Domain Name2	
	DNS Search Domain Name3	
	DNS Server Setting(IPv4)	
	DNS Server Auto Obtain	Enable 💌
	Primary DNS Server	0.0.0.0
	Secondary DNS Server1	0.0.0.0
	Secondary DNS Server2	0.0.0.0
	DNS Server Setting(IPv6) DNS Server Auto Obtain	Enable 💙
	Primary DNS Server	
	Secondary DNS Server1	
	Secondary DNS Server2	
		·
	SLP Setting	
	SLP	Enable 💌
	LPD Setting	Early In
	LPD	Enable 💙
		OK Cancel

Item	Description	Prior check
[TCP/IP Setting]	Select [ON].	
[IPv6]	Select [ON].	
[Auto IPv6 Set- tings]	To obtain the IPv6 address automatically, select [ON].	Do you obtain the IPv6 address auto- matically?

Item	Description	Prior check
[DHCPv6 Setting]	To use DHCPv6 to obtain the IPv6 address, select [ON].	Do you use DHCPv6?
[Link-Local Ad- dress]	Displays the link-local address generated from the MAC address.	
[Global Address]	If you do not obtain the IPv6 address automatically, enter the IPv6 global address.	IPv6 address
[Prefix Length]	If you do not obtain the IPv6 address automatically, enter the prefix length of the IPv6 global address.	Prefix Length
[Gateway Address]	If you do not obtain the IPv6 address automatically, enter the IPv6 gateway address.	Gateway Address
[DNS Server Set- ting (IPv6)]	Configure the DNS server settings as necessary.	
[DNS Server Auto Obtain]	Select whether to obtain the DNS server address auto- matically. This setting is required if DHCPv6 is enabled.	Can be obtained au- tomatically with DHCPv6?
[Priority DNS Serv- er]	Enter the address of the primary DNS server if you do not obtain the DNS server address automatically.	Server address
[Secondary DNS Server 1] to [Sec- ondary DNS Server 2]	Specify the addresses of the secondary DNS servers.	Server address




3 Using PageScope Web Connection

3.1 Using PageScope Web Connection

Configure settings to use PageScope Web Connection.

PageScope Web Connection is a device management utility that is supported by the HTTP server built into this machine. Using a Web browser on a computer connected to the network, you can change machine settings and check the status of the machine. You can also handle some settings, which are to be configured on the **Control Panel** of this machine, through your computer.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

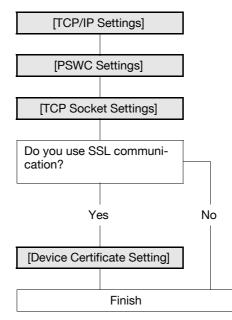

3.1.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

bizhub C360/C280/C220

3.1.2 [PSWC Settings]

In [Administrator Settings] on the Control Panel, select [Network Settings] -> [HTTP Server Settings].

Reference

For details on how to go to the [Network Settings] screen, refer to page 15-3.




Item	Description	Prior check
[PSWC Settings]	Select [ON].	

3.1.3 [TCP Socket Settings]

In the administrator mode of PageScope Web Connection, select [Network] → [TCP Socket Settings].

Reference

For details on how to log in to the administrator mode of PageScope Web Connection, refer to page 3-5.

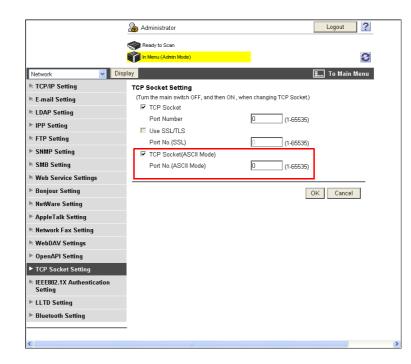

Item	Description	Prior check
[TCP Socket (ASCII Mode)]	Select this check box to use PageScope Web Connec- tion in the flash format.	

Item	Description	Prior check
[Port Number (AS- CII Mode)]	Enter a port number.	

3.1.4 [Device Certificate Setting]

Configure settings for encrypting communication from a computer to this machine using SSL. For details, refer to page 8-2.

3.2 Logging in to the administrator mode

To configure this machine with **PageScope Web Connection**, log in to the administrator mode. The following shows a procedure to log in to the administrator mode.

Reference

- If you are already logging in to the administrator mode, you cannot use the **Control Panel** of this machine to perform operations.
- Depending on the status of this machine, you may not be able to log in to the administrator mode.
- If you access PageScope Web Connection while User Authentication or Account Track is not enabled, you will see the screen displayed when you logged in as the public user. To log in as an administrator, log out from the public user mode once.
- 1 In the login page, select [Administrator] and click [Login].
 - → If necessary, select the [Language] and [View Mode].
 - → The flash display can be restricted if necessary. For details on configuring the setting, refer to page 3-11.
 - → Selecting the [Display dialog box in case of warning] check box displays a dialog box when a warning has occurred during operation.

Login Public User Registered User User Name Password Administrator View Mode Flash Player is necessary to see in Flash form. Administrator User Assist Display dialog box in case of warning. Starting-up Data Management Utility Flash Player is required to use the Data Management Utility. Starting-up Data Management Utility Flash Player is required to use the Data Management Utility. Manage Copy Protect Data Manage Stamp Data Manage Font/Macro (*1)	Language	Panel Language (Pa	nel Language) 💌
User Name Password C Administrator View Mode C Flash G HTML Flash Player is necessary to see in Flash form. Market Assist User Assist Display dialog box in case of warning. User Assist Starting-up Data Management Utility Flash Player is required to use the Data Management Utility. Manage Copy Protect Data Manage Stamp Data	Login	C Public User	
Password C Administrator View Mode C Flash Flash Player is necessary to see in Flash form. User Assist D isplay dialog box in case of warning. User Assist D isplay dialog box in case of warning. Lter Starting-up Data Management Utility Flash Player is required to use the Data Management Utility. Smanage Copy Protect Data Starting Stamp Data		 Registered Use 	r
C Administrator View Mode C Flash Flash Player is necessary to see in Flash form. C Administrator User Assist D isplay dialog box in case of warning. User Assist Starting-up Data Management Utility Flash Player is required to use the Data Management Utility. Manage Copy Protect Data Manage Stamp Data		User Name	
View Mode C Flash C HTML Flash Player is necessary to see in Flash form. Image ADDR: FLASHPLAYER ADD		Password	
		C Administrator	
User Assist	View Mode	C Flash	@ HTML
Starting-up Data Management Utility Flash Player is required to use the Data Management Utility.		Flash Player is nec	essary to see in Flash form. Ger ADOBE' FLASHPLAYER
Starting-up Data Management Utility Flash Player is required to use the Data Management Utility. Manage Copy Protect Data Anage Stamp Data	User Assist	Display dialog b	ox in case of warning.
Flash Player is required to use the Data Management Utility. Manage Copy Protect Data Manage Stamp Data			Log
Manage Copy Protect Data Seminary Copy Protect Data	Starting-L	ıp Data Management I	Jtility
Manage Stamp Data	Flash Play	er is required to use the	Data Management Utility.
	Manag	e Copy Protect Data	
✓■Manage Font/Macro (*1)		e Stamp Data	
	Manag	e Font/Macro (*1)	

- 2 Enter the administrator password of this machine.
 - → If an incorrect password is entered the specified number of times while [Security Settings] >> [Security Details] >> [Prohibited Functions When Authentication Error] is set to [Mode 2] in [Administrator Settings] of the Control Panel, it will no longer be possible to log in to the administrator mode.

-3

→ You can specify whether to use Popup Help in [Help Display Setting]. For details, refer to page 3-8.

Select Login	
	Administrator (Admin Mode)
	C Administrator (User Mode)
Password	
Help Display Sett	ing
	a network-only function.
On Mouse	OFF 👻
On Focus	OFF 🛩

3 Click [OK].

The administrator mode window appears.

	🍌 Administrator						Logout
	Ready to Scan						
	in Menu (Admin Mode))					
Y MAR MAN							
Meter Count	Total Counter						
	Total	0					
ROM Version	Total Duplex	0			-		
Import/Export	# of Originals	0			-		
Status Notification Setting	# of Used Paper	0			-		
Total Counter Notification	Copy Counter						
Setting Date/Time Setting		Full Color	Black	Singl Color		Color	Total
	Total	0	0	0	0		0
Timer Setting	Large Size	0	0	0	0		0
Network Error Code Display Setting	Print Counter						
Reset		Full Color	Bla	:k	2 Colo		Total
	Total	0	0		0		0
License Settings	Large Size	0	0		0	0	0
Edit Font/Macro	Scan / Fax Counter	r					
Job Log		Print (Full Colo	n	Print (Black)		Scan	IS
	Total	0		0		6	
	Large Size	0		0		0	
					_	_	
	Fax TX	0			_		
	Fax RX						
	Total (Copy + Print) Full Color		Black		2 Co	lor
	Total	0		0		0	
	Paper Size / Type (Counter					
					Coun	ıt	
	Paper Size	Paper					
	Paper Size 11" x 17"	Not Spe			0		
			cified		0		
	11" x 17" 8 1/2" x 14" 8 1/2" x 11"	Not Spe	cified cified		0		
	11" x 17" 8 1/2" x 14" 8 1/2" x 11" 5 1/2" x 8 1/2"	Not Spe Not Spe Not Spe Not Spe	cified cified cified cified		0		
	11" x 17" 8 1/2" x 14" 8 1/2" x 11" 5 1/2" x 8 1/2" A3	Not Spe Not Spe Not Spe Not Spe Not Spe	cified cified cified cified cified		0 0 0 0 0		
	11" x 17" 8 1/2" x 14" 8 1/2" x 11" 5 1/2" x 8 1/2" A3 B4	Not Spe Not Spe Not Spe Not Spe Not Spe Not Spe	cified cified cified cified cified cified		0 0 0 0 0 0 0 0 0		
	11" x 17" 8 1/2" x 14" 8 1/2" x 11" 5 1/2" x 11" A3 B4 B5	Not Spe Not Spe Not Spe Not Spe Not Spe Not Spe Not Spe	cified cified cified cified cified cified cified		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		
	11" × 17" 8 1/2" × 14" 8 1/2" × 11" 5 1/2" × 11" A3 B4 B5 A4	Not Spe Not Spe Not Spe Not Spe Not Spe Not Spe Not Spe	cified cified cified cified cified cified cified cified		0 0 0 0 0 0 0		
	11" x 17" 8 1/2" x 14" 8 1/2" x 11" 5 1/2" x 11" A3 B4 B5	Not Spe Not Spe Not Spe Not Spe Not Spe Not Spe Not Spe	cified cified cified cified cified cified cified cified cified		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		

3.3 Specifying the display mode of the administrator mode

You can select the display mode of the **PageScope Web Connection** administrator mode from [Tab Function Display] or [List Function Display].

[Display Setting]

In the administrator mode of PageScope Web Connection, select [System Settings] >> [Display Setting].

	Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	2
System Settings 🛛 🔽 Dis	play	E To Main Menu
Machine Setting	Display Setting	
Register Support Information	Administrator Display Mode	List Function Display 💌
Network TWAIN		
🗏 User Box Setting		OK Cancel
🕅 Stamp Settings		
Blank Page Print Settings		
Skip Job Operation Settings		
▶ Flash Display Setting		
System Connection Setting		
▶ Display Setting		
Outline PDF Setting		

Item	Description
[Administrator Display Mode]	Select the display mode of the administrator mode.

[Tab Function Display]

	🌆 Administrator					Logout	?	~
	Ready to Scan							
	In Menu (Admin Mode)						3	
Meter Count	Total Counter							
ROM Version	Total	0						
	Total Duplex	0						
Import/Export	# of Originals	0						
Status Notification Setting	# of Used Paper	0						
Total Counter Notification Sotting	Copy Counter		-					
Setting Nate/Time Setting		Full Color	Black	Single Color	2 Color	Total		~

[List Function Display]

		& Administrator					Logout	?
	(ready to Scan						
	l	In Menu (Admin Mode)					[C
Maintenance	- Displ	ay				I	To Main Me	enu
Maintenance System Settings		Total Counter						_
Security		Total	0					
User Auth/Account Track		Total Duplex	0					
Network Box		# of Originals	0					
Print Setting	g	# of Used Paper	0					
Store Address Fax Settings	h	Copy Counter						
Wizard			Full Color	Black	Single	2 Color	Total	8

Reference

This manual shows an example where the [List Function Display] is set as the display mode.

3.4 Using Popup Help

You can use Popup Help on the [Network] page of PageScope Web Connection.

Selecting a specific item in a page using On-Mouse or On-Focus (click) displays the explanation of the item in a popup window, so you can specify each item while checking its meaning.

Reference

- Help can be displayed only for network settings.
- Popup help can be displayed using two methods: On-Mouse and On-Focus (click). Whether to use On-Mouse or On-Focus can be specified individually.

[Help Display Setting]

- · · · ·		
Select Login	 Administrator (Admin Mode) Administrator (User Mode) 	
Password		
Help Display Se Help Display is On Mouse On Focus	tting a network-only function. OFF v	

Item	Description
[On Mouse]	Select whether to display popup help using On-Mouse. To use On-Mouse, place the mouse over the desired setting item; its explana- tion appears on the right of the page.
[On Focus]	Select whether to display popup help using On-Focus. To use On-Focus, click the desired setting item entry area or option; its expla- nation appears on the right of the page.

Popup Help Display Example

	& Administrator	L	ogout	^
Network V Dis	Ready to Scan in Menu (Admin Mode) splay	.	💽 To Main Menu	
► TCP/IP Setting	TCP Socket Setting			
⊫ E-mail Setting	(Turn the main switch OFF, and then ON, wh	en changing TCP Socket.)	TCP Socket Setting	
▶ LDAP Setting	Port Number	0 (1-65535)	Configure TCP Socket settings.	
▶ IPP Setting		0 (1-65635)	Configure these settings to use an application that links to the machine.	
▶ FTP Setting	Port No. (SSL)	0 (1-65535)	To make changes to the settings take effect, the	
► SNMP Setting	TCP Socket(ASCII Mode)		power of the machine must be turned OFF and then ON.	
▶ SMB Setting	Port No. (ASCII Mode)	0 (1-65535)		1
▶ Web Service Settings				
▶ Bonjour Setting		OK	Cancel	
⊫ NetWare Setting				
► AppleTalk Setting				
Network Fax Setting				~

3.5 Configuring Settings for each Purpose via Wizard

[Wizard] allows you to easily configure settings for using the following functions according to the instructions shown by a wizard.

[TX Setting for scan documents.]

- [Transmit the scanned data via E-mail]
- [Transmit the scanned data via E-mail (attach Digital Signature)]
- [Transmit the scanned data via E-mail (Public Key Encryption)]

[Network print settings.]


- [LPR Print]
- [Print using RAW port]
- [Print using SMB]

[Restrict users from using this device.]

- [Do Not Authenticate]
- [User Authentication Only]
- [Account Track Only]
- [User Authentication & Account Track]
- [External Authentication Server]

3.5.1 Screen Components

The [Wizard] page has the following components.

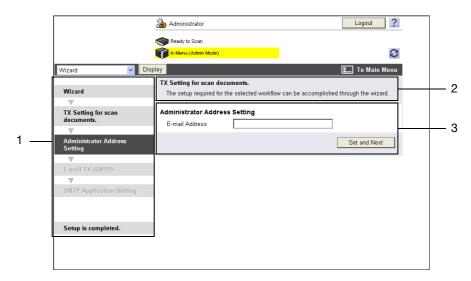

No.	Item	Description
1	Flow	Displays a setting flow to use the desired function. The currently enabled items are displayed in dark gray.
2	View Purpose	Displays the selected purpose.
3	View Settings	Displays settings.

3.5.2 [Wizard]

In the administrator mode of **PageScope Web Connection**, select [Wizard]. Select the desired purpose, and configure its setting according to the instructions shown by the wizard.

	Administrator
	Ready to Scan
	🗊 In Menu (Admin Mode)
Wizard 💌	Display To Main Menu
Wizard	Wizard The setup required for the selected workflow can be accomplished through the wizard.
	Wizard
Setup is completed.	The setup is performed according to the procedure outlined in the operation objective. Please select a setting.
	C Network print settings.
	C Restrict users from using this device.
	Next

Reference

- To return to the previous setting item during the setting procedure, click the desired setting item using Flow. If you return to the previous item, perform re-configuration from its settings.
- To end the setting procedure, click [Setup is completed.] in Flow.

3.6 Disabling Flash View

You can disable the flash view in PageScope Web Connection.

Reference

- Disabling the flash view fixes the view mode to the HTML format.
- Disabling the flash view invalidates Data Management Utility.

[Flash Display Setting]

In the administrator mode of **PageScope Web Connection**, select[System Settings] >> [Flash Display Setting].



Item	Description
[Flash Display]	To disable the flash view, select [Restrict].

3.7 Specifying the Automatic Logout Time

Configure time before auto logout from the administrator or user mode of **PageScope Web Connection**. If no operation is performed for a predefined length of time, the user will automatically be logged out.

[Auto Logout]

In the administrator mode of PageScope Web Connection, select [Security] ► [Auto Logout].

	🌆 Administrator		Logout ?
	Ready to Scan		
	n Menu (Admin Mode)		8
Security 🔽 D	lisplay		🚛 To Main Menu
▶ PKI Settings	Auto Logout		
Certificate Verification	Admin. Mode Logout Time	10 🛩 Minute	
Settings	User Mode Logout Time	60 🗹 Minute	
Address Reference Setting			
Restrict User Access			OK Cancel
Copy Security			
► Auto Logout			

Item	Description
[Admin. Mode Logout Time]	Select the time period before the user will automatically be logged out when no operations have been performed in the administrator mode.
[User Mode Logout Time]	Select the time period before the user will automatically be logged out when no operations have been performed in the user mode.



4 Scanning

4.1 Sending scanned data to a computer on network

Configure settings to send scanned data to a computer on network (SMB transmission).

Before SMB transmission, configure settings to share files in Windows using the computer that receives data.


If Samba is installed, data can be transmitted to a computer that is equipped with a non-Windows OS. SMB transmission is also available for the CIFS service (TCP/IP) that is running on the NetWare server.

To specify a computer over a router using the Windows name (NetBIOS name), use the WINS server.

To perform SMB sending in the IPv6 environment, enable the direct hosting service. Enabling the direct hosting service allows you to specify the destination with the IPv6 address or computer name (host name). When specify the destination with the computer name (host name), use the DNS server to obtain the IPv6 address.

To send data to a computer with Windows Vista/Server 2008 installed, you can perform name resolution using the LLMNR function even if DNS server is not present. To perform the name resolution especially in the IPv6-only communication environment under Windows Vista/Server 2008, it will be convenient to enable the LLMNR function.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

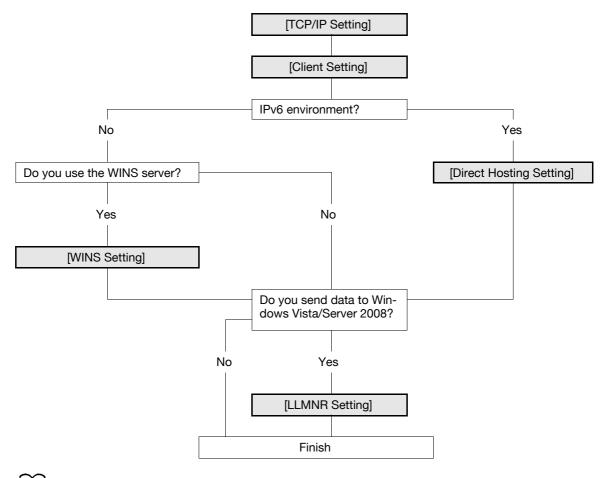

Reference

For details on how to register the SMB address, refer to page 11-7.

For details on SMB file sending, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

4.1.1 [TCP/IP Setting]


Configure settings to use this machine in the TCP/IP network environment.

• To specify the destination computer with the computer name (host name) for SMB transmission in IPv6 environment, prepare a DNS server and configure DNS settings in this machine.

For details, refer to page 2-2.

4.1.2 [Client Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] **>>** [SMB Setting] **>>** [Client Setting].

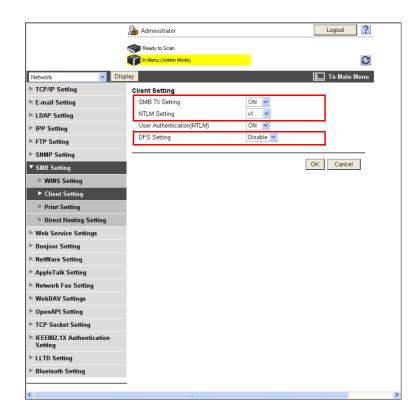

Item	Description	Prior check
[SMB TX Setting]	Select [ON].	
[NTLM Setting]	Specify the NTLM version. To perform SMB transmission for Windows sharing (Mac OSX) or Samba (Linux/Unix), select [v1]. To perform SMB transmission for Windows 98SE or Win- dows Me, select [v1/v2] or [v1].	OS of destination computer
[DFS Setting]	To perform SMB transmission in a DFS (Distributed File System) environment, select [Enable].	DFS environment?

4.1.3 [WINS Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] **>>** [SMB Setting] **>>** [WINS Setting].

	归 Administrator		Logout 🤶
	ready to Scan		
	👔 In Menu (Admin Mode)		2
Network 🔽 🖸)isplay		E To Main Menu
► TCP/IP Setting	WINS Setting		
⊫ E-mail Setting	WINS	ON 🛩	
▶ LDAP Setting	Auto Obtain Setting	Enable 👻	
▶ IPP Setting	WINS Server Address1	0.0.0.0	
▶ FTP Setting	WINS Server Address2	0.0.0.0	
► SNMP Setting	Node Type Setting	B Node 🛩	
▼ SMB Setting			
► WINS Setting			OK Cancel
Client Setting			
▶ Print Setting			
Direct Hosting Setting			
▶ Web Service Settings			
Bonjour Setting			
▶ NetWare Setting			
AppleTalk Setting			
Network Fax Setting			
NebDAV Settings			
OpenAPI Setting			
TCP Socket Setting			
IEEE802.1X Authentication Setting			
▶ LLTD Setting			
Bluetooth Setting			
<			

Item	Description	Prior check
[WINS]	To use the WINS server, select [ON].	
[Auto Obtain Set- ting]	To automatically obtain the WINS server address, select [Enable]. This item is necessary when DHCP is enabled.	Can it be obtained automatically using DHCP?
[WINS Server Address1] to [WINS Server Address2]	Enter the WINS server address. Format: *.*.* (Asterisk * can be 0 to 255)	Server address
[Node Type Set- ting]	 Specify the name resolution method. [B Node]: Query by broadcast [P Node]: Query the WINS server [M Node]: Query by broadcast, and then query the WINS server [H Node]: Query the WINS server, and then query by broadcast 	

4.1.4 [Direct Hosting Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] → [SMB Setting] → [Direct Hosting Setting].



Item	Description	Prior check
[Direct Hosting Setting]	To use IPv6 addresses for communication, select [ON].	IPv6 environment?

4.1.5 [LLMNR Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] **>>** [TCP/IP Setting] **>>** [TCP/IP Setting].

Item	Description	Prior check
[LLMNR Setting]	To perform name resolution to send data to a computer with Windows Vista/Server 2008 installed in the environ- ment where the DNS server is not running, select [Enable]. To perform the name resolution especially in the IPv6-only communication environment, enable this setting.	 Is the computer Windows Vista/ Server 2008? Is the DNS server not used?

4.2 Sending scanned data to your computer (Scan to Home)


Configure settings to send scanned data to your computer.

This function is available when the user's Home folder position is registered after user authentication has been performed with Active Directory.

If the Home folder of the user who logged in is registered in Active Directory, [Home] is displayed in the address book. Specify [Home] for a destination to enable you to easily send data to your Home folder.

To authenticate the user to send data to the Home folder, use the [User Name] and [Password] that were used in Active Directory authentication when you logged in to this machine.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

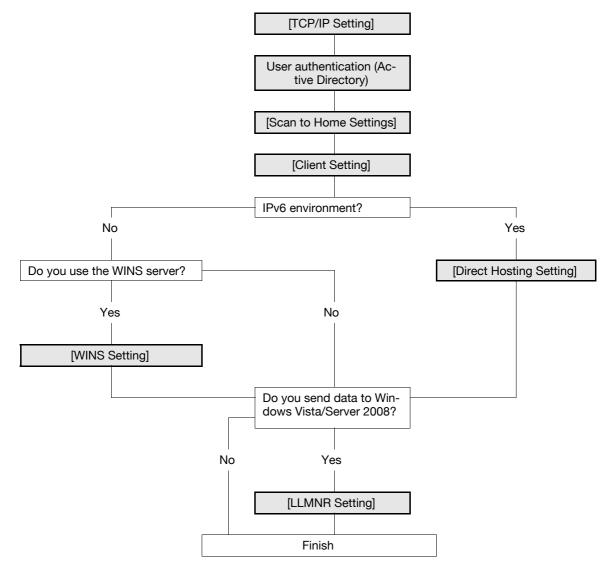

Reference

- To use the Scan to Home function, the Home folder of the user must be registered in Active Directory. Also, the user's E-mail address or fax number must be registered.
- When you register the location of the Home folder in Active Directory, use uppercase letters to specify a computer that has the Home folder using the NetBIOS name.
- For details on how to send a file to the Home folder using SMB, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

4.2.1 [TCP/IP Setting]

Configure settings to use this machine in the TCP/IP network environment.

• To specify the destination computer with the computer name (host name) for SMB transmission in IPv6 environment, prepare a DNS server and configure DNS settings in this machine.

For details, refer to page 2-2.

4.2.2 User authentication (Active Directory)

Configure settings to restrict users who use this machine with Active Directory.

For details, refer to page 7-10.

4.2.3 [Scan to Home Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] ► [Scan to Home Settings].

	Administrator		Logout ?
	Ready to Scan		
	👘 In Menu (Admin Mode)		S
User Auth/Account Track 🔽 Dis	play		E To Main Menu
General Settings	Scan to Home Settings		
User Authentication Setting	Allows login users to scan documen	ts to their Home Folder.	
Account Track Settings	Scan to Home Settings	Enable 💙	
External Server Settings			
▶ Public User Box Setting			OK Cancel
User/Account Common Setting			
Scan to Home Settings			
Scan to Authorized Folder Settings			

Item	Description	Prior check
[Scan to Home Settings]	Select [Enable].	

4.2.4 [Client Setting]

Configure SMB client settings. For details, refer to page 4-3.

4.2.5 [WINS Setting]

To perform SMB transmission via routers, configure the WINS server settings. For details, refer to page 4-4.

4.2.6 [Direct Hosting Setting]

To perform SMB transmission in an IPv6 environment, enable the Direct Hosting service. For details, refer to page 4-5.

4.2.7 [LLMNR Setting]

To perform name resolution in the environment configured to communicate with Windows Vista/Server 2008, and where the DNS server is not running, enable the LLMNR function.

For details, refer to page 4-5.




Configure settings to send scanned data to the specified E-mail address as an attachment file.

These settings are available when the SMTP server supports SMTP over SSL or Start TLS. SSL/TLS enables data encryption, assuring a secure communication between this machine and the SMTP server.

If SMTP authentication is requested from the SMTP server, configure its settings.

If POP before SMTP authentication is requested from the SMTP server, configure its settings. These settings can be combined when the POP server supports POP over SSL or APOP authentication.

Use the following flowchart to configure settings.

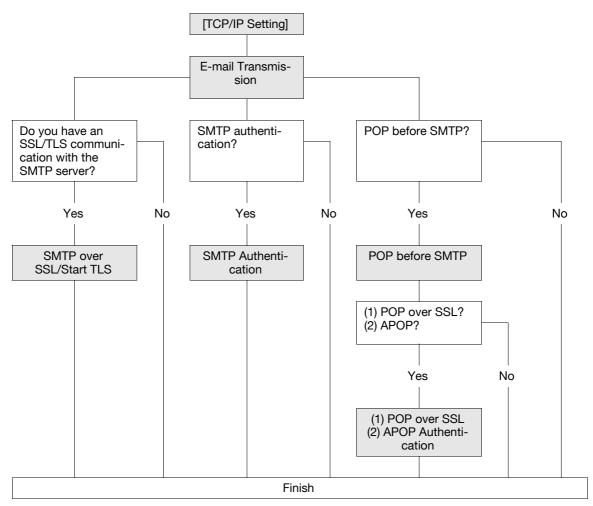

Reference

For details on how to register E-mail addresses, refer to page 11-7.

For details on how to send a file by E-mail, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

4.3.1 [TCP/IP Setting]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

4.3.2 E-mail Transmission

[E-mail TX (SMTP)]

In the administrator mode of **PageScope Web Connection**, select [Network] → [E-mail Setting] → "E-mail Transmission (SMTP)".

	& Administrator	Logout
	Ready to Scan	
	n Menu (Admin Mode)	
Network V Dis	play	I To Main M
► TCP/IP Setting	E-mail TX (SMTP)	
▼ E-mail Setting	E-mail TX Setting	
E-mail RX (POP)	Scan to E-mail	ON 💌
► E-mail TX (SMTP)	E-mail Notification	ON 🛩
S/MIME	Total Counter Notification	ON 💌
	SMTP Server Address	🗆 Please check to enter host name
LDAP Setting		192.168.1.100
▶ IPP Setting	Use SSL/TLS	OFF 🗸
▶ FTP Setting	Port Number	25 (1-65535)
SNMP Setting	Port No.(SSL)	465 (1-65535)
▶ SMB Setting	Certificate Verification Level Settings	
▶ Web Service Settings	Validity Period	Confirm
Bonjour Setting	CN	Do Not Confirm 🛩
▶ NetWare Setting	Key Usage	Do Not Confirm 🛩
AppleTalk Setting	Chain	Do Not Confirm 🛩
	Expiration Date Confirmation	Do Not Confirm 🛩
Network Fax Setting	Connection Timeout	60 v sec.
NebDAV Settings	Max Mail Size	No Limit 🛩
OpenAPI Setting	Server Capacity	Mbyte(1-100)
TCP Socket Setting	Admin. E-mail Address	ad@test.local
► IEEE802.1X Authentication	Device Mail Address	
Setting	Authentication Setting POP before SMTP	OFF V
LLTD Setting	POP before SMTP Time	
Bluetooth Setting	SMTP Authentication	5sec. (0-60)
	User ID	
	Password is changed.	
	Password	
	Domain Name	
	Authentication Setting	Set Value
	Binary Division	
	Divided Mail Size	Kbyte
		(100-15000; Step100)
		OK Cancel

Item	Description	Prior check
[E-mail TX (SMTP)]	Select the [E-mail TX (SMTP)] check box.	
[Scan to E-mail]	Select [ON].	
[SMTP Server Ad- dress]	Enter the SMTP server address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Port Number]	Enter a port number. Default setting: 25	Server port number
[Connection Time- out]	Specify the timeout period for a communication with a server.	
[Max Mail Size]	Select whether to limit the size of an E-mail to be sent.	
[Server Capacity]	Enter the SMTP server capacity. A mail that exceeds the upper limit of the server capacity will be discarded. If an E-mail is divided, this setting is made invalid.	Server reception limit
[Administrator E- Mail Address]	Displays the E-mail address of the administrator.	

Item	Description	Prior check
[Binary Division]	Select this check box to divide an E-mail. If the E-mail software that received an E-mail does not have a restoration function, you may not be able to read the E-mail.	Restoration function of E-mail software
[Divided Mail Size]	Enter the divided mail size to divide an E-mail.	Server reception limit

[Administrator E-Mail Address]

In the administrator mode of PageScope Web Connection, select [System Settings] >> [Machine Setting].

	Administrator	Logout ?
	Ready to Scan	
	in Menu (Admin Mode)	3
System Settings 💽 Disp	lay	🚛 To Main Menu
Machine Setting	Machine Setting	
Register Support Information	Device Location	
Network TWAIN	Administrator Registration	
User Box Setting	Administrator Name	
Stamp Settings	E-mail Address	
▶ Blank Page Print Settings	Extension No. Input Machine Address	
Skip Job Operation Settings	Device Name	
▶ Flash Display Setting	E-mail Address	
System Connection Setting		
Display Setting		OK Cancel
Outline PDF Setting		OK Caller

Item	Description	Prior check
[E-mail Address]	Enter the administrator's E-mail address (up to 128 char- acters). If the administrator's E-mail address is omitted, you will not be able to send an E-mail. Usually, the administrator's E-mail address is set to the From address of the E-mail to be sent from this machine. To enable user authentication, the user's E-mail address is set to the From address. However, when the user's E- mail address is not registered or S/MIME is used to send an E-mail, the administrator's E-mail address is set to the From address. If [Security]→[Restrict User Access]→[Changing the "From" Address] is set to [Allow], the user can change the From address before sending an E-mail.	E-mail address of the administrator

4.3.3 SMTP over SSL/Start TLS

[E-mail TX (SMTP)]

In the administrator mode of **PageScope Web Connection**, select [Network] → [E-mail Setting] → [E-mail TX (SMTP)].

Item	Description	Prior check
[Use SSL/TLS]	To encrypt a communication between this machine and the SMTP server using SSL/TLS, select [SMTP over SSL] or [Start TLS].	Does the server sup- port SSL or Start TLS?
[Port Number]	Enter a port number if [Start TLS] is selected. Default setting: 25	Server port number
[Port No.(SSL)]	Enter the port number to be used for SSL communication if [SMTP over SSL] is selected. Default setting: 465	Server port number

Δ

Item	Description	Prior check
[Certificate Verifi- cation Level Set- tings]	To verify the server certificate, configure settings to verify the certificate.	
[Validity Period]	Select whether to check that the server certificate is within the validity period.	
[CN]	Select whether to check that the CN of the server certificate matches the server address.	
[Key Usage]	Select whether to check that the server certificate is used according to the purpose approved by the issuer.	
[Chain]	Select whether to check that the server certificate chain (certification path) is correct. The chain is validated by referencing the external certifi- cates managed on this machine. For details, refer to page 8-34.	
[Expiration Date Confirmation]	Select whether to check that the server certificate is within the validity period. The OCSP service and CRL (Certificate Revocation List) are checked in this order when the expiration date of the certificate is checked.	

[Certificate Verification Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].

	🌆 Administrator	Logout ?
	Ready to Scan	
	📦 In Menu (Admin Mode)	2
Security 🔽 Di	splay	E To Main Menu
▶ PKI Settings	Certificate Verification Settings	
Certificate Verification	Certificate Verification Settings	ON 🛩
Settings	Timeout	15 sec. (5-300)
Address Reference Setting	CCSP Service	
Restrict User Access	URL	
Copy Security	Proxy Settings	
Auto Logout	Proxy Server Address	Please check to enter host name.
5	_	
	Proxy Server Port Number	8080 (1-65535)
	User Name	
	🖾 Password is changed.	
	Password	
	Address not using Proxy Server	
		Please check to enter host name.
		OK Cancel
		City Culton

Item	Description	Prior check
[Certificate Verifi- cation Setting]	Select [ON] to verify the server certificate.	
[Timeout]	Enter a timeout period for expiration date confirmation.	Do you confirm the expiration date?
[OCSP Service]	Select this check box to use the OCSP service.	
[URL]	Enter the URL of the OCSP service (up to 511 characters). If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.	

Item	Description	Prior check
[Proxy Server Ad- dress]	To confirm the expiration date via a proxy server, enter its address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the proxy server (up to 63 characters).	
[Address not using Proxy Server]	To enable expiration date confirmation, specify an ad- dress that does not use the proxy server depending on your environment. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	

4.3.4 SMTP Authentication

In the administrator mode of **PageScope Web Connection**, select [Network] → [E-mail Setting] → [E-mail TX (SMTP)].

Item	Description	Prior check
[SMTP Authentica- tion]	Select this check box to perform SMTP authentication. For SMTP authentication, the authentication method with the highest strength that is supported by the SMTP server is automatically selected from Digest-MD5, CRAM-MD5, PLAIN, and LOGIN.	Is SMTP authentica- tion requested by the server?
[User ID]	Enter the user ID for SMTP authentication (up to 255 bytes).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password for SMTP authentication (up to 128 bytes, excluding space and ").	
[Domain Name]	Enter the domain name (realm) for SMTP authentication (up to 255 characters). This setting is required when the authentication method is set to Digest-MD5. If there is only one user domain (realm), you do not need to enter this item because the domain name is reported from the SMTP server at initial communication, and with the domain name, a communication is established auto- matically. If there are two or more user domains (realm), specify the user domain name.	Authentication Meth- od
[Authentication Setting]	For user authentication, select whether to synchronize SMTP authentication with user authentication. Selecting [User Authentication] uses the user name and password for user authentication as those for SMTP au- thentication. Selecting [Set Value] uses the values specified in [User ID] and [Password].	Synchronized with user authentication?

4.3.5 POP before SMTP

[POP before SMTP]

In the administrator mode of PageScope Web Connection, select [Network] >>> [E-mail Setting] >>>> [E-mail TX (SMTP)].

Item	Description	Prior check
[POP before SMTP]	Select [ON] to perform POP before SMTP authentication.	Is POP before SMTP authentication re- quested by the serv- er?
[POP Before SMTP Time]	Enter the period from a time you log in to the POP server to a time you access the SMTP server. If the POP and SMTP servers are in different computers, it will take time to notify the SMTP server that you have logged in to the POP server. Therefore, if a too short time is specified, sending of E-mails may fail.	Are the POP and SMTP servers in dif- ferent computers?

[E-mail RX (POP)]

In the administrator mode of PageScope Web Connection, select [Network] - [E-mail Setting] - [E-mail RX (POP)].

	🌆 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	3
Network 🔽 Di:	splay	🚛 To Main Menu
► TCP/IP Setting	E-mail RX (POP)	
▼ E-mail Setting	E-mail RX Setting	ON 🐱
► E-mail RX (POP)	POP Server Address	Please check to enter host name.
▶ E-mail TX (SMTP)		0.0.0.0
► S/MIME	Login Name	
► LDAP Setting	Password is changed.	
► IPP Setting	Password	
-	APOP Authentication	OFF 💌
▶ FTP Setting	MDN Response	ON 🛩
► SNMP Setting	Connection Timeout	30 💌 sec.
SMB Setting	Port Number	110 (1-65535)
Web Service Settings	Use SSL/TLS	
▶ Bonjour Setting	Port No. (SSL)	995 (1-65535)
▶ NetWare Setting	Certificate Verification Level Settings	
AppleTalk Setting	Validity Period	Confirm
Network Fax Setting	CN	Do Not Confirm 👻
NebDAV Settings	Key Usage	Do Not Confirm 🐱
OpenAPI Setting	Chain	Do Not Confirm 💙
	Expiration Date Confirmation	Do Not Confirm 🐱
TCP Socket Setting	Check for New Messages	
IEEE802.1X Authentication Setting	Polling Interval	15 min. (1-60)
▶ LLTD Setting		OK Cancel
Bluetooth Setting		OK

Item	Description	Prior check
[E-mail RX Setting]	Select [ON] to perform POP before SMTP authentication.	
[POP Server Ad- dress]	Enter the POP server address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Login Name]	Enter the login name of the POP server (up to 63 charac- ters).	
[Password is changed.]	Select this check box to change the password.	

Δ

Item	Description	Prior check
[Password]	Enter the password to log in to the POP server (up to 15 characters).	
[Connection Time- out]	Specify the timeout period for a communication with a server.	
[Port Number]	Enter a port number. Default setting: 110	Server port number

4.3.6 POP over SSL

[E-mail RX (POP)]


In the administrator mode of **PageScope Web Connection**, select [Network] → [E-mail Setting] → [E-mail RX (POP)].

Item	Description	Prior check
[Use SSL/TLS]	Select this check box to encrypt a communication be- tween this machine and POP server.	Does the server sup- port SSL?
[Port No.(SSL)]	Enter the port number to be used for SSL communication. Default setting: 995	Server port number
[Certificate Verifi- cation Level Set- tings]	To verify the server certificate, configure settings to verify the certificate.	
[Validity Period]	Select whether to check that the server certificate is within the validity period.	
[CN]	Select whether to check that the CN of the server certificate matches the server address.	
[Key Usage]	Select whether to check that the server certificate is used according to the purpose approved by the issuer.	
[Chain]	Select whether to check that the server certificate chain (certification path) is correct. The chain is validated by referencing the external certificates managed on this machine. For details, refer to page 8-34.	
[Expiration Date Confirmation]	Select whether to check that the server certificate is within the validity period. The OCSP service and CRL (Certificate Revocation List) are checked in this order when the expiration date of the certificate is checked.	

bizhub C360/C280/C220



In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].

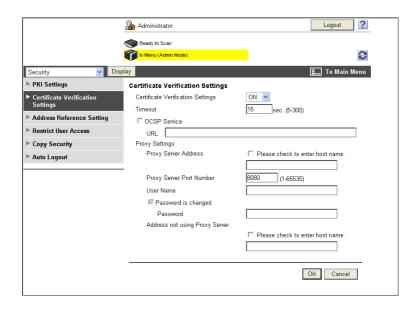

Item	Description	Prior check
[Certificate Verifi- cation Setting]	Select [ON] to verify the server certificate.	
[Timeout]	Enter a timeout period for expiration date confirmation.	Do you confirm the expiration date?
[OCSP Service]	Select this check box to use the OCSP service.	
[URL]	Enter the URL of the OCSP service (up to 511 characters). If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.	
[Proxy Server Ad- dress]	To confirm the expiration date via a proxy server, enter its address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the proxy server (up to 63 characters).	
[Address not using Proxy Server]	To enable expiration date confirmation, specify an ad- dress that does not use the proxy server depending on your environment. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	

4.3.7 APOP Authentication

In the administrator mode of **PageScope Web Connection**, select [Network] → [E-mail Setting] → [E-mail RX (POP)].

Item	Description	Prior check
[APOP Authentica- tion]	Select [ON] to encrypt the login name and password when logging in to the POP server. The password is encrypted with MD5 to log in to the POP server using APOP. Before you select [ON], check whether the POP server supports APOP. If the POP server does not support APOP, it results in an error, causing a commu- nication failure.	Is APOP authentica- tion requested by the server?


4.4 Sending scanned data to the user's E-mail address (Scan to Me)

Configure settings to send scanned data to the user's E-mail address.

This function is available when user authentication is enabled and the E-mail address is registered as user information.

If the login user's E-mail address is registered, [Me] is displayed in the address book. Specify [Me] for the address to enable you to easily send data to your E-mail address.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

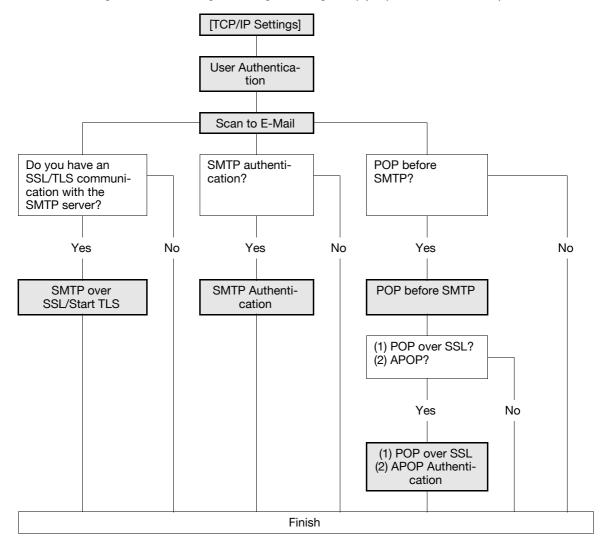

Reference

For details on how to send a file to the user's own E-mail address, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

4.4.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

4.4.2 User Authentication

Configure settings to restrict users who use this machine.

When the MFP authentication is selected

When the MFP authentication is selected, do the following.

- Configure the settings required for the MFP authentication
- Register the E-mail address of each user when registering users

For details on the settings for the MFP authentication and user registration, refer to page 7-2.

When the Active Directory authentication is selected

When the Active Directory authentication is selected, do the following.

- Configure the settings required for the Active Directory authentication
- Register the E-mail address of each of the users from this machine with the server to enable this machine to obtain the address using the LDAP protocol

For details on Active Directory authentication settings, refer to page 7-10.

When the NTLM or NDS authentication is selected

When the NTLM or NDS authentication is selected, do the following.

- Configure the settings required for the NTLM or NDS authentication
- Register the E-mail address of each user in User Registration

For details on NTLM authentication settings, refer to page 7-15.

For details on NDS over IPX/SPX authentication settings, refer to page 7-19.

For details on NDS over TCP/IP authentication settings, refer to page 7-22.

4.4.3 Scan to E-Mail

Configure settings to send an E-mail. For details, refer to page 4-9.

4.4.4 SMTP over SSL/Start TLS

Configure the settings for SMTP over SSL or Start TLS. For details, refer to page 4-10.

4.4.5 SMTP Authentication

Configure SMTP authentication settings. For details, refer to page 4-12.

4.4.6 POP before SMTP

Configure the settings for POP before SMTP. For details, refer to page 4-13.

4.4.7 POP over SSL

Configure the settings for POP over SSL. For details, refer to page 4-14.

4.4.8 APOP Authentication

Configure APOP authentication settings. For details, refer to page 4-16.


4.5 Sending scanned data by E-mail (with digital signature)

Configure settings to send scanned data by E-mail with a digital signature.

Sending an E-mail with a digital signature enables you to prove that the E-mail has been sent from this machine and also to send a device certificate to the user. Using the obtained certificate (public key), the user can send an encrypted E-mail to this machine.

If necessary, you can combine POP before SMTP authentication, APOP authentication, SMTP authentication, and SSL/TLS encryption to have a communication.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

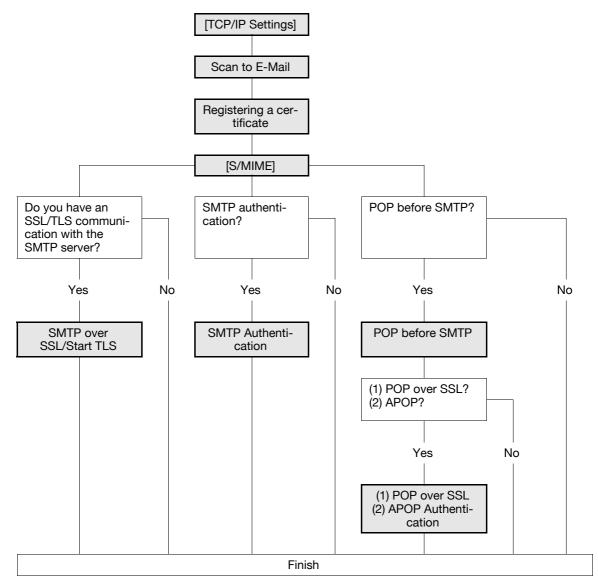

4.5.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

4.5.2 Scan to E-Mail

Configure settings to send an E-mail. For details, refer to page 4-9.

4.5.3 Registering a certificate


Register a device certificate.

 You cannot send an E-mail if the administrator address of the device certificate used for digital signature does not match the From address of the E-mail.

For details, refer to page 8-2.

4.5.4 [S/MIME]

In the administrator mode of PageScope Web Connection, select [Network] >> [E-mail Setting] >> [S/MIME].

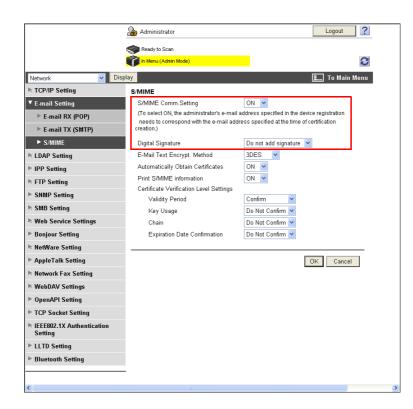

Item	Description	Prior check
[S/MIME Comm. Setting]	Select [ON].	
[Digital Signature]	Select [Always add signature] or [Select when sending].	

4.5.5 SMTP over SSL/Start TLS

Configure the settings for SMTP over SSL or Start TLS. For details, refer to page 4-10.

4.5.6 SMTP Authentication

Configure SMTP authentication settings. For details, refer to page 4-12.

4.5.7 POP before SMTP

Configure the settings for POP before SMTP. For details, refer to page 4-13.

bizhub C360/C280/C220

Δ

4.5.8 POP over SSL

Configure the settings for POP over SSL. For details, refer to page 4-14.

4.5.9 APOP Authentication

Configure APOP authentication settings. For details, refer to page 4-16.


4.6 Sending scanned data by E-mail (Encryption by public key)

Configure settings to encrypt an E-mail using the user certificate (public key) registered in this machine when sending scanned data by E-mail.

Sending an encrypted E-mail prevents information from being leaked to the third party on the transmission route. Combining a digital signature with an E-mail also enables you to perform the authentication of this machine and message. For details on settings for attaching a digital signature to an E-mail, refer to page 4-20.

If necessary, you can combine POP before SMTP authentication, APOP authentication, SMTP authentication, and SSL/TLS encryption to have a communication.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

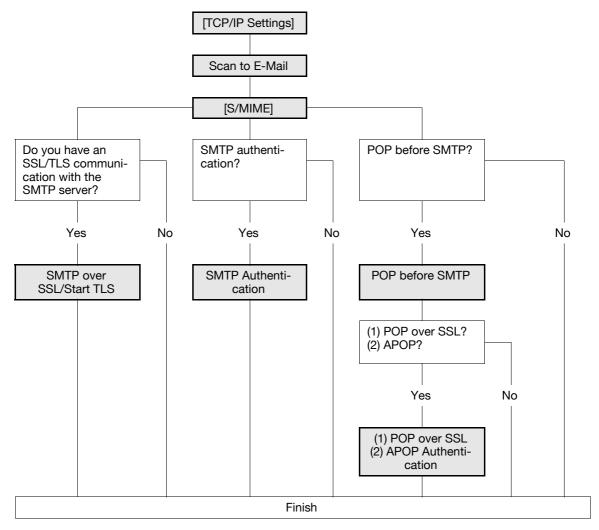

Reference

You cannot select an address with no certificate registered. To send an encrypted E-mail, pre-register the user certificate in this machine. For details, refer to page 8-13.

4.6.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.


4.6.2 Scan to E-Mail

Configure settings to send an E-mail. For details, refer to page 4-9.

bizhub C360/C280/C220

4.6.3 [S/MIME]

In the administrator mode of PageScope Web Connection, select [Network] - [E-mail Setting] - [S/MIME].

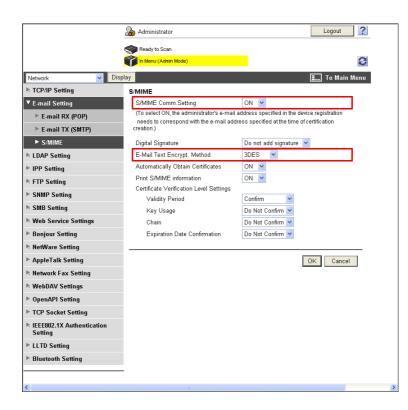

Item	Description	Prior check
[S/MIME Comm. Setting]	Select [ON].	
[E-Mail Text En- crypt. Method]	Specify the E-mail text encryption format.	

4.6.4 SMTP over SSL/Start TLS

Configure the settings for SMTP over SSL or Start TLS. For details, refer to page 4-10.

4.6.5 SMTP Authentication

Configure SMTP authentication settings. For details, refer to page 4-12.

4.6.6 POP before SMTP

Configure the settings for POP before SMTP. For details, refer to page 4-13.

4.6.7 POP over SSL

Configure the settings for POP over SSL. For details, refer to page 4-14.

bizhub C360/C280/C220

Δ

4.6.8 APOP Authentication

Configure APOP authentication settings. For details, refer to page 4-16.


4.7 Sending scanned data to the FTP server

Configure settings to send scanned data to the FTP server.

You can send scanned data to the specified folder in the FTP server via the network, which contains the FTP server. This allows you to download the data sent to the FTP server from a computer via the network. This function is suitable to send a large amount of data such as high-resolution data.

If a proxy server is in network environment, you can configure settings to access the FTP server on Internet via the proxy server.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

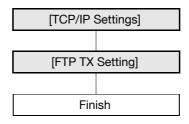

Reference

For details on how to register the FTP address, refer to page 11-7.

For details on FTP file sending, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

4.7.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

4.7.2 [FTP TX Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] **>>** [FTP Setting] **>>** [FTP TX Setting].

	🍌 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	S
Network 🔽 Dis	play	E To Main Menu
► TCP/IP Setting	FTP TX	
⊫ E-mail Setting	FTP TX	ON 💌
▶ LDAP Setting	Proxy Server Address	Please check to enter host name.
▶ IPP Setting		0.0.0.0
▼ FTP Setting	Proxy Server Port Number	21 (1-65535)
► FTP TX Setting	Connection Timeout	60sec. (5-300)
► FTP Server Setting	Port Number	21 (1-65535)
► SNMP Setting		
▶ SMB Setting		OK Cancel
▶ Web Service Settings		
Bonjour Setting		
▶ NetWare Setting		
AppleTalk Setting		
Network Fax Setting		
⊫ WebDAV Settings		
▶ OpenAPI Setting		
▶ TCP Socket Setting		
IEEE802.1X Authentication Setting		
LLTD Setting		
▶ Bluetooth Setting		
	-	
<		

bizhub C360/C280/C220

Item	Description	Prior check
[FTP TX]	Select [ON].	
[Proxy Server Ad- dress]	To perform transmissions via a proxy server, enter its ad- dress. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[Connection Time- out]	Enter the timeout period for a communication with a serv- er.	
[Port Number]	Enter a port number. Default setting: 21	Server port number

4.8 Sending scanned data to the WebDAV server


Configure settings to send scanned data to the WebDAV server.

You can send scanned data to the specified folder in the WebDAV server via the network, which contains the WebDAV server. This allows you to download the data sent to the WebDAV server from a computer via the network.

WebDAV, which is an extension to the HTTP specification, provides the same security technologies as HTTP. Use SSL to encrypt a communication with the WebDAV server; you can send a file more securely.

If a proxy server is in network environment, you can configure settings to access the WebDAV server on Internet via the proxy server.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

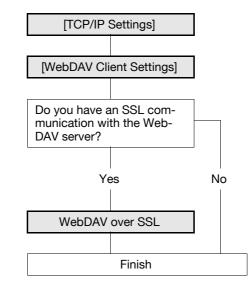

Reference

For details on how to register the WebDAV address, refer to page 11-7.

When registering the address, specify whether to send a file encrypted with SSL. For details, refer to page 11-7.

For details on WebDAV file sending, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

4.8.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

4.8.2 [WebDAV Client Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [WebDAV Settings] → [Web-DAV Client Settings].

	🌆 Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	2
Network 🔽 Disp	lay	E To Main Menu
► TCP/IP Setting	WebDAV Client Settings	
⊫ E-mail Setting	WebDAV TX Setting	ON 💌
▶ LDAP Setting	Proxy Settings	
► IPP Setting	Proxy Server Address	Please check to enter host name.
▶ FTP Setting		
SNMP Setting	Proxy Server Port Number	8080 (1-65535)
•	User Name	
SMB Setting	Password is changed.	
▶ Web Service Settings	Password	
Bonjour Setting	Chunk Transmission	Non-Chunk Transmission 💌
NetWare Setting	Connection Timeout	60 sec. (5-300)
AppleTalk Setting	Certificate Verification Level Settings	
Network Fax Setting	Validity Period	Confirm
▼ WebDAV Settings	CN	Do Not Confirm 🔽
<u> </u>	Key Usage	Do Not Confirm 🔽
WebDAV Client Settings	Chain	Do Not Confirm 🔽
WebDAV Server Settings	Expiration Date Confirmation	Do Not Confirm 💌
OpenAPI Setting		
TCP Socket Setting		OK Cancel
IEEE802.1X Authentication Setting		
LLTD Setting		
Bluetooth Setting		
<		

Item	Description	Prior check
[WebDAV TX Set- ting]	Select [ON].	
[Proxy Server Ad- dress]	To perform transmissions via a proxy server, enter its ad- dress. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the proxy server (up to 63 characters).	
[Chunk Transmis- sion]	Select whether to enable chunk TX (batch transmission) or non-chunk TX (split transmission) when sending data to the WebDAV server. By default, it is set to [Non-Chunk Transmission]. Change the setting to fit the target WebDAV server.	Method supported by the server
[Connection Time- out]	Enter the timeout period for a communication with a serv- er.	
[Server Authentica- tion Character Code]	Select a character code to perform the authentication un- der the WebDAV server. You can use this setting when [Japanese] is specified for the language to be displayed on the Control Panel .	

4.8.3 WebDAV over SSL

[Certificate Verification Level Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] **>>** [WebDAV Settings] **>>** [WebDAV Client Settings].

Item	Description	Prior check
[Certificate Verifi- cation Level Set- tings]	To verify the server certificate, configure settings to verify the certificate.	
[Validity Period]	Select whether to check that the server certificate is within the validity period.	
[CN]	Select whether to check that the CN of the server certificate matches the server address.	
[Key Usage]	Select whether to check that the server certificate is used according to the purpose approved by the issuer.	
[Chain]	Select whether to check that the server certificate chain (certification path) is correct. The chain is validated by referencing the external certifi- cates managed on this machine. For details, refer to page 8-34.	
[Expiration Date Confirmation]	Select whether to check that the server certificate is within the validity period. The OCSP service and CRL (Certificate Revocation List) are checked in this order when the expiration date of the certificate is checked.	

[Certificate Verification Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].

	Administrator	Logout ?
	I Ready to Scan	
	📦 In Menu (Admin Mode)	
Security 🔽 Di:	splay	E To Main Menu
▶ PKI Settings	Certificate Verification Settings	
Certificate Verification	Certificate Verification Settings	ON 💌
Settings	Timeout	15 sec. (5-300)
Address Reference Setting	CCSP Service	
Restrict User Access	URL	
Copy Security	Proxy Settings	
Auto Logout	Proxy Server Address	Please check to enter host name.
	_	
	Proxy Server Port Number	8080 (1-65535)
	User Name	
	🔽 Password is changed.	
	Password	
	Address not using Proxy Server	
		Please check to enter host name.
		OK Cancel

Item	Description	Prior check
[Certificate Verifi- cation Setting]	Select [ON] to verify the server certificate.	
[Timeout]	Enter a timeout period for expiration date confirmation.	Do you confirm the expiration date?
[OCSP Service]	Select this check box to use the OCSP service.	


Item	Description	Prior check
[URL]	Enter the URL of the OCSP service (up to 511 characters). If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.	
[Proxy Server Ad- dress]	To confirm the expiration date via a proxy server, enter its address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the proxy server (up to 63 characters).	
[Address not using Proxy Server]	To enable expiration date confirmation, specify an ad- dress that does not use the proxy server depending on your environment. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	



Configure settings to use this machine as a scanner.

Using the TWAIN driver enables you to use this machine as a scanner. This function controls this machine from a computer via the network, and imports scanned data to application on network.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

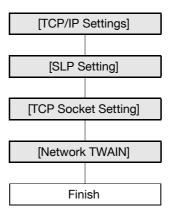

Reference

For details on how to install the TWAIN driver, refer to the TWAIN driver manual in the Driver CD-ROM.

4.9.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

4.9.2 [SLP Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] **>** [TCP/IP Setting] **>** [TCP/IP Setting].

Item	Description	Prior check
[SLP]	Select [Enable] to search for this machine using TWAIN.	




In the administrator mode of PageScope Web Connection, select [Network] >> [TCP Socket Setting].

	🆓 Administrator	Logout 🥐
	Ready to Scan	
	In Menu (Admin Mode)	3
Network 🔽 🖸	Display	E To Main Menu
► TCP/IP Setting	TCP Socket Setting	
▶ E-mail Setting	(Turn the main switch OFF, and then (ON , when changing TCP Socket.)
LDAP Setting	✓ TCP Socket	
► IPP Setting	Port Number	0 (1-65535)
► FTP Setting	Use SSL/TLS	
SNMP Setting	Port No.(SSL)	0 (1-65535)
SMB Setting	TCP Socket(ASCII Mode)	
•	Port No. (ASCII Mode)	0 (1-65535)
Web Service Settings		
Bonjour Setting		OK Cancel
NetWare Setting		
AppleTalk Setting		
Network Fax Setting		
WebDAV Settings		
▶ OpenAPI Setting		
TCP Socket Setting		
IEEE802.1X Authentication Setting		
▶ LLTD Setting		
Bluetooth Setting		
	_	
la II		
<	III.	

Item	Description	Prior check
[TCP Socket]	Select this check box to use the TWAIN driver.	
[Port Number]	Enter a port number.	

4.9.4 [Network TWAIN]

In the administrator mode of PageScope Web Connection, select [System Settings] >> [Network TWAIN].

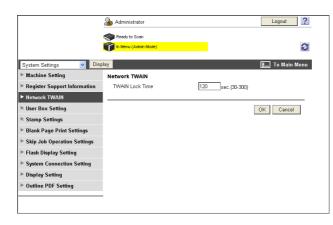


Item	Description	Prior check
[TWAIN Lock Time]	Enter the time to automatically release the operation lock using the TWAIN scan function.	

4.10 Using the WS scan function

Configure the following settings when you scan data using the Web services function of Windows Vista/Server 2008.

The Web services function can automatically detect this network-connected machine and install it as a WS scanner. When you select this machine (installed as the WS scanner), you can use the HTTP for communication and scan data.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

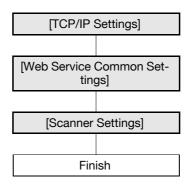

Reference


For details on the WS scan functions, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

4.10.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

4.10.2 [Web Service Common Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] ►> [Web Service Settings] ►> [Web Service Common Settings].

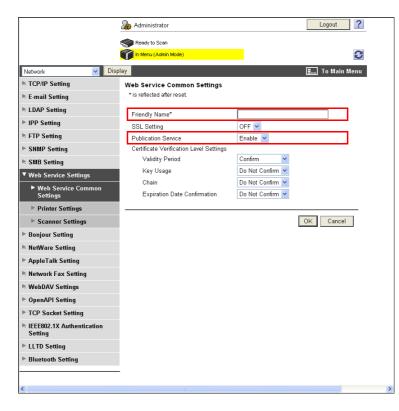

Item	Description	Prior check
[Friendly Name]	Enter a Friendly Name (up to 62 characters).	
[Publication Serv- ice]	If you use this machine in an environment where NetBIOS is disabled or only the IPv6 protocol communication is used by the Windows Vista or Server 2008 system, set this item to [Enable]. The Publication Service function can detect up to 512 destinations, including those detected with the NetBIOS service.	

4.10.3 [Scanner Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] ► [Web Service Settings] ► [Scanner Settings].



Item	Description	Prior check
[Scan Function]	Select [ON].	
[Scanner Name]	Enter a scanner name (up to 63 characters).	
[Scanner Location]	Enter a scanner location (up to 63 characters).	
[Scanner Informa- tion]	Enter scanner information (up to 63 characters).	
[Connection Time- out]	Enter a connection timeout.	



5 Printing


5.1 Printing (LPR/Port9100)

Configure settings for LPR or Port9100 printing.

LPR printing is performed via the network using the LPR protocol. It is mainly used in UNIX-based operating systems.

Port9100 printing is performed via the network by directly specifying the RAW port (Port9100) of this machine connected to the TCP/IP network as a destination printer.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

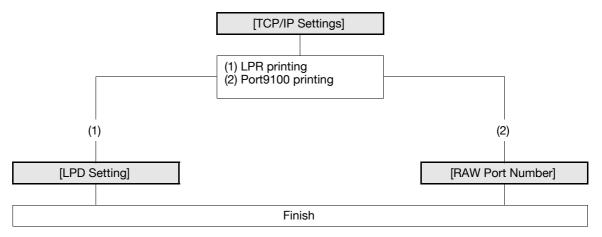

Reference

For details on how to install the printer driver, refer to the [User's Guide Print Operations].

5.1.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

5.1.2 [LPD Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] \rightarrow [TCP/IP Setting] \rightarrow [TCP/IP Setting].

Item	Description	Prior check
[LPD]	Select [Enable].	

5.1.3 [RAW Port Number]

In the administrator mode of **PageScope Web Connection**, select [Network] **>>** [TCP/IP Setting] **>>** [TCP/IP Setting].

Item	Description	Prior check
[RAW Port Number]	Select the check box of the required port, and enter the RAW port number.	

Reference

• If you select [OK] after changing multiple port numbers together in **PageScope Web Connection** or on the **Control Panel**, a port number duplication error may be displayed. When this error is displayed, first change one port number and select [OK]. Then change another one and select [OK].


Configure settings for SMB printing.

A printer can be shared on the Windows network using the SMB protocol. The SMB printing allows a computer to directly specify this machine running on the Windows network to print information.

To use SMB printing in the IPv6 environment, you must enable the direct hosting service.

To perform the SMB printing from a computer with Windows Vista/Server 2008 installed, you can perform the name resolution using the LLMNR function even if DNS server is not present. To perform the name resolution especially in the IPv6-only communication environment under Windows Vista/Server 2008, it will be convenient to enable the LLMNR function.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

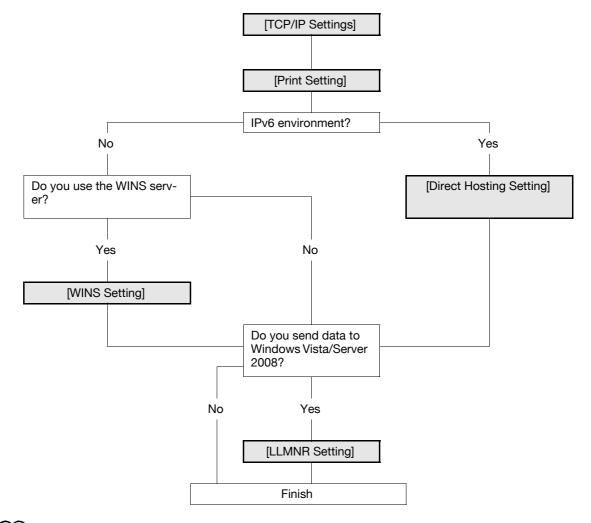

Reference

For details on how to install the printer driver, refer to the [User's Guide Print Operations].

5.2.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

5.2.2 [Print Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] → [SMB Setting] → [Print Setting].

	🌆 Administrator	Logout
	Ready to Scan	
	in Menu (Admin Mode)	
Network 🔽 🕻	Display	E To Main Mer
TCP/IP Setting	Print Setting	
⊫ E-mail Setting	SMB Print	ON 🗸
EDAP Setting	NetBIOS Name	
▶ IPP Setting	Print Service Name	
▶ FTP Setting	Workgroup	WORKGROUP
► SNMP Setting		
▼ SMB Setting		OK Cancel
▶ WINS Setting		
Client Setting		
► Print Setting		
Direct Hosting Setting		
Neb Service Settings		
Bonjour Setting		
NetWare Setting		
AppleTalk Setting		
Network Fax Setting		
NebDAV Settings		
▶ OpenAPI Setting		
► TCP Socket Setting		
IEEE802.1X Authentication Setting		
▶ LLTD Setting		
► Bluetooth Setting		
	_	
<		

Item	Description	Prior check
[Print Setting]	Select [ON].	
[NetBIOS Name]	Enter the NetBIOS name in uppercase letters (up to 15 characters, the only symbol allowed is a hyphen (-)).	
[Print Service Name]	Enter a print service name in uppercase letters (up to 12 characters, excluding / and \).	
[Workgroup]	Enter a workgroup name in uppercase letters (up to 15 characters, excluding " $\$; , * < > + = ?).	The workgroup this machine belongs to

5.2.3 [WINS Setting]

When you start SMB printing via the router, you must set up the WINS server. For details, refer to page 4-4.

5.2.4 [Direct Hosting Setting]

To use SMB printing in the IPv6 environment, enable the direct hosting service. For details, refer to page 4-5.

5.2.5 [LLMNR Setting]

To perform name resolution in the environment configured to communicate with Windows Vista/Server 2008, and where the DNS server is not running, enable the LLMNR function.

For details, refer to page 4-5.


5.3 Print (IPP)

Configure settings for IPP printing.

IPP printing uses the Internet Printing Protocol (IPP) and prints information via the network. Because the IPP printing allows the print data to be transferred to a network printer using HTTP protocol, you can also output the data to a remote printer via the Internet.

If you have set the authentication for IPP printing, you can prevent illegal access by a third party.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

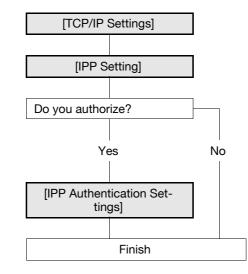

Reference

For details on how to install the printer driver, refer to the "User's Guide [Print Operations]".

5.3.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

5.3.2 [IPP Setting]

In the administrator mode of PageScope Web Connection, select [Network] > [IPP Setting].

Administrator Logout ? Pready to Scen ? Image: Printer Information ? Printer Information
Interverk Display Image: Tot Main Model Network Display Image: Tot Main Model IPP Setting Image: Tot Main Model Image: Tot Main Model IPP Setting Image: Tot Main Model Image: Tot Main Model LDAP Setting Image: Tot Main Model Image: Tot Main Model LDAP Setting Image: Tot Main Model Image: Tot Main Model LDAP Setting Printer Information Image: Tot Main Model SMB Setting Printer Information Image: Tot Main Model SMB Setting URE//TestData00 URE//TestData01 Web Service Settings URE//TestData02 URE//TestData03 NetWare Setting URE//TestData03 URE//TestData04 VRE//TestData03 URE//TestData05 Support Operation Network Fax Setting Im Valid Job Im Valid Job VebDAV Settings Im C Cancel Job Im Cancel Job To Open Job Im Open Job Im Open Job
Network Display IPP Setting IPP Setting IPP Setting IPP Setting LDAP Setting Accept IPP job Display Printer Name IPP Setting Printer Name PIP Setting Printer Location SIMB Setting Printer Information SMB Setting URE//TestData00 Web Service Settings URE//TestData02 URE//TestData03 URE//TestData03 NetWare Setting URE//TestData05 Support Operation Support Operation Network Fax Setting If Valid Job VebDAV Settings If Open Job TCP Socket Setting If Open Job
TCP/IP Setting IPP Setting IPP Setting IPP Setting LDAP Setting Accept IPP job Pinter Name IPP Setting FTP Setting Printer Name SIMP Setting Printer Location SMB Setting Printer Information SMB Setting URE/TestData00 Web Service Settings URE/TestData01 Bonjour Setting URE/TestData02 URE/TestData03 URE/TestData04 PAppleTalk Setting URE/TestData05 Support Operation IVE/Inst Data05 VebDAV Settings IV Print Job OpenAPI Setting IV Cancel Job VESE032 Authording IV Open Job
IPP Setting IPP Setting LDAP Setting Accept IPP job Pinter Name Printer Name FTP Setting Printer Location SMB Setting Printer Information SMB Setting Printer Information SMB Setting URE/TestDatA00 Web Service Settings URE/TestDatA02 URE/TestDatA03 URE/TestDatA04 NetWare Setting URE/TestDatA05 Support Operation Support Operation Network Fax Setting IV Print Job VebDAV Settings IV Cacel Job VopenAPI Setting IV Open Job
▶ LDAP Setting Accept IPP job ON ♥ ▶ IPP Setting Printer Name Image: Simple Setting ▶ STMP Setting Printer Information Image: Simple Setting > SMB Setting URL/TestData00 Image: Simple Setting > Web Service Settings URL/TestData00 Image: Simple Setting > NetWare Setting URL/TestData02 Image: Simple Setting > NetWare Setting URL/TestData03 Image: Simple Setting > NetWare Setting URL/TestData04 Image: Simple Setting > Network Fax Setting Image: Simple Setting Image: Simple Setting > OpenAPI Setting Image: Concel Job Image: Concel Job > TCP Socket Setting Image: Concel Job Image: Concel Job > TCP Socket Setting Image: Concel Job Image: Concel Job > TCP Socket Setting Image: Concel Job Image: Concel Job > TCP Socket Setting Image: Concel Job Image: Concel Job > TCP Socket Setting Image: Concel Job Image: Concel Job
IPP Setting Printer Name FTP Setting Printer Location SNMP Setting Printer Location SMB Setting Printer URI SMB Setting URL/TestData00 Web Service Settings URL/TestData01 URL/TestData02 URL/TestData03 NetWare Setting URL/TestData04 VRL/TestData04 URL/TestData05 Support Operation Support Operation NetWork Fax Setting IV Print Job VebDAV Settings IV Cancel Job TCP Socket Setting IV Open Job
IPP Setting Printer Location SNMP Setting Printer Information SMB Setting URL/TestData00 Web Service Settings URL/TestData01 Bonjour Setting URL/TestData02 Pointer URI URL/TestData02 Bonjour Setting URL/TestData02 VR/TestData04 URL/TestData05 Support Operation Support Operation Network Fax Setting IV Cancel Job OpenAPI Setting IV Cancel Job TCP Socket Setting IV Open Job
FIP Setting Printer Information SMB Setting Printer URI SMB Setting URI/TestData00 Web Service Settings URI/TestData01 Bonjour Setting URI/TestData02 Bonjour Setting URI/TestData02 NetWare Setting URI/TestData03 NetWare Setting URI/TestData04 VRI/TestData05 Support Operation Network Fax Setting IV Print Job WebDAV Settings IV cancel Job TCP Socket Setting IV Open Job
> SMB Setting Printer URI > SMB Setting URI/TestData00 > Web Service Settings URI/TestData01 > Bonjour Setting URI/TestData02 > Bonjour Setting URI/TestData02 > NetWare Setting URI/TestData03 > NetWare Setting URI/TestData05 > Support Operation Support Operation > Network Fax Setting IV Print Job > OpenAPI Setting IV Cancel Job > TCP Socket Setting IV Open Job
> SMB Setting URL//TestData00 > Web Service Settings URL//TestData01 > Bonjour Setting URL//TestData02 > NetWare Setting URL//TestData02 > NetWare Setting URL//TestData02 > AppleTalk Setting URL/TestData04 > AppleTalk Setting IVRL/TestData05 > Network Fax Setting IVRL/TestData05 > Network Fax Setting IVRL/TestData05 > OpenAPI Setting IVRL/TestData05 > OpenAPI Setting IVRL/TestData05 > TCP Socket Setting IVRL/TestData05 > IVRL/TestData05 IVRL/TestData05 > IVRL/TestData05 IVRL/TestData05 > Support Operation IVRL/TestData05 > VebDAV Settings IVRL/TestData05 > IVRL/TestData05 IVRL/TestData05
Web Service Settings URE//TestData01 Bonjour Setting URE//TestData01 NetWare Setting URE//TestData03 NetWare Setting URE//TestData04 URE//TestData04 URE//TestData04 AppleTalk Setting URE//TestData05 Support Operation Support Operation Network Fax Setting IV Print Job WebDAV Settings IV Cancel Job OpenAPI Setting IV Open Job Attributes TCP Socket Setting IV Open Job
Bonjour Setting UR!://TestData02 UR!://TestData03 UR!:/TestData03 NetWare Setting UR://TestData04 AppleTalk Setting UR://TestData05 Support Operation Support Operation Network Fax Setting IV VebDAV Settings IV OpenAPI Setting IV TCP Socket Setting IV VCP open Job Valid Job
NetWare Setting URE//TestData04 AppleTalk Setting URE//TestData04 Support Operation Support Operation Network Fax Setting IV VebDAV Settings IV OpenAPI Setting IV TCP Socket Setting IV VOpen Job Valid Job
AppleTalk Setting URL//TestData05 Support Operation Support Operation Network Fax Setting IF IF Print Job WebDAV Settings IF OpenAPI Setting IF Cancel Job IF TCP Socket Setting IF Open Job Open Job
Support Operation Support Operation Image: Print Job WebDAV Settings Image: OpenAPI Setting Image: OpenA
▶ WebDAV Settings IV valid Job ▶ OpenAPI Setting IV Cancel Job ▶ TCP Socket Setting IV Open Job Attributes ▶ UESE02 31 Authoritation IV Open Job
▶ OpenAPI Setting I I Cancel Job ▶ TCP Socket Setting I Open Job Attributes ▶ UFEEP02 43 Authoritation I Open Job
> TCP Socket Setting I I I I > TCP Socket Setting I I I I > UFESE02 31 Authoritation I I I I
CP Socket Setting C Open Job EEEE002 4X Authentication
► IEEE902 1X Authentication
Setting Open Printer Attributes
LLTD Setting
Authentication Method requesting-user-name
User Name user
Password is changed. (Password is currently set.)
Password
realm
OK
<

Item	Description	Prior check
[IPP Setting]	Select [ON].	
[Accept IPP job]	Select [ON].	
[Printer Name]	Enter a printer name (up to 127 characters).	
[Printer Location]	Enter a printer location (up to 127 characters).	
[Printer Informa- tion]	Enter printer information (up to 127 characters).	
[Print URI]	Displays the URI of the printer that can print data using the IPP.	
[Support Infoma- tion]	Select the check box of each job to be executed using the IPP.	
[Print Job]	Select whether to allow a print job. Select this check box to enable IPP printing.	
[Valid Job]	Select whether to allow confirmation of a valid job.	
[Cancel Job]	Select whether to allow canceling the job.	
[Open Job At- tributes]	Select whether to obtain job attributes.	
[Open Job]	Select whether to obtain a list of job attributes.	
[Open Printer At- tributes]	Select whether to obtain printer attributes.	

5.3.3 [IPP Authentication Settings]

In the administrator mode of PageScope Web Connection, select [Network] ►► [IPP Setting].

Item	Description	Prior check
[IPP Authentication Setting]	Select this check box to force an authentication for IPP printing.	
[Authentication Method]	Select an authentication method.	
[User Name]	Enter a user name (up to 20 characters, excluding a colon (:)). This entry is required if you have selected [basic] or [di- gest] for the [Authentication Method].	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password (up to 20 characters). This entry is required if you have selected [basic] or [di- gest] for the [Authentication Method].	
[realm]	Enter realm (up to 127 characters). This entry is required if you have selected [digest] for the [Authentication Method].	


Configure settings for IPPS printing.

When this machine starts IPP printing, the communication between the computer and this machine is encrypted using the SSL. The encryption using the SSL can enhance the security during IPP printing.

To use IPPS printing on the Windows Vista/Server 2008 system, check the following points.

- Enter "https://host-name.domain-name/ipp". These host-name and domain-name must be the [DNS Host Name] and [Default DNS Domain Name] that you have set for the [TCP/IP Settings].
- Your computer must be able to resolve the name of this machine using the DNS. Register this machine in the DNS server and configure the DNS settings in your computer in advance.
- If the certificate of this machine is not the one issued by the Certificate Authority (CA), you must register the device certificate in [Trusted Root Certification Authorities] of the local computer.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

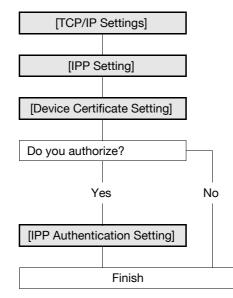

Reference

For details on how to install the printer driver, refer to the [User's Guide Print Operations].

5.4.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

• To use IPPS printing in Windows Vista/Server 2008, correctly set the [DNS Host Name] and [Default DNS Domain Name] in [TCP/IP Settings] before creating its certificate. If their settings are incorrect, you cannot connect to this machine using IPPS.

For details, refer to page 2-2.

5.4.2 [IPP Setting]

Configure settings for IPP printing. For details, refer to page 5-7.

5.4.3 [Device Certificate Setting]

Configure settings for SSL communication. For details, refer to page 8-2.

5.4.4 [IPP Authentication Setting]

Configure these settings to force an authentication for IPP printing. For details, refer to page 5-8.

5.5 Printing (Bonjour)

Configure these settings when you connect this machine to a Macintosh computer using the Bonjour protocol for printing.

Before starting Bonjour protocol communication between this machine and a Macintosh computer, configure the Bonjour protocol for this machine.

Reference

For details on how to install the printer driver, refer to the [User's Guide Print Operations].

[Bonjour Setting]

In the administrator mode of PageScope Web Connection, select [Network]
[Bonjour Setting].



Item	Description	Prior check
[Bonjour]	Select [ON].	
[Bonjour Name]	Enter a Bonjour name that is displayed as the name of connected device (up to 63 characters).	

5.6 Printing (AppleTalk)

Configure these settings when you connect this machine to a Macintosh computer using the AppleTalk protocol for printing.

Before starting AppleTalk protocol communication between this machine and a Macintosh computer, set the AppleTalk protocol for this machine.

Reference

For details on how to install the printer driver, refer to the [User's Guide Print Operations].

[AppleTalk Settings]

In the administrator mode of PageScope Web Connection, select [Network] >> [AppleTalk Setting].

	🍌 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	3
Network	Display	🚛 To Main Menu
► TCP/IP Setting	AppleTalk Setting	
▶ E-mail Setting	* is reflected after reset.	
▶ LDAP Setting	AppleTalk	ON 💌
▶ IPP Setting	Printer Name*	
▶ FTP Setting	Zone Name*	*
► SNMP Setting	Current Zone	
▶ SMB Setting		
▶ Web Service Settings		OK Cancel
Bonjour Setting		
▶ NetWare Setting		
► AppleTalk Setting		
Retwork Fax Setting		
▶ WebDAV Settings		
▶ OpenAPI Setting		
► TCP Socket Setting		
IEEE802.1X Authentication Setting		
► LLTD Setting		
Bluetooth Setting		
<		

Item	Description	Prior check
[AppleTalk]	Select [ON].	
[Printer Name]	Enter a printer name to be displayed on the selector (up to 31 characters, excluding = and \sim).	
[Zone Name]	Enter a name of zone this machine belongs to (up to 31 characters).	
[Current Zone]	The current zone name is displayed.	

Configure settings for printing in a NetWare environment.

Before you start printing in a NetWare environment, you must set the NetWare file system on this machine.

Reference

For details on how to install the printer driver, refer to the [User's Guide Print Operations]. The current NetWare connection can be checked if necessary. For details, refer to page 5-16.

5.7.1 [NetWare Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] ► [NetWare Setting] ► [Net-Ware Setting].

The required items depend on your operating environment. Set the items by referring to the following figure.

	凝 Administrator	Logout ?
	Ready to Scan	
	🗊 In Menu (Admin Mode)	3
Network 🔽	Display	E To Main Menu
► TCP/IP Setting	NetWare Setting	
⊫ E-mail Setting	* is reflected after reset.	
▶ LDAP Setting	IPX Setting	ON V
► IPP Setting	(Turn the main switch OFF, and then ON, w	
▶ FTP Setting	Ethernet Frame Type*	Auto Detect 👻
► SNMP Setting	NetWare Print Mode*	OFF 🖌
SMB Setting	PServer	
	Print Server Name*	
Neb Service Settings	Password is changed.	
Bonjour Setting	Print Server Password*	
▼ NetWare Setting	Polling Interval*	1sec.(1-65535)
NetWare Setting	Bindery/NDS Setting*	NDS
▶ NetWare Status	Bindery	
AppleTalk Setting	File Server Name*	
▶ Network Fax Setting	NDS	
► WebDAV Settings	NDS Context Name*	
-	NDS Tree Name*	
OpenAPI Setting	Nprinter/Rprinter	
TCP Socket Setting	Print Server Name*	
▶ IEEE802.1X Authentication	Printer Number*	255 (0-255,255:Auto)
Setting	User Authentication Setting	ON 🛩
LLTD Setting		
Bluetooth Setting		OK Cancel
<		
		,

In Remote Printer mode using the NetWare 4.x Bindery Emulation

- When you use the Bindery Emulation, make sure that the Bindery Emulation has been enabled on the NetWare server.
- 1 From the client, log in the NetWare file system as Bindery with the administrator authority.
- 2 Start Pconsole.
- **3** Select [Quick Setup] from [Available Options] list box, and press the Enter key.
- 4 Fill in [Print Server Name], [Printer Name], and [Print Queue Name]. Set the [Type] of the printer to [Other/Unknown], and save them.
- 5 Terminate Pconsole by pressing the Esc key.
- 6 Load the PSERVER.NLM file on the NetWare Server console.

Then, configure the following settings in [NetWare Setting].

Item	Description	Prior check
[IPX Setting]	Select [ON].	
[Ethernet Frame Type]	Select a frame type to be used.	Frame type
[NetWare Print Mode]	Select [Nprinter/Rprinter].	
[Print Server Name]	Enter a print server name to be operated as the Nprint- er/Rprinter (up to 63 characters, excluding / \ :; , * [] < > + = ? .).	The print server name specified in Step 4
[Printer Number]	Enter the Nprinter/Rprinter number.	

In Print Server mode using the NetWare 4.x Bindery Emulation

- ✓ When you use the Bindery Emulation, make sure that the Bindery Emulation has been enabled on the NetWare server.
- ✔ When you select the Print Server mode, the IPX protocol must already be loaded on the NetWare server.
- 1 From the client, log in the NetWare file system as Bindery with the administrator authority.
- 2 Start Pconsole.
- 3 Select [Quick Setup] from [Available Options] list box, and press the Enter key.
- 4 Fill in [Print Server Name], [Printer Name], and [Print Queue Name]. Set the [Type] of the printer to [Other/Unknown], and save them.
- 5 Terminate Pconsole by pressing the Esc key.

Then, configure the following settings in [NetWare Setting].

Item	Description	Prior check
[IPX Setting]	Select [ON].	
[Ethernet Frame Type]	Select a frame type to be used.	Frame type
[NetWare Print Mode]	Select [PServer].	
[Print Server Name]	Enter a print server name to be operated as Pserver (up to 63 characters, excluding / $\;$, * [] < > + = ? .).	The print server name specified in Step 4
[Print Server Pass- word]	Enter a print server password if necessary (up to 63 characters).	
[Polling Interval]	Set a job inquiry interval.	
[Bindery/NDS Set- ting]	Select [NDS/Bindery Setting].	
[File Server Name]	Enter the priority file server name to be used in the Bindery emulation mode (up to 47 characters, excluding \land :; , * [] $< > + = ?$.).	

In NetWare 4.x Remote Printer mode (NDS)

- 1 From the client, log in the NetWare file system with administrator authority.
- 2 Start NWAdmin.
- **3** Select an organization or department container for the print service, and select [Print Services Quick Setup] from the Tools menu.
- 4 Fill in [Print Server Name], [Printer Name], [Print Queue Name], and [Print Queue Volume]. Then, set the [Type] of the printer to [Other/Unknown] and save them.

Ę

5 Load the PSERVER.NLM file on the NetWare Server console.

Then, configure the following settings in [NetWare Setting].

Item	Description	Prior check
[IPX Setting]	Select [ON].	
[Ethernet Frame Type]	Select a frame type to be used.	Frame type
[NetWare Print Mode]	Select [Nprinter/Rprinter].	
[Print Server Name]	Enter a print server name to be operated as the Nprint- er/Rprinter (up to 63 characters, excluding / \ :; , * [] < > + = ? .).	The print server name specified in Step 4
[Printer Number]	Enter the Nprinter/Rprinter number.	

In the NetWare 4.x/5.x/6 Print Server mode (NDS)

- ✔ When you select the Print Server mode, the IPX protocol must already be loaded on the NetWare server.
- 1 From the client, log in the NetWare file system with administrator authority.
- 2 Start NWAdmin.
- 3 Select an organization or department container for the print service, and select [Print Services Quick Setup (non-NDPS)] from the Tools menu.
- 4 Fill in [Print Server Name], [Printer Name], [Print Queue Name], and [Print Queue Volume]. Then, set the [Type] of the printer to [Other/Unknown] and click [Create].

Then, configure the following settings in [NetWare Setting].

Item	Description	Prior check
[IPX Setting]	Select [ON].	
[Ethernet Frame Type]	Select a frame type to be used.	Frame type
[NetWare Print Mode]	Select [PServer].	
[Print Server Name]	Enter a print server name to be operated as Pserver (up to 63 characters, excluding / $\$; , * [] < > + = ? .).	The print server name specified in Step 4
[Print Server Pass- word]	Enter a print server password if necessary (up to 63 characters).	
[Polling Interval]	Set a job inquiry interval.	
[Bindery/NDS Set- ting]	Select [NDS].	
[NDS Context Name]	Enter an NDS context name for print server connection (up to 191 characters, excluding / $\$:; , * [] < > + = ?).	
[NDS Tree Name]	Enter an NDS tree name for print server connection (up to 63 characters, excluding $/ :; , *[] < > + = ?$.).	

```
5
```

For NetWare 5.x/6 Novell Distributed Print Service (NDPS)

- ✓ Before starting the NDPS setting, make sure that an NDPS broker and NDPS manager have already been created and loaded.
- ✓ Make sure that the TCP/IP protocol has been set on the NetWare server, an IP address of this machine has been set, and this machine has already been started.
- 1 From the client, log in the NetWare file system with administrator authority.
- 2 Start NWAdmin.
- **3** Right-click the [Organization] and [Organization unit] containers for printer agent creation, and select [NDPS Printer] from Create.
- 4 Enter a [NDPS Printer Name] in the [Printer Name] field.
- 5 Select [Create a New Printer Agent] in the [Printer Agent Source] field, and click [Create].
- 6 Confirm the printer agent name, and browse and register the NDPS manager in the [NDPS Manager Name] field.
- 7 Set the [Gateway Types] to [Novell Printer Gateway], and register it.
- 8 In the [Configure Novell NDPS for Printer Agent] window, set the Printer to [(None)] and the port hander to [Novell Port Handler], and register the settings.
- 9 Set the [Connection type] to [Remote (LPR on IP)] and register the setting.
- 10 For the host address, enter the IP address of this machine you have configured. Enter [Print] for the printer name, and then press [Finish] to register the settings.
- **11** When printer driver registration windows appear, select [None] for each OS and finish the registration.

5.7.2 [NetWare Status]

In the administrator mode of **PageScope Web Connection**, select [Network] → [NetWare Setting] → [Net-Ware Status].

The current NetWare connection can be checked if necessary.


	🌆 Administrator		Logout ?
	Ready to Scan		
	in Menu (Admin Mode)		3
Network 🔽 Dis	splay		🚛 To Main Menu
► TCP/IP Setting	NetWare Status		
▶ E-mail Setting	Server Name	Queue Name	
LDAP Setting	ServerName1	QueueNameName1	
· · · · · ·	ServerName2	QueueNameName2	
▶ IPP Setting	ServerName3	QueueNameName3	
FTP Setting	ServerName4	QueueNameName4	
•	ServerName5	QueueNameName5	
► SNMP Setting	ServerName6	QueueNameName6	
sMB Setting	ServerName7	QueueNameName7	
Web Service Settings	ServerName8	QueueNameName8	
	ServerName9	QueueNameName9	
Bonjour Setting	ServerName10	QueueNameName10	
NetWare Setting			
▶ NetWare Setting			
NetWare Status			
▶ AppleTalk Setting			
Network Fax Setting			
WebDAV Settings			
OpenAPI Setting			
TCP Socket Setting			
IEEE802.1X Authentication Setting			
▶ LLTD Setting			
Bluetooth Setting			
	_		
:][

5.8 Using the WS print function

Configure the following settings when you print data using the Web services function of Windows Vista/Server 2008.

The Web services function can automatically detect this network-connected machine and install it as a WS printer. When you select this machine (installed as the WS printer), you can use the HTTP for communication and print data.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

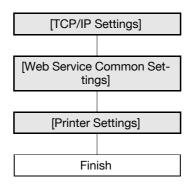

Reference


For details on how to install the printer driver, refer to the [User's Guide Print Operations].

5.8.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

5.8.2 [Web Service Common Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] ►► [Web Service Settings] ►► [Web Service Common Settings].

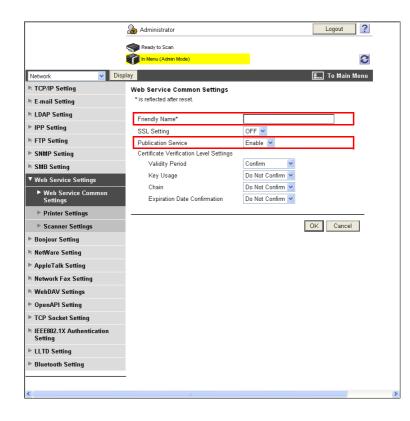

bizhub C360/C280/C220

Item	Description	Prior check
[Friendly Name]	Enter a Friendly Name (up to 62 characters).	
[Publication Serv- ice]	If you use this machine in an environment where NetBIOS is disabled or only the IPv6 protocol communication is used by the Windows Vista or Server 2008 system, set this item to [Enable].	

5.8.3 [Printer Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [Web Service Settings] → [Printer Settings].

	🌆 Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	0
Network	Display	E To Main Menu
► TCP/IP Setting	Printer Settings	
⊫ E-mail Setting	* is reflected after reset.	
▶ LDAP Setting	Print Function	ON V
▶ IPP Setting	Printer Name*	
▶ FTP Setting	Printer Location*	
► SNMP Setting	Printer Information*	
SMB Setting		
▼ Web Service Settings		OK Cancel
Web Service Common Settings		
Printer Settings		
Scanner Settings		
▶ Bonjour Setting		
▶ NetWare Setting		
AppleTalk Setting		
Network Fax Setting		
WebDAV Settings		
OpenAPI Setting		
TCP Socket Setting		
IEEE802.1X Authentication Setting		
LLTD Setting		
Bluetooth Setting		

Item	Description	Prior check
[Print Function]	Select [ON].	
[Printer Name]	Enter a printer name (up to 63 characters, excluding ! $\$ and ,).	
[Printer Location]	Enter a printer location (up to 63 characters).	
[Printer Informa- tion]	Enter printer information (up to 63 characters).	

5.9 Using Data Saved in a Cellular Phone or PDA


Configure settings to wirelessly connect this machine to a cellular phone or PDA with the Bluetooth function installed and to use data stored in such a terminal.

You can print data saved in a cellular phone or PDA or save data in a User Box of this machine. Once data is saved in a User Box, it can be sent to an external device if necessary.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

Reference

• To use this function, install the optional Local Interface Kit EK-605 in this machine.

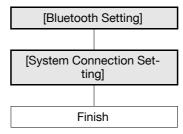

Reference

For details on printing data saved in a cellular phone or PDA or saving data in a User Box of this machine, refer to the [User's Guide Print Operations]. For details on using the saved data in User Boxes of this machine, refer to the [User's Guide Box Operations].

5.9.1 [Bluetooth Setting]

In the administrator mode of PageScope Web Connection, select [Network] >> [Bluetooth Setting].

	Administrator		Logout ?
	Ready to Scan		
	in Menu (Admin Mode)		3
Network 🕑 D	isplay		🚛 To Main Menu
► TCP/IP Setting	Bluetooth Setting		
▶ E-mail Setting	Bluetooth	Enable 💌	
▶ LDAP Setting			
▶ IPP Setting			OK Cancel
► FTP Setting			
► SNMP Setting			
▶ SMB Setting			
Neb Service Settings			
Bonjour Setting			
▶ NetWare Setting			
AppleTalk Setting			
Network Fax Setting			
▶ WebDAV Settings			
OpenAPI Setting			
TCP Socket Setting			
IEEE802.1X Authentication Setting			
► LLTD Setting			
▶ Bluetooth Setting			
	_		
<			\$

_	Item	Description	Prior check
-	[Bluetooth]	Select [Enable].	

5.9.2 [System Connection Setting]

In the administrator mode of **PageScope Web Connection**, select[System Settings]**>>**[System Connection Setting].

	Administrator		Logout ?
	Ready to Scan		
	in Menu (Admin Mode)		3
System Settings 💽 Disp	blay		🛄 To Main Menu
▶ Machine Setting	System Connection Setting		
Register Support Information	Prefix/Suffix Automatic Setting	OFF 🛩	
▶ Network TWAIN	Application Connection Setting		
▶ User Box Setting	PageScope My Panel Manager	OFF 🛩	
Stamp Settings	My Spool	OFF 🛩	
Blank Page Print Settings	Bluetooth Print Settings	ON 🛩	
Skip Job Operation Settings			
▶ Flash Display Setting			OK Cancel
System Connection Setting			
Display Setting			
Outline PDF Setting			

Item	Description	Prior check
[Bluetooth Print Settings]	Select [ON]. This item is not displayed when [Bluetooth] is set to [Disa- ble].	

bizhub C360/C280/C220



6 Sending and receiving network faxes

6.1 Sending Internet faxes


Configure settings to send Internet fax.

Internet faxing sends and receives the read original as an E-mail attachment file (TIFF format) via Intranet or Internet. It also allows you to send and receive a colored original.

The Internet fax function establishes a communication via Intranet or Internet; therefore, you can reduce the communication cost compared with a general Fax communication when frequently handling remote or overseas communications.

If necessary, you can combine POP before SMTP authentication, APOP authentication, SMTP authentication, and SSL/TLS encryption to have a communication.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

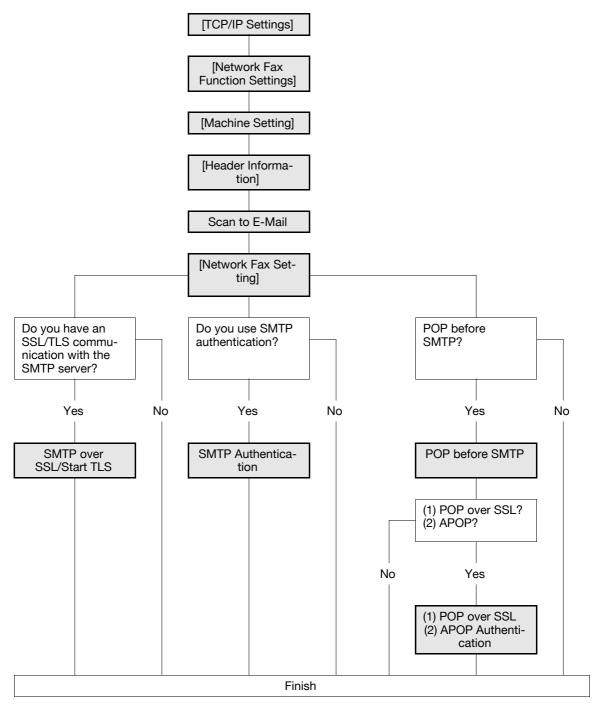

Reference

- To use the Internet fax function, ask your service representative to configure settings. For details, contact your service representative.
- For details on how to register Internet fax destinations, refer to page 11-7.
- For details on the Internet fax function, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

6.1.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

bizhub C360/C280/C220

6.1.2 [Network Fax Function Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [Network Fax Setting] → [Network Fax Function Settings].

	& Administrator	Logout
	Ready to Scan	
	In Menu (Admin Mode)	
Network 🔽	Display	E To Main M
► TCP/IP Setting	Network Fax Function Settings	
⊫ E-mail Setting	IP Address Fax Function Settings	ON 🐱
LDAP Setting	SIP Fax Function Settings	OFF 🗸
▶ IPP Setting		after changing the SIP Fax Function Settings.)
▶ FTP Setting	IP Address	
► SNMP Setting	Port Number	(0-65535)
SMB Setting	I-Fax Function Setting	ON 🔽
-		
Neb Service Settings		OK Cancel
Bonjour Setting		
▶ NetWare Setting		
AppleTalk Setting		
▼ Network Fax Setting		
SMTP TX Setting		
► SMTP RX Setting		
Network Fax Function Settings		
⊫ WebDAV Settings		
▶ OpenAPI Setting		
TCP Socket Setting		
IEEE802.1X Authentication Setting		
▶ LLTD Setting		
▶ Bluetooth Setting		
<		

Item	Description	Prior check
[I-Fax Function Setting]	Select [ON].	

6.1.3 [Machine Setting]

In the administrator mode of PageScope Web Connection, select [System Settings] - [Machine Setting].

	🌆 Administrator	Logout ?
	Ready to Scan In Menu (Admin Mode) In Menu (Admin Mode)	Ø
System Settings 🛛 🔽 Disp	lay	E To Main Menu
Machine Setting	Machine Setting	
Register Support Information	Device Location	
▶ Network TWAIN	Administrator Registration	
▶ User Box Setting	Administrator Name	
Stamp Settings	E-mail Address	
▶ Blank Page Print Settings	Extension No. Input Machine Address	
Skip Job Operation Settings	Device Name	
▶ Flash Display Setting	E-mail Address	
System Connection Setting		
▶ Display Setting		OK Cancel
Outline PDF Setting		ont ounder

Item	Description	Prior check
[Device Name]	Enter the device name (up to 80 characters). This name is used as a part of an Internet fax subject name.	
[E-mail Address]	Enter the E-mail address of this machine (up to 320 char- acters). This setting is required when sending Internet faxes.	E-mail Address

6.1.4 [Header Information]

Register sender information for fax sending. For details, refer to page 14-19.

6.1.5 Scan to E-Mail

Configure settings to send an E-mail. For details, refer to page 4-9.

6.1.6 [Network Fax Setting]

(This menu item will not be displayed if the Network Fax function is not available.)

[I-Fax Advanced Setting]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ► [Network Fax Setting] ► [I-Fax Advanced Setting].

(This menu item will not be displayed if the Internet Fax function is not available.)

	ゐ Administrator		Logout
	Ready to Scan		
	n Menu (Admin Mode)		
Fax Settings 🛛 🔽 Disp	lay		E To Main M
Header/Footer Position	I-Fax Advanced Setting		
Line Parameter Setting	MDN Request	ON 🔽	
▶ TX/RX Settings	DSN Request	OFF 🛩	
Function Setting	MDN Response	ON 💌	
PBX Connection Setting	MDN/DSN Response Monitorin	<u> </u>	
Report Settings	Monitoring Time	24 Hour(1-99)	
Multi Line Settings	Maximum Resolution	Ultra Fine 🔽	
Multi Line Setting Network Fax Setting	Add Content-Type Information	OFF 🛩	
¥			
Black Compression Level			OK Cancel
Color/Grayscale Multi- Value Compression Method			
Internet Fax RX Ability			
► I-Fax Advanced Setting			
IP Address Fax Operation Settings			
Header Information			

Item	Description	Prior check
[MDN Request]	Select [ON]. You can receive an MDN response when an Internet fax is printed in the receiver side. By receiving an MDN response, you can obtain informa- tion on the reception capability of the remote machine. When an MDN response is received from a remote ma- chine that is already registered in the address book, the in- formation on the reception capability that has been obtained will be overwritten.	
[DSN Request]	Select [ON]. You can receive a DSN response when an Internet fax ar- rives in the mail server of the receiver side. The DSN request is not issued when MDN is set to [ON].	
[MDN/DSN Re- sponse Monitoring Setting]	Select this check box to specify the MDN/DSN response monitoring time.	
[Monitoring Time]	Enter the MDN/DSN response receiving wait time. An MDN/DSN response is ignored if it does not reach within this wait time.	
[Maximum Resolu- tion]	Select the highest resolution of read or transfer logs.	
[Add Content-Type Information]	Select whether to add Content-Type information to the MIME header.	



[Black Compression Level]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ► [Network Fax Setting] ► [Black Compression Level].

	🎥 Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		C
Fax Settings 🛛 🔽 Dis	play		🚛 To Main Menu
Header/Footer Position	Black Compression Level		
▶ Line Parameter Setting	Black Compression Level	MMR 🚩	
► TX/RX Settings			
Function Setting			OK Cancel
PBX Connection Setting			
Report Settings			
▶ Multi Line Settings			
▼ Network Fax Setting			
Black Compression Level			
Color/Grayscale Multi- Value Compression Method			
Internet Fax RX Ability			
► I-Fax Advanced Setting			
IP Address Fax Operation Settings			
Header Information			

Item	Description	Prior check
[Black Compres- sion Level]	Select the default setting of the black compression level in the black and white sending mode.	

[Color/Grayscale Multi-Value Compression Method]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ► [Network Fax Setting] ► [Color/Grayscale Multi-Value Compression Method].

	🌆 Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		2
Fax Settings 🛛 🔽 Dis	olay		🔝 To Main Menu
Header/Footer Position	Color/Grayscale Multi-Value Co	mpression Method	
Line Parameter Setting	Color/Grayscale Multi-Value Compression Method	JPEG (Color)	~
► TX/RX Settings	Compression Method		
Function Setting			OK Cancel
PBX Connection Setting			Cancer
▶ Report Settings			
▶ Multi Line Settings			
▼ Network Fax Setting			
Black Compression Level			
 Color/Grayscale Multi- Value Compression Method 			
▶ Internet Fax RX Ability			
► I-Fax Advanced Setting			
IP Address Fax Operation Settings			
Header Information			

Item	Description	Prior check
[Color/Grayscale Multi-Value Com- pression Method]	Select the default setting of the color/grayscale multi-val- ue compression method in the color sending mode.	

6.1.7 SMTP over SSL/Start TLS

Configure the settings for SMTP over SSL or Start TLS. For details, refer to page 4-10.

6.1.8 SMTP Authentication

Configure SMTP authentication settings. For details, refer to page 4-12.

6.1.9 POP before SMTP

Configure the settings for POP before SMTP. For details, refer to page 4-13.

6.1.10 POP over SSL

Configure the settings for POP over SSL. For details, refer to page 4-14.

6.1.11 APOP Authentication

Configure APOP authentication settings. For details, refer to page 4-16.

Configure settings to receive Internet faxes.


To use the Internet fax function, ask your service representative to configure settings. For details, contact your service representative.

Internet faxing sends and receives the read original as an E-mail attachment file (TIFF format) via Intranet or Internet. It also allows you to send and receive a colored original.

The Internet fax function establishes a communication via Intranet or Internet; therefore, you can reduce the communication cost compared with a general Fax communication when frequently handling remote or overseas communications.

This function performs SSL/TLS encryption or APOP authentication when receiving Internet faxes, assuring more secure communications.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

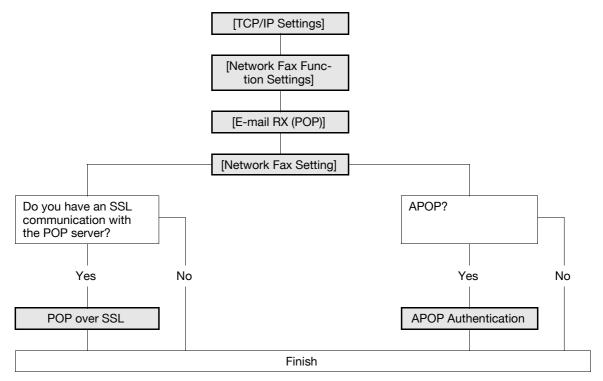

Reference

For details on the Internet fax function, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

6.2.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

6.2.2 [Network Fax Function Settings]

Enables the Internet fax function of this machine. For details, refer to page 6-4.

6.2.3 [E-mail RX (POP)]

In the administrator mode of **PageScope Web Connection**, select [Network] → [E-mail Setting] → [E-mail RX (POP)].

	🎥 Administrator	Logout
	Ready to Scan	
	n Menu (Admin Mode)	í í
Network 🔽 Dis	play	💷 To Main Men
► TCP/IP Setting	E-mail RX (POP)	
▼ E-mail Setting	E-mail RX Setting	ON 💌
► E-mail RX (POP)	POP Server Address	Please check to enter host name.
▶ E-mail TX (SMTP)		0.0.0.0
► S/MIME	Login Name	
LDAP Setting	Password is changed.	
▶ IPP Setting	Password	
► FTP Setting	APOP Authentication	OFF 💌
•	MDN Response	ON 🗸
► SNMP Setting	Connection Timeout	30 🕶 sec.
▶ SMB Setting	Port Number	110 (1-65535)
Web Service Settings	Use SSL/TLS	
▶ Bonjour Setting	Port No. (SSL)	995 (1-65535)
NetWare Setting	Certificate Verification Level Settings	
AppleTalk Setting	Validity Period	Confirm
Network Fax Setting	CN	Do Not Confirm 💌
NebDAV Settings	Key Usage	Do Not Confirm 💌
, and the second s	Chain	Do Not Confirm 💌
OpenAPI Setting	Expiration Date Confirmation	Do Not Confirm 🛩
TCP Socket Setting	Check for New Messages	
IEEE802.1X Authentication Setting	Polling Interval	15 min. (1-60)
▶ LLTD Setting		OK Cancel
Bluetooth Setting		OK Cancer

Item	Description	Prior check
[E-mail RX Setting]	Select [ON].	
[POP Server Ad- dress]	Enter the POP server address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Login Name]	Enter the login name of the POP server (up to 63 charac- ters).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the POP server (up to 15 characters).	
[Connection Time- out]	Specify the timeout period for a communication with a server.	
[Port Number]	Enter a port number. Default setting: 110	Server port number
[Check for New Messages]	Select this check box to automatically receive an E-mail. To manually receive an E-mail, press [Receive I-Fax] in the Fax/Scan mode.	
[Polling Interval]	Enter the interval to check the arrival by automatically con- necting to the POP server.	

6.2.4 [Network Fax Setting]

(This menu item will not be displayed if the Network Fax function is not available.)

[I-Fax Advanced Setting]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ► [Network Fax Setting] ► [I-Fax Advanced Setting].

(This menu item will not be displayed if the Internet Fax function is not available.)

	🌆 Administrator		Logout 🥐
	Ready to Scan		
	n Menu (Admin Mode)		C
Fax Settings 🗾 Di	splay		💷 To Main Menu
Header/Footer Position	I-Fax Advanced Setting		
Line Parameter Setting	MDN Request	ON 🔽	
▶ TX/RX Settings	DSN Request	OFF 🛩	
▶ Function Setting	MDN Response	ON 🔽	
PBX Connection Setting	MDN/DSN Response Monitoring	g Setting	
Report Settings	Monitoring Time	24 Hour(1-99)	
Multi Line Settings	Maximum Resolution	Ultra Fine 🔽	
	Add Content-Type Information	OFF 🛩	
▼ Network Fax Setting			
Black Compression Level			OK Cancel
Color/Grayscale Multi- Value Compression Method			
Internet Fax RX Ability			
▶ I-Fax Advanced Setting			
IP Address Fax Operation Settings			
Header Information			

Item	Description	Prior check
[MDN Response]	Select [ON] to respond to an MDN request (reception con- firmation request) from the remote side.	

```
6
```

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ► [Network Fax Setting] ► [Internet Fax RX Ability].

(This menu item will not be displayed if the Internet Fax function is not available.)

Reference

• The recipient is notified of the RX Ability specified here when this machine sends an MDN response. To enable the RX Ability, set [MDN Response] to [ON] in [I-Fax Advanced Setting].

	🍇 Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	2
Fax Settings 🛛 🔽	Display	E To Main Menu
Header/Footer Position	Internet Fax RX Ability	
Line Parameter Setting	Compression Type	MH
TX/RX Settings		MR MR
► Function Setting		MMR
-		JPEG (Gray Scale)
PBX Connection Setting		JPEG (Color)
Report Settings	Paper Size	M A4
▶ Multi Line Settings		☑ B4
▼ Network Fax Setting		✓ A3
Black Compression Level	Resolution	₩ 200×100
•		₩ 200×200
Color/Grayscale Multi- Value Compression		✓ 400×400
Method		□ 600×600
Internet Fax RX Ability		
▶ I-Fax Advanced Setting		OK Cancel
IP Address Fax Operation Settings		
Header Information		

Item	Description	Prior check
[Compression Type]	Select the check box of the compression format that is available for this machine to receive Internet fax. All the compression formats available for this machine are selected in Initial Setting.	
[Paper Size]	Select the check box of the paper size that is available for this machine to receive Internet faxes. All the paper sizes available for this machine are selected by default.	
[Resolution]	Select the check box of the resolution that is available for this machine to receive Internet faxes.	

6.2.5 POP over SSL

Configure the settings for POP over SSL. For details, refer to page 4-14.

6.2.6 APOP Authentication

Configure APOP authentication settings. For details, refer to page 4-16.

bizhub C360/C280/C220



Configure settings to send and receive IP address faxes.

IP Address Fax means FAX that is available on the IP network. To send a fax, specify the IP address, host name, or E-mail address of the remote machine.

The SMTP protocol is used to send and receive IP address faxes. Because the SMTP server function of this machine sends and receives data, no server is required when sending or receiving a fax by specifying the IP address of the remote machine. (However, the DNS server is required to send or receive a fax by specifying the host name or E-mail address.)


This machine supports the following two IP address fax operation modes. Switch the operation mode according to your environment.

- [Mode 1]: This mode allows communication between Konica Minolta models capable of transmitting IP address faxes, and between models compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). However, because a unique method developed by Konica Minolta is used to send a color fax, only the Konica Minolta models can receive such a color fax. This machine can receive color faxes in any mode.
- [Mode 2]: This mode allows communication between Konica Minolta models capable of transmitting IP address faxes, and between models compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). The method compatible with the Direct SMTP standard (Profile-C format) is used to send a color fax. This machine can receive color faxes in any mode.

To use the IP Address Fax function, check the following.

- Install the optional Fax Kit FK-502 in this machine.
- To use the IP Address Fax function, ask your service representative to configure settings. For details, contact your service representative.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

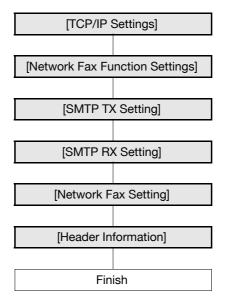

Reference

For details on how to register IP address fax destinations refer to page 11-7.

For details on IP Address Fax, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

6.3.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

6.3.2 [Network Fax Function Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [Network Fax Setting] → [Network Fax Function Settings].

	凝 Administrator		Logout ?
	Ready to Scan		
	n Menu (Admin Mode)		2
Network 🔽 🖸	lisplay		I To Main Menu
► TCP/IP Setting	Network Fax Function Settings		
⊫ E-mail Setting	IP Address Fax Function Settings	ON 🛩	
▶ LDAP Setting	SIP Fax Function Settings	OFF 🗸	
▶ IPP Setting	(Turn the machine power OFF and ON	after changing the SIP Fax F	unction Settings.)
► FTP Setting	IP Address		
► SNMP Setting	Port Number	(0-65535)	
SMB Setting	I-Fax Function Setting	ON 🛩	
Neb Service Settings			
-			OK Cancel
Bonjour Setting			
▶ NetWare Setting			
AppleTalk Setting			
▼ Network Fax Setting			
► SMTP TX Setting			
► SMTP RX Setting			
 Network Fax Function Settings 			
⊫ WebDAV Settings			
OpenAPI Setting			
TCP Socket Setting			
IEEE802.1X Authentication Setting			
▶ LLTD Setting			
Bluetooth Setting			
<			

Item	Description	Prior check
[IP Address Fax Function Settings]	Select [ON].	

6.3.3 [SMTP TX Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] → [Network Fax Setting] → [SMTP TX Setting].

	🌆 Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	C
Network 🔽 Di	splay	E To Main Menu
► TCP/IP Setting	SMTP TX Setting	
▶ E-mail Setting	Port Number	25 (1-65535)
▶ LDAP Setting	Connection Timeout	60 sec. (30-300)
► IPP Setting		
▶ FTP Setting		OK Cancel
► SNMP Setting		
R SMB Setting		
Neb Service Settings		
▶ Bonjour Setting		
▶ NetWare Setting		
AppleTalk Setting		
▼ Network Fax Setting		
► SMTP TX Setting		
SMTP RX Setting		
Network Fax Function Settings		
RebDAV Settings		
▶ OpenAPI Setting		
► TCP Socket Setting		
IEEE802.1X Authentication Setting		
▶ LLTD Setting		
▶ Bluetooth Setting		
	_	
<		

Item	Description	Prior check
[Port Number]	Enter a port number. Default setting: 25	Required port number
[Connection Time- out]	Enter the timeout period for a communication with a server.	

6.3.4 [SMTP RX Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] → [Network Fax Setting] → [SMTP RX Setting].

	2 a	Administrator			Logout ?
		Ready to Scan			
	Ğ	In Menu (Admin Mode)			3
Network 💌	Display				E To Main Menu
► TCP/IP Setting	S	MTP RX Setting			
▶ E-mail Setting		SMTP RX	ON	*	
▶ LDAP Setting		Port Number	25	(1-65535)	
► IPP Setting		Connection Timeout	300	sec. (5-1000)	
▶ FTP Setting	-				
► SNMP Setting					OK Cancel
▶ SMB Setting					
▶ Web Service Settings					
▶ Bonjour Setting					
▶ NetWare Setting					
AppleTalk Setting					
▼ Network Fax Setting					
► SMTP TX Setting					
► SMTP RX Setting					
Network Fax Function Settings					
▶ WebDAV Settings					
OpenAPI Setting					
TCP Socket Setting					
IEEE802.1X Authentication Setting					
▶ LLTD Setting					
Bluetooth Setting					
<					


Item	Description	Prior check
[SMTP RX]	Select [ON].	
[Port Number]	Enter a port number. Default setting: 25	Required port number
[Connection Time- out]	Enter the timeout period for a communication with a server.	

6.3.5 [Network Fax Setting]

(This menu item will not be displayed if the Network Fax function is not available.)

[Black Compression Level]


In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ► [Network Fax Setting] ► [Black Compression Level].

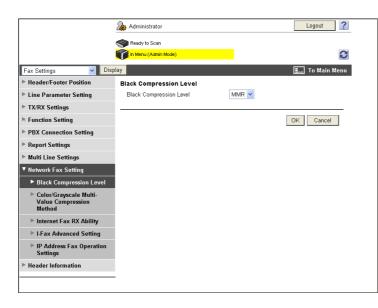

Item	Description	Prior check
[Black Compres- sion Level]	Select the default setting of the black compression level in the black and white sending mode.	

[Color/Grayscale Multi-Value Compression Method]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ►> [Network Fax Setting] ►> [Color/Grayscale Multi-Value Compression Method].

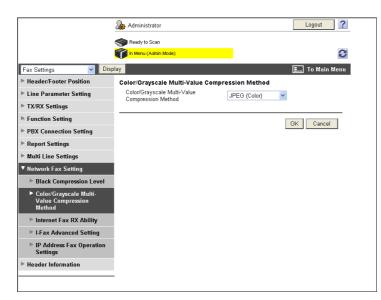


Item	Description	Prior check
[Color/Grayscale Multi-Value Com- pression Method]	Select the default setting of the color/grayscale multi-val- ue compression method in the color sending mode.	



[IP Address Fax Operation Settings]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] >> [Network Fax Setting] >> [IP Address Fax Operation Settings].

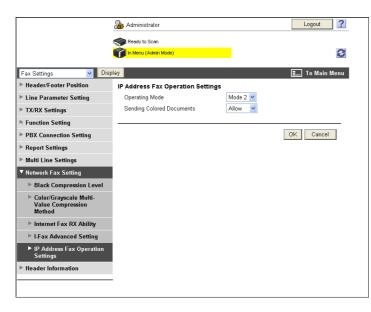

Item	Description	Prior check
[Operating Mode]	 Select the operation mode for IP address fax according to your environment. [Mode 1]: This mode allows communication between Konica Minolta models capable of transmitting IP address faxes, and between models compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). However, because a unique method developed by Konica Minolta is used to send a color fax, only the Konica Minolta models can receive such a color fax. This machine can receive color faxes in any mode. [Mode 2]: This mode allows communication between Konica Minolta models capable of transmitting IP address faxes, and between models compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). The method compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). The method compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). The method compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). The method compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). The method compatible with the Direct SMTP standard defined by CIAJ (Communications and Information Network Association of Japan). The method compatible with the Direct SMTP standard defined by CIAJ (Profile-C format) is used to send a color fax. This machine can receive color faxes in any mode. 	
[Sending Colored Documents]	Select whether or not to accept sending of colored origi- nals when selecting [Mode 2] for [Operating Mode]. If you select [Restrict], color originals are converted to black and white before sending. To send a fax to a ma- chine that does not support color reception based on the Direct SMTP standard, select [Restrict].	Can the recipient machine receive a color fax using the Direct SMTP stand- ard?

6.3.6 [Header Information]

Register sender information for fax sending. For details, refer to page 14-19.

Using User Authentication

7 Using User Authentication


7.1 Restricting users of this machine (MFP authentication)

Configure settings to restrict users who can use this machine by MFP authentication.

You can configure the user authentication and account track settings to restrict use of this machine. Specify user authentication when managing individual users, and specify account track when managing a group or multiple users.

You can use a combination of user authentication and account track for management of each user for each department. You can use this function to assign the counter to both the department and user counters, and to aggregate the resulting values of both counters.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

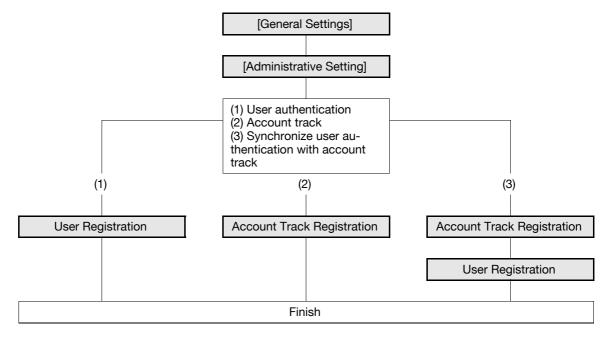

7.1.1 [General Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] ►> [General Settings].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

General Settings Ceneral Settings User Authentication Setting User Authentication Account Track Settings Public User Access External Server Settings Ticket Hold Time Setting (Active Directory) Public User Box Setting Account Track User/Account Common Setting Account Track String Synchronize User Authentication & Account Track Number of Counters Assigned for Users Synchronize Scan to Authorized Folder Setting When Number of Jobs Reach		ゐ Administrator	Logout ?
User Auth/Account Track Display To Main Ment General Settings General Settings User Authentication Setting Luser Authentication Setting User Authentication ON (MFP) Account Track Settings Ticket Hold Time Setting (Active Dimetory) Minute (1-60) Public User Rox Setting Account Track ON User/Account Common Setting Account Track Input Method Synchronize User Authentication & Account Track Input Method Synchronize Ison (1-999) Scan to Authorized Folder Settings When Number of Jobs Reach Sting Input Method Sting Input In		Ready to Scan	
> General Settings Ceneral Settings > User Authentication Setting User Authentication ON (MFP) > Account Track Settings Public User Access Restrict > External Server Settings Ticket Hold Time Setting (Active Directory) Directory) > Public User Box Setting Account Track ON > User/Account Common Setting Account Track Input Method Synchronize User Authentication & Account Track Synchronize User Authentication & Account Track > Scan to Home Settings Number of Counters Assigned for Users Boo (1-999) > Stein to Authorized Folder Settings When Number of Jobs Reach Stein lob (1-990)		n Menu (Admin Mode)	3
> User Authentication Setting User Authentication ON (MFP) > Account Track Settings Public User Access Restrict > External Server Settings Ticket Hold Time Setting (Active Directory) Directory) > Public User Box Setting Account Track ON > User/Account Common Setting Account Track ON > Stan to Home Settings Synchronize User Authentication & Number of Counters Assigned for Users Spon (1-999) > Scan to Authorized Folder Settings When Number of Jobs Reach String to the Setting	User Auth/Account Track 🔽 Dis	splay	💷 To Main Menu
Account Track Settings Public User Access Restrict External Server Settings Ticket Hold Time Setting (Active Directory) E0 Minute (1-60) Public User Box Setting Account Track ON User/Account Common Setting Account Track Input Method Synchronize User Authentication & Account Track Synchronize User Authentication & Account Track Scan to Home Settings Number of Counters Assigned for Users 500 (1-999) Setting When Number of Jobs Reach Strin to Ide Setting	General Settings	General Settings	
> Account Track Settings Tracket Hold Time Setting (Active Directory) Solution Track > Public User Box Setting Account Track ON > User/Account Common Setting Account Track Input Method Account Name & Password Setting Scan to Home Settings Number of Counters Assigned for Users Spic from (1-999) Setting When Number of Jobs Reach String to the setting to the sett	User Authentication Setting	User Authentication	ON (MFP)
External Server Settings Directory) PU Minute (1-50) Public User Box Setting Account Track ON User/Account Common Setting Account Track Input Method Synchronize User Authentication & Account Track ON Scan to Home Settings Number of Counters Assigned for Users Spinchronize Setting When Number of Jobs Reach String to we have a strin	Account Track Settings	Public User Access	Restrict 👻
User/Account Common Account Track Input Method Account Name & Password Setting Synchronize User Authentication & Account Track Synchronize I vertice Scan to Humor Settings Number of Counters Assigned for Users 500 (1-999) Settings When Number of Jobs Reach String to the vertice	External Server Settings		60 Minute (1-60)
Setting Synchronize User Authentication & Account Track Synchronize Scan to Authorized Folder Settings Vers 5000 (1-999) When Number of Jobs Reach String Indox	Public User Box Setting	Account Track	ON 💌
Scan to Home Settings Scan to Authorized Folder Winner of Counters Assigned for Users Winner of Jobs Reach Users		Account Track Input Method	Account Name & Password 🗸
Scan to Authorized Folder Settings When Number of Jobs Reach Stein Inthe Weight State	•		Synchronize
Settings When Number of Jobs Reach	-		500 (1-999)
INGAILIGHT		When Number of Jobs Reach Maximum	Skip Job 💌
			OK Cancel
OK Cancel			

Item	Description	Prior check
[User Authentica- tion]	Select [ON (MFP)].	
[Public User Ac- cess]	Select whether to allow the public user access. If [ON (With Login)] is selected, the public user can use this machine by selecting [Public User Access] in the login page to log in to the machine. If [ON (Without Login)] is selected, the public user can use this machine without logging in to the machine in the login page.	Do you permit the public user access?
[Account Track]	To enable account track, select [ON].	Do you use the ac- count track func- tion?
[Account Track In- put Method]	To use the account track function, select its authentication method. This setting is required when you only use the account track function.	
[Synchronize User Authentication & Account Track]	To synchronize user authentication with account track and manage users for each account track, select [Synchro- nize]. Once you specify the account name of the user at user registration, you will be bale to log in by entering only the user name. If you have omitted the account name, the user must specify the account name when logging in for the first time. The account name that the user specify at the first login time will be registered as the account name of the user.	Do you synchronize user authentication with account track?
[Number of Counters As- signed for Users]	Enter a number of user counters to be assigned if user au- thentication and account track are enabled. You can aggregate the counter by user or account track, and assign up to 1,000 counters to users and account tracks. For example, if the number of user counters to be assigned is set to 950, you can register up to 50 account tracks.	
[When Number of Jobs Reach Maxi- mum Skip Job Stop Job]	Select the operation that is performed when the job count of each user or department has reached its limit. This limit must be set during user registration or account track registration.	

Reference

● If [Enhanced Security Mode] is enabled, you cannot select [OFF] in [General Settings] ► [User Authentication]. Also, you cannot allow the public user access.

7.1.2 [Administrative Setting]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] >> [User Authentication Setting] >> [Administrative Setting].

(This menu item will not be displayed if user authentication is disabled.)

Administrator	Logout	?
In Menu (Admin Mode)		
V		C
nlav		
		inu
ID & Print	OFF 💌	
Public User	Print Immediately 🔽	
ID & Print Operation Settings	Print All Jobs 👻	
Default Operation Selection	Begin Printing 🔽	
		_
	OK Cancel	
	Public User ID & Print Operation Settings	Administrative Setting ID & Print OFF Y Public User Print Immediately Y ID & Print Operation Settings Print All Jobs Y Default Operation Selection Begin Printing Y

Item	Description	Prior check
[ID & Print]	Select whether to process all print jobs requested from a registered user as ID & print jobs. If you select [ON], all print jobs requested from a regis- tered user are processed as ID & print jobs even when [ID & Print] is not enabled on the printer driver. If you select [OFF], print jobs are processed as ID & print jobs only when [ID & Print] is enabled on the printer driver. A print job requested from a registered user is processed as a normal one if [ID & Print] is not enabled on the printer driver.	Do you want to proc- ess all print jobs re- quested from a registered user as ID & Print jobs?
[Public User]	Select the operation required when receiving a job without authentication information (a job for which printing is in- structed while user authentication or account track is not enabled on the printer driver) or receiving a public user's job. If you select [Print Immediately], the received job is printed as it is. If you select [Save], the received job is saved in the ID & Print User Box.	
[ID & Print Opera- tion Settings]	Select the operating mode when using the ID & Print func- tion on an optional Authentication Unit. This item is dis- played when the optional Authentication Unit is installed. Select [Print All Jobs] to print all jobs of the target user that are saved in the ID & Print User Box by one authenti- cation operation. Select [Print Each Job] to print one job of the target user that is saved in the ID & Print User Box by one authentica- tion operation.	

Item	Description	Prior check
[Default Operation Selection]	Select the default operation you want to apply after Au- thentication has been completed on the authentication unit (success in login). If you select [Begin Printing], ID & print jobs are executed after authentication has been completed. If you select [Print & Access], ID & print jobs are executed after authentication has been completed, and you can log in to the basic window. If you select [Access], you can log in to the basic window after authentication has been completed. In this case, ID & print jobs are not executed.	

Reference

• For details on the ID & print function, refer to the [User's Guide Print Operations].

7.1.3 User Registration

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] → [User Authentication Setting] → [User Registration] → [New].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

	灥 Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	3
	-	
	play	🚛 To Main Menu
General Settings	User Registration	
▼ User Authentication Setting	No. © Use opening number	
User Registration	C Input directly	(1-500)
Default Function Permission	User Name	(1-500)
▶ Public User	E-mail Address	
Administrative Setting	User Password	
	Retype User Password	
 Account Track Settings External Server Settings 	Account Name	
-		Search from List
Public User Box Setting		T
User/Account Common Setting		Registered Account Name
Scan to Home Settings	0.71	
Scan to Authorized Folder	Specify Icon	Search from List
Settings		Search norm List
	-	Registered icon
		1
		40
	Temporarily stop use	Continue Job 🗸
	remporany stop use	Courinde aon
	Function Permission	
	Сору	Allow
	Scan	Allow V
	Save to External Memory	Restrict V
	External Memory Document So	
	Fax Print	Allow ¥
	User Box	Allow V
	Print Scan/Fax TX	Allow Y
	Manual Destination Input	Allow
	Mobile/PDA	Restrict V
	Biometric/IC Card Information	Restrict ¥
	Registration	Treatility -
	Output Permission(Print)	
	Color	Allow 🔽
	Black	Allow 👻
	Output Permission(TX)	
	Color	Allow
	Max. Allowance Set	
	Total Allowance	
	Total	
	1	(1-9999999)
	Individual Allowance	
	1	(1-9999999)
	🗆 Black	
	1	(1-9999999)
	Box Administration	· · ·
	Box Count	
		(0-1000)
	1	
	Limiting Access to Destinations	
	Limiting Access to Destinations	Caracter from Unit
		Search from List
		Search from List Registered Reference Group Number
		Registered Reference Group Number
	Reference Allowed Group	
		Registered Reference Group Number
	Reference Allowed Group	Registered Reference Group Number
	Reference Allowed Group	Registered Reference Group Number

Item	Description	Prior check
[No.]	Select a registration numbering system. If you specify the registration number, enter the number directly.	
[User Name]	Enter a user name (up to 64 characters).	

Item	Description	Prior check
[E-mail Address]	Enter the E-mail address of the user (up to 320 charac- ters).	
[User Password is changed.]	Select this check box to change the password. This item is displayed when editing the registered informa- tion.	
[User Password]	Enter a password (up to 64 characters, excluding space and ").	
[Retype User Pass- word]	Reenter the password for confirmation (up to 64 characters).	
[Account Name]	Enter an account name of the user. Before you specify an account name, you must register the account. This item is displayed if user authentication and account track are synchronized. If you have omitted the account name, the user must specify the user and account name when the user log in for the first time. The account name that the user specify at the first login time will be registered as the account name of the user. If the account information is changed after the account name has been specified, the user and the account will be dissociated.	
[Specify Icon]	From [Search from List], select an icon for the user.	
[Temporarily stop use]	Select whether to temporarily disable a registered user. This item is available when temporarily disabling regis- tered users without deleting them. If you select [Stop Job], the target user cannot log in to or use this machine. This function is available when the MFP authentication is enabled.	
[Function Permis- sion]	Specify whether to permit [Copy], [Scan], [Save to External Memory], [External Memory Document Scan], [Fax], [Print], [User Box], [Print Scan/Fax TX], [Manual Destina- tion Input], [Mobile/PDA], and [Biometric/IC Card Informa- tion Registration].	
[Output Permis- sion(Print)]	Select whether to allow Color and Black printing.	
[Output Permis- sion(TX)]	Select whether to allow the user to send color images.	
[Max. Allowance Set]	Specify the maximum numbers of printed sheets and User Boxes. To specify the limit, select the appropriate check box and enter the desired limit value.	
[Limiting Access to Destinations]	Restrict address book entries the user can access. To specify the reference allowed groups, select this check box and select groups from the list. You can select one or more reference allowed groups. To specify the access allowed level, select the check box and specify the access allowed level. Before you specify the reference allowed groups, you must register reference allowed groups. For details, refer to page 8-36.	

Reference

- You cannot register a password less than eight characters when [Security Settings] → [Security Details] → [Password Rules] is set to [Enable] in the [Administrator Settings] on the **Control Panel**. If a user password containing less than eight characters has already been registered, change the password so that it contains eight characters before setting [Password Rules] to [Enable].
- If you permit the public user access, you can configure the Function Permission and Limiting Access to Destinations settings for the public user. For details, refer to page 8-40.


- By default, the sheets printed in the single color or 2 color mode are counted as being printed in color. To restrict use of the color printing or color image transmission functions, you can change this behavior to treat printing in the single color or 2 color mode as monochrome printing if necessary. For details, refer to page 10-40.
- Whether to allow the [Save to External Memory] function can be specified when [Save Document] is set to [ON] in [System Settings]→[User Box Settings]→[External Memory Function Settings]. Whether to allow the [External Memory Document Scan] function can be specified when [USB to User Box] is set to [ON] in [External Memory Function Settings]. For details, refer to page 12-7.
- When [Security Settings] >> [Security Details] >> [Manual Destination Input] is set to [Restrict] in [Administrator Settings] on the **Control Panel**, the user cannot manually enter the address regardless of the setting of this function.
- To connect this machine to a cellular phone or PDA, install the optional Local Interface Kit EK-605 in this machine. Whether to allow the [Mobile/PDA] function can be specified when [Bluetooth] is set to [Enable] in [Network]→ [Bluetooth Setting] and [Bluetooth Print Settings] is set to [ON] in [System Settings]→ [System Connection Setting].
- Whether to allow the [Biometric/IC Card Information Registration] function can be specified when [Biometric/IC Card Information Registration] is set to [Allow] in [Security] → [Restrict User Access] while the optional authentication unit is installed.

7.1.4 Account Track Registration

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] ► [Account Track Settings] ► [New Registration].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

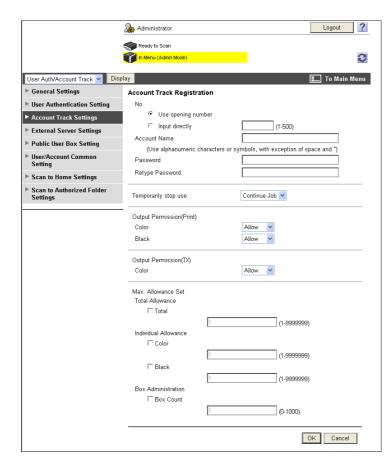

Item	Description	Prior check
[No.]	Select a registration numbering system. If you specify the registration number, enter the number directly.	

Item	Description	Prior check
[Account Name]	Enter an account name (up to 8 characters, excluding space and ").	
[Password is changed.]	Select this check box to change the password. This item is displayed when editing the registered informa- tion.	
[Password]	Enter a password (up to 8 characters, excluding space and ").	
[Retype Password]	Re-enter the password (up to 8 characters).	
[Temporarily stop use]	Select whether to temporarily disable a registered ac- count. This item is available when temporarily disabling registered accounts without deleting them. If you select [Stop Job], the target account cannot log in to or use this machine. If you disable an account regis- tered as a user's account name, users who belong to the disabled account also cannot log in to this machine.	
[Output Permis- sion(Print)]	Select whether to allow color or black printing.	
[Output Permis- sion(TX)]	Select whether to allow the user to send color images.	
[Max. Allowance Set]	Specify the maximum numbers of printed sheets and User Boxes. To specify the limit, select the appropriate check box and enter the desired limit value.	

Reference

- You cannot register a password less than eight characters when [Security Settings]→[Security Details]→[Password Rules] is set to [Enable] in the [Administrator Settings] on the **Control Panel**. If a user password containing less than eight characters has already been registered, change the password so that it contains eight characters before setting [Password Rules] to [Enable].
- By default, the sheets printed in the single color or 2 color mode are counted as being printed in color. To restrict use of the color printing or color image transmission functions, you can change this behavior to treat printing in the single color or 2 color mode as monochrome printing if necessary. For details, refer to page 10-40.


7.2 Restricting users of this machine (Active Directory)

Configure settings to restrict users who use this machine by Active Directory authentication.

These settings are required if you wish to use the user authentication with Active Directory on the Windows Server. You can restrict the functions available to each user.

You can also restrict users who use this machine using Active Directory authentication in an IPv6 environment configured by the Active Directory function of Windows Server 2008.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

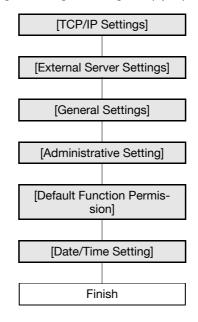

7.2.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

- To use Active Directory, register the DNS server connected to Active Directory in this machine.
- To perform Active Directory authentication in an IPv6 environment configured by the Active Directory function of Windows Server 2008, configure IPv6. For details on the IPv6 settings, refer to page 2-4.

For details, refer to page 2-2.

7.2.2 [External Server Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] → [External Server Settings] → [Edit].

	& Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	
User Auth/Account Track 🔽 Dis	play	E) To Main Menu
▶ General Settings	External Server Registration	
User Authentication Setting	No.	2
Account Track Settings	External Server Name	
-	External Server Type	Active Directory
External Server Settings	Active Directory	
Public User Box Setting	Default Domain Name	
User/Account Common Setting	NTLM	
•	Default Domain Name	
Scan to Home Settings	NDS	
Scan to Authorized Folder Settings	Default NDS Tree Name	
Settings	Default NDS Context Name	
	LDAP	
	Server Address	Please check to enter host name.
	Port No.	389 (1-65535)
	Enable SSL	
	Port No.(SSL)	636 (1-65535)
	Search Base	
	Timeout	60 sec. (5-300)
	General Settings	Simple V
	Search Attribute	uid
	Search Auflöule	uiu
		OK Cancel

Item	Description	Prior check
[No.]	Displays the registration number.	
[External Server Name]	Enter the name of an external authentication server (up to 32 characters).	
[External Server Type]	Select [Active Directory].	
[Default Domain Name]	Enter the default domain name of Active Directory (up to 64 characters).	Default Domain Name

bizhub C360/C280/C220

7.2.3 [General Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] **>>** [General Settings].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

	旛 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	C
User Auth/Account Track 👻 Dis	splay	🛄 To Main Menu
General Settings	General Settings	
User Authentication Setting	User Authentication	ON (External Server) 💙
Account Track Settings	Public User Access	ON (With Login)
External Server Settings	Ticket Hold Time Setting (Active Directory)	60 Minute (1-60)
Public User Box Setting	Account Track	ON 💌
User/Account Common	Account Track Input Method	Account Name & Password 😪
Setting Scan to Home Settings	Synchronize User Authentication & Account Track	Synchronize
-	Number of Counters Assigned for	500 (1-999)
Scan to Authorized Folder Settings	Users When Number of Jobs Reach Maximum	Skip Job 🗸
		OK Cancel

Item	Description	Prior check
[User Authentica- tion]	Select [ON (External Server)].	
[Public User Ac- cess]	Select whether to allow the public user access. If [ON (With Login)] is selected, the public user can use this machine by selecting [Public User Access] in the login page to log in to the machine. If [ON (Without Login)] is selected, the public user can use this machine without logging in to the machine in the login page.	Do you permit the public user access?
[Ticket Hold Time Setting (Active Di- rectory)]	Enter a time to hold the Kerberos authentication tickets.	
[Account Track]	To enable account track, select [ON]. To select [ON], specify the authentication method first, and then register accounts in [Account Track Settings].	Do you use the ac- count track func- tion?
[Synchronize User Authentication & Account Track]	To synchronize user authentication with account track and manage users for each account track, select [Synchro- nize]. To synchronize, specify the account name when logging in for the first time. The account name that the user specify at the first login time will be registered as the account name of the user.	Do you synchronize user authentication with account track?

7.2.4 [Administrative Setting]

Configure settings to use or operate the ID & Print function.

For details, refer to page 7-4.

7.2.5 [Default Function Permission]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] >> [User Authentication Setting] >> [Default Function Permission].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

	🌆 Administrator		Logout ?
	Ready to Scan		
	n Menu (Admin Mode)		3
User Auth/Account Track 🗸 Dis	play		E To Main Menu
▶ General Settings	Default Function Permission		
User Authentication Setting	Сору	Allow 🔽	
User Registration	Scan	Allow 🔽	
Default Function	Save to External Memory	Restrict 💌	
Permission	External Memory Document Scan	Restrict 💌	
▶ Public User	Fax	Allow 🔽	
Administrative Setting	Print	Allow 🔽	
Account Track Settings	User Box	Allow 🔽	
External Server Settings	Print Scan/Fax TX	Allow 🔽	
Public User Box Setting	Manual Destination Input	Allow	~
 User/Account Common Setting 	Mobile/PDA	Allow 🔽	
Scan to Home Settings			OK Cancel
Scan to Authorized Folder Settings			

Item	Description	Prior check
[Copy]	Configure the default settings for function permissions to	
[Scan]	users who are authenticated on the external server. If a user not registered on this machine is authenticated on	
[Save to External Memory]	the external server, the user will be registered on this ma- chine with the function permissions that you configure here.	
[External Memory Document Scan]	Once the function permissions of a user have been regis- tered on this machine, you can edit them in [User Regis-	
[Fax]	tration].	
[Print]		
[User Box]		
[Print Scan/Fax TX]		
[Manual Destina- tion Input]		
[Mobile/PDA]		

Reference

- Whether to allow the [Save to External Memory] function can be specified when [Save Document] is set to [ON] in [System Settings]→[User Box Settings]→[External Memory Function Settings]. Whether to allow the [External Memory Document Scan] function can be specified when [USB to User Box] is set to [ON] in [External Memory Function Settings]. For details, refer to page 12-7.
- When [Security Settings]→ [Security Details]→ [Manual Destination Input] is set to [Restrict] in [Administrator Settings] on the **Control Panel**, the user cannot manually enter the address regardless of the setting of this function.
- To connect this machine to a cellular phone or PDA, install the optional Local Interface Kit EK-605 in this machine. Whether to allow the [Mobile/PDA] function can be specified when [Bluetooth] is set to [Enable] in [Network]→ [Bluetooth Setting] and [Bluetooth Print Settings] is set to [ON] in [System Settings]→ [System Connection Setting].

7.2.6 [Date/Time Setting]

To use Active Directory, specify the date and time of this machine.

• You cannot log in to Active Directory if the system time of this machine and Active Directory is extremely different. Specify the date and time for this machine to match the system time of Active Directory.

For details, refer to page 10-2.

7.3 Restricting users of this machine (Windows domain or workgroup)


Configure settings to restrict users who can use this machine by NTLM authentication.

These settings are required if you wish to use NTLM authentication when using the Windows NT 4.0 system or when using Active Directory (NT-compatible domain environment) in the Windows Server system. You can restrict the functions available to each user.

You can also restrict users who can use this machine by NTLM authentication in an IPv6 environment configured by the Active Directory function (NT-compatible domain environment) of Windows Server 2008.

To use NTLM authentication in the IPv6 environment, you must enable the Direct Hosting service. To resolve the names using a DNS server, prepare the DNS server and configure the DNS settings of this machine.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

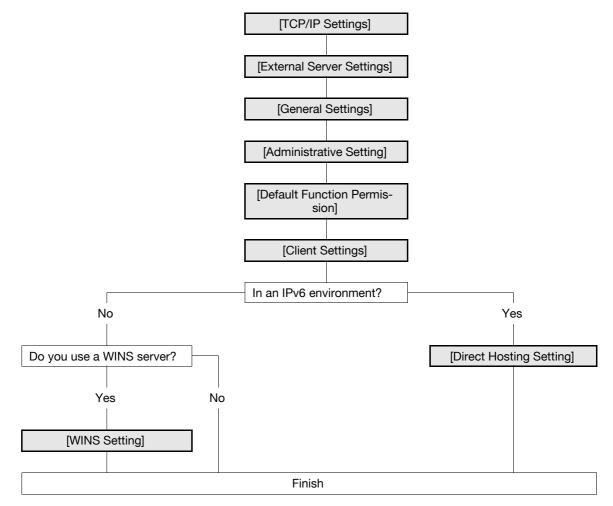

7.3.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

- To perform NTLM authentication in an IPv6 environment configured by the Active Directory function (NT-compatible domain environment) of Windows Server 2008, configure IPv6. For details on the IPv6 settings, refer to page 2-4.
- To use NTLM authentication in the IPv6 environment, you must enable the Direct Hosting service. To
 resolve the names using a DNS server, prepare the DNS server and configure the DNS settings of this
 machine.

For details, refer to page 2-2.

7.3.2 [External Server Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] → [External Server Settings] → [Edit].

	& Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	2
User Auth/Account Track 👻 Dis	play	E To Main Menu
General Settings	External Server Registration	
User Authentication Setting	No.	2
Account Track Settings	External Server Name	
External Server Settings	External Server Type	NTLM v1
Public User Box Setting	Active Directory	
•	Default Domain Name	
User/Account Common Setting	NTLM	
Scan to Home Settings	Default Domain Name	
Scan to Authorized Folder	NDS Default NDS Tree Name	
Settings		
	Default NDS Context Name	
	LDAP Server Address	Please check to enter host name.
	Server Address	Please check to enter nost name.
	Port No.	389 (1-65535)
	Enable SSL	
	Port No.(SSL)	636 (1-65535)
	Search Base	
	Timeout	60sec. (5-300)
	General Settings	Simple 💙
	Search Attribute	uid
		OK Cancel

Item	Description	Prior check
[No.]	Displays the registration number.	
[External Server Name]	Enter the name of an external authentication server (up to 32 characters).	
[External Server Type]	Select [NTLM v1] or [NTLM v2]. NTLMv2 is applied on the Windows NT 4.0 (Service Pack 4) and later.	
[Default Domain Name]	Enter the NTLM default domain name (up to 64 charac- ters). The default domain name must be uppercase letters.	Default Domain Name

7.3.3 [General Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] **>>** [General Settings].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

	Administrator	Logout ?
	Ready to Scan	
	👘 In Menu (Admin Mode)	3
User Auth/Account Track 🔻 Disp	lay	E To Main Menu
► General Settings	General Settings	
User Authentication Setting	User Authentication	ON (External Server) 🛩
Account Track Settings	Public User Access	ON (With Login)
External Server Settings	Ticket Hold Time Setting (Active Directory)	60 Minute (1-60)
Public User Box Setting	Account Track	ON 💌
User/Account Common	Account Track Input Method	Account Name & Password 😪
Setting Scan to Home Settings	Synchronize User Authentication & Account Track	Synchronize 💌
 Scan to Authorized Folder 	Number of Counters Assigned for Users	500 (1-999)
Settings	When Number of Jobs Reach Maximum	Skip Job 💌
		OK Cancel

Item	Description	Prior check
[User Authentica- tion]	Select [ON (External Server)].	
[Public User Ac- cess]	Select whether to allow the public user access. If [ON (With Login)] is selected, the public user can use this machine by selecting [Public User Access] in the login page to log in to the machine. If [ON (Without Login)] is selected, the public user can use this machine without logging in to the machine in the login page.	Do you permit the public user access?
[Account Track]	To enable account track, select [ON]. To select [ON], specify the authentication method first, and then register accounts in [Account Track Settings].	Do you use the ac- count track func- tion?
[Synchronize User Authentication & Account Track]	To synchronize user authentication with account track and manage users for each account track, select [Synchro- nize]. To synchronize, specify the account name when logging in for the first time. The account name that the user specify at the first login time will be registered as the account name of the user.	Do you synchronize user authentication with account track?

7.3.4 [Administrative Setting]

Configure settings to use or operate the ID & Print function.

For details, refer to page 7-4.

7.3.5 [Default Function Permission]

Configure the default settings for function permissions to users who are authenticated on the external server. For details, refer to page 7-13.

7.3.6 [Client Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] **>>** [SMB Setting] **>>** [Client Setting].



Item	Description	Prior check
[User Authentica- tion (NTLM)]	Select [ON]. If you set this option to [OFF] when NTLM authentication is used, the authentication method will be switched to the MFP authentication.	

7.3.7 [WINS Setting]

When you start NTLM authentication via the router, you must set up the WINS server. For details, refer to page 4-4.

7.3.8 [Direct Hosting Setting]


To use NTLM authentication in the IPv6 environment, you must enable the direct hosting service. For details, refer to page 4-5.

7.4 Restricting users of this machine (NDS over IPX/SPX)

Configure settings to restrict users who use this machine by NDS over IPX/SPX authentication.

These settings are required if you use the NetWare 5.1 or later and use the NDS authentication in the IPX/SPX environment. You can restrict the functions available to each user.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

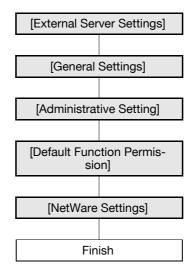

7.4.1 [External Server Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] → [External Server Settings] → [Edit].

	Administrator	Logout ?
	Con Administrator	
	Ready to Scan	
	In Menu (Admin Mode)	
User Auth/Account Track 🔽 Disp	lay	E To Main Menu
General Settings	External Server Registration	
User Authentication Setting	No.	2
Account Track Settings	External Server Name	
External Server Settings	External Server Type	NDS over IPX/SPX
Public User Box Setting	Active Directory	
User/Account Common	Default Domain Name NTLM	
Setting	Default Domain Name	
Scan to Home Settings	NDS	
Scan to Authorized Folder	Default NDS Tree Name	
Settings	Default NDS Context Name	
	LDAP	
	Server Address	Felease check to enter host name.
	Port No.	389 (1-65535)
	Enable SSL	
	Port No. (SSL)	636 (1-65535)
	Search Base	
	Timeout	60 sec. (5-300)
	General Settings	Simple
	Search Attribute	uid
		OK Cancel

Item	Description	Prior check
[No.]	Displays the registration number.	
[External Server Name]	Enter the name of an external authentication server (up to 32 characters).	


Item	Description	Prior check
[External Server Type]	Select [NDS over IPX/SPX].	
[Default NDS Tree Name]	Enter the default NDS tree name (up to 63 characters).	
[Default NDS Con- text Name]	Enter the default NDS context name (up to 191 charac- ters).	

7.4.2 [General Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] **>>** [General Settings].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

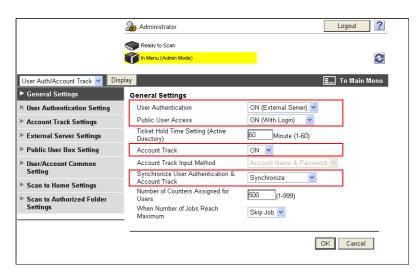

Item	Description	Prior check
[User Authentica- tion]	Select [ON (External Server)].	
[Public User Ac- cess]	Select whether to allow the public user access. If [ON (With Login)] is selected, the public user can use this machine by selecting [Public User Access] in the login page to log in to the machine. If [ON (Without Login)] is selected, the public user can use this machine without logging in to the machine in the login page.	Do you permit the public user access?
[Account Track]	To enable account track, select [ON]. To select [ON], specify the authentication method first, and then register accounts in [Account Track Settings].	Do you use the ac- count track func- tion?
[Synchronize User Authentication & Account Track]	To synchronize user authentication with account track and manage users for each account track, select [Synchro- nize]. To synchronize, specify the account name when logging in for the first time. The account name that the user specify at the first login time will be registered as the account name of the user.	Do you synchronize user authentication with account track?

7.4.3 [Administrative Setting]

Configure settings to use or operate the ID & Print function.

For details, refer to page 7-4.

7.4.4 [Default Function Permission]

Configure the default settings for function permissions to users who are authenticated on the external server. For details, refer to page 7-13.

7.4.5 [NetWare Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [NetWare Settings] → [Net-Ware Settings].

	2	
	🍇 Administrator	Logout ?
	Ready to Scan	
	in Menu (Admin Mode)	C
Network 👻 🛛	Display	E To Main Menu
► TCP/IP Setting	NetWare Setting	
▶ E-mail Setting	* is reflected after reset.	
LDAP Setting	IPX Setting	ON V
▶ IPP Setting	(Turn the main switch OFF, and then ON, wh	
▶ FTP Setting	Ethernet Frame Type*	Auto Detect V
► SNMP Setting	NetWare Print Mode*	OFF 🔽
SMB Setting	PServer	
	Print Server Name*	
Web Service Settings	F Password is changed.	
Bonjour Setting	Print Server Password*	
▼ NetWare Setting	Polling Interval*	1
► NetWare Setting	Bindery/NDS Setting*	NDS
NetWare Status	Bindery	
AppleTalk Setting	File Server Name*	
Network Fax Setting	NDS	
NebDAV Settings	NDS Context Name*	
•	NDS Tree Name*	
OpenAPI Setting	Nprinter/Rprinter	
TCP Socket Setting	Print Server Name*	
IEEE802.1X Authentication Setting	Printer Number*	255 (0-255,255:Auto)
	User Authentication Setting	ON 💌
LLTD Setting		
Bluetooth Setting		OK Cancel
<	10	

Item	Description	Prior check
[IPX Setting]	Select [ON].	
[Ethernet Frame Type]	Select a frame type to be used.	Frame type
[User Authentica- tion Setting]	Select [ON].	

7.5 Restricting users of this machine (NDS over TCP/IP)


Configure settings to restrict users who use this machine by NDS over TCP/IP authentication.

These settings are required if you use the NetWare 5.1 or later and use NDS authentication in the TCP/IP environment. You can restrict the functions available to each user.

To use the authentication with NDS over TCP/IP, you must specify the DNS server in [TCP/IP Settings]. During user authentication, the tree name and context name are inquired to the specified DNS server to obtain the IP address of the NDS authentication server.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure. Reference

• Apply the latest service pack to each NetWare version.

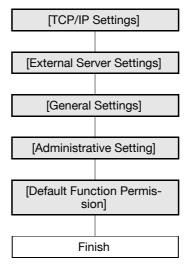

7.5.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

• To use the authentication with NDS over TCP/IP, you must specify the DNS server.

For details, refer to page 2-2.

bizhub C360/C280/C220

7.5.2 [External Server Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] → [External Server Settings] → [Edit].

	Search Administrator	Logout ?
	Ready to Scan	
	📦 In Menu (Admin Mode)	Ð
User Auth/Account Track 💌 Disp		E To Main Menu
General Settings	External Server Registration	
User Authentication Setting	No.	2
Account Track Settings	External Server Name	
External Server Settings	External Server Type	NDS over TCP/IP
Public User Box Setting	Active Directory Default Domain Name	
▶ User/Account Common	NTLM	
Setting	Default Domain Name	
Scan to Home Settings	NDS	
Scan to Authorized Folder	Default NDS Tree Name	
Settings	Default NDS Context Name	
	LDAP	L
	Server Address	Flease check to enter host name.
	Port No.	389 (1-65535)
	Enable SSL	
	Port No.(SSL)	636 (1-65535)
	Search Base	
	Timeout	60 sec. (5-300)
	General Settings	Simple V
	Search Attribute	uid
	2000000 000000	
		OK Cancel

Item	Description	Prior check
[No.]	Displays the registration number.	
[External Server Name]	Enter the name of an external authentication server (up to 32 characters).	
[External Server Type]	Select [NDS over TCP/IP].	
[Default NDS Tree Name]	Enter the default NDS tree name (up to 63 characters).	
[Default NDS Con- text Name]	Enter the default NDS context name (up to 191 charac- ters).	

7.5.3 [General Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] **>>** [General Settings].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

	Administrator	Logout ?
	Ready to Scan In Menu (Admin Mode) In Menu (Admin Mode)	
	In Menu (Admin Mode)	
User Auth/Account Track 💌 Disp	lay	E To Main Menu
General Settings	General Settings	
User Authentication Setting	User Authentication	ON (External Server) 👻
Account Track Settings	Public User Access	ON (With Login)
External Server Settings	Ticket Hold Time Setting (Active Directory)	60 Minute (1-60)
Public User Box Setting	Account Track	ON 🛩
User/Account Common	Account Track Input Method	Account Name & Password 👻
Setting Scan to Home Settings	Synchronize User Authentication & Account Track	Synchronize 👻
Scan to Rome Settings Scan to Authorized Folder	Number of Counters Assigned for Users	500 (1-999)
Scan to Authorized Folder Settings	Users When Number of Jobs Reach Maximum	Skip Job 🖌
		OK Cancel

Item	Description	Prior check
[User Authentica- tion]	Select [ON (External Server)].	
[Public User Ac- cess]	Select whether to allow the public user access. If [ON (With Login)] is selected, the public user can use this machine by selecting [Public User Access] in the login page to log in to the machine. If [ON (Without Login)] is selected, the public user can use this machine without logging in to the machine in the login page.	Do you permit the public user access?
[Account Track]	To enable account track, select [ON]. To select [ON], specify the authentication method first, and then register accounts in [Account Track Settings].	Do you use the ac- count track func- tion?
[Synchronize User Authentication & Account Track]	To synchronize user authentication with account track and manage users for each account track, select [Synchro- nize]. To synchronize, specify the account name when logging in for the first time. The account name that the user specify at the first login time will be registered as the account name of the user.	Do you synchronize user authentication with account track?

7.5.4 [Administrative Setting]

Configure settings to use or operate the ID & Print function.

For details, refer to page 7-4.

7.5.5 [Default Function Permission]

Configure the default settings for function permissions to users who are authenticated on the external server. For details, refer to page 7-13.

7.6 Restricting users of this machine (LDAP)


Configure settings to restrict users who use this machine by LDAP authentication.

These settings are required if you use the LDAP server for user authentication. You can restrict the functions available to each user.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

Reference

To use the same LDAP server for both user authentication and destination search, the certificate verification settings of the LDAP server for user authentication specified in [External Server Settings] are determined according to the certificate verification settings of the LDAP server for destination search specified in [Network] → [LDAP Settings] → [Setting Up LDAP]. For details on LDAP server settings for destination search and certificate verification settings, refer to page 10-5.

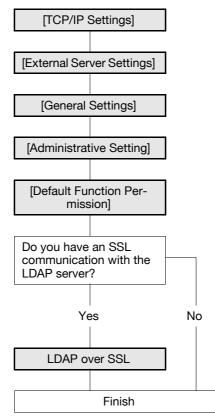

7.6.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

7.6.2 [External Server Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] → [External Server Settings] → [Edit].

	Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	8
	•	
User Auth/Account Track 💌 🛛 Disp	lay	🚛 To Main Menu
General Settings	External Server Registration	
User Authentication Setting	No.	2
Account Track Settings	External Server Name	
External Server Settings	External Server Type	LDAP 🔽
	Active Directory	
Public User Box Setting	Default Domain Name	
User/Account Common Setting	NTLM	
-	Default Domain Name	
Scan to Home Settings	NDS	
Scan to Authorized Folder Settings	Default NDS Tree Name	
Settings	Default NDS Context Name	
	LDAP	
	Server Address	Please check to enter host name.
	Port No.	389 (1-65535)
	Enable SSL	
	Port No.(SSL)	636 (1-65535)
	Search Base	
	Timeout	60 sec. (5-300)
	General Settings	Simple V
	Search Attribute	uid
		·
		OK Cancel

Item	Description	Prior check
[No.]	Displays the registration number.	
[External Server Name]	Enter the name of an external authentication server (up to 32 characters).	
[External Server Type]	Select [LDAP].	
[Server Address]	Specify the LDAP server address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Port No.]	Enter a port number. Default setting: 389	
[Search Base]	Enter the search starting point in the directory structure under the LDAP server (up to 255 characters). This search function also covers subdirectories under the entered starting point.	Search base
[Timeout]	Enter the timeout period for LDAP search.	
[General Settings]	Select the authentication method to log in to the LDAP server. Select the same authentication method as that used on the LDAP server.	Server authentica- tion method
[Search Attribute]	Enter attributes to be used for search of user account (up to 64 characters, the only symbol allowed is a hyphen (-)).	

7.6.3 [General Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] **>>** [General Settings].

Reference

• This menu item will not be displayed when **PageScope Authentication Manager** is used for authentication.

	🌆 Administrator	Logout ?
	ready to Scan	
	In Menu (Admin Mode)	2
User Auth/Account Track 💌 Displ	ay	🛄 To Main Menu
General Settings	General Settings	
User Authentication Setting	User Authentication	ON (External Server) 👻
Account Track Settings	Public User Access	ON (With Login)
► External Server Settings	Ticket Hold Time Setting (Active Directory)	60 Minute (1-60)
Public User Box Setting	Account Track	ON 🐱
User/Account Common	Account Track Input Method	Account Name & Password 👻
Setting Scan to Home Settings	Synchronize User Authentication & Account Track	Synchronize 👻
Scan to Authorized Folder	Number of Counters Assigned for Users	500 (1-999)
Settings	When Number of Jobs Reach Maximum	Skip Job ¥
		OK Cancel

Item	Description	Prior check
[User Authentica- tion]	Select [ON (External Server)].	
[Public User Ac- cess]	Select whether to allow the public user access. If [ON (With Login)] is selected, the public user can use this machine by selecting [Public User Access] in the login page to log in to the machine. If [ON (Without Login)] is selected, the public user can use this machine without logging in to the machine in the login page.	Do you permit the public user access?
[Account Track]	To enable account track, select [ON]. To select [ON], specify the authentication method first, and then register accounts in [Account Track Settings].	Do you use the ac- count track func- tion?
[Synchronize User Authentication & Account Track]	To synchronize user authentication with account track, select [Synchronize].	Do you synchronize user authentication with account track?

7.6.4 [Administrative Setting]

Configure settings to use or operate the ID & Print function. For details, refer to page 7-4.

7.6.5 [Default Function Permission]

Configure the default settings for function permissions to users who are authenticated on the external server. For details, refer to page 7-13.

7.6.6 LDAP over SSL

[External Server Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] ► [External Server Settings] ► [Edit].

Item	Description	Prior check
[Enable SSL]	Select this check box to encrypt an SSL communication between this machine and the LDAP server.	Does the server sup- port SSL?
[Port No.(SSL)]	Enter the port number to be used for SSL communication.	Server port number

[Setting Up LDAP]

In the administrator mode of **PageScope Web Connection**, select [Network] → [LDAP Setting] → [Setting Up LDAP] → [Edit].


Reference

• To verify a certificate, specify the certificate verification method, and register the same information as for the LDAP server specified in [External Server Settings]. For details, refer to page 10-7.

Item	Description	Prior check
[Certificate Verifi- cation Level Set- tings]	To verify the server certificate, configure settings to verify the certificate.	
[Validity Period]	Select whether to check that the server certificate is within the validity period.	
[CN]	Select whether to check that the CN of the server certificate matches the server address.	
[Key Usage]	Select whether to check that the server certificate is used according to the purpose approved by the issuer.	
[Chain]	Select whether to check that the server certificate chain (certification path) is correct. The chain is validated by referencing the external certifi- cates managed on this machine. For details, refer to page 8-34.	
[Expiration Date Confirmation]	Select whether to check that the server certificate is within the validity period. The OCSP service and CRL (Certificate Revocation List) are checked in this order when the expiration date of the certificate is checked.	

[Certificate Verification Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].

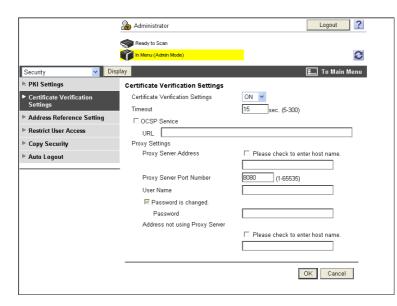

Item	Description	Prior check
[Certificate Verifi- cation Setting]	Select [ON] to verify the server certificate.	
[Timeout]	Enter a timeout period for expiration date confirmation.	Do you confirm the expiration date?
[OCSP Service]	Select this check box to use the OCSP service.	
[URL]	Enter the URL of the OCSP service (up to 511 characters). If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.	
[Proxy Server Ad- dress]	To confirm the expiration date via a proxy server, enter its address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the proxy server (up to 63 characters).	
[Address not using Proxy Server]	To enable expiration date confirmation, specify an ad- dress that does not use the proxy server depending on your environment. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	



8 Reinforcing security

8.1 Registering the certificate of this machine for SSL communications

Register the certificate of this machine (device certificate) to configure SSL communication settings.

The device certificate is registered in this machine at the time of shipment; therefore, SSL-encrypted communication is enabled immediately after installation.

This machine allows you to manage multiple device certificates. To register a new device certificate with this machine, create a self-signed certificate, or ask a certificate authority (CA) and install the issued certificate. You can also import an exported device certificate.


When using this machine for the following purposes, you can encrypt a communication from a client computer to this machine using SSL. For details, refer to the relevant reference page.

- "Using PageScope Web Connection" (p. 3-2)
- "Print (IPPS)" (p. 5-9)
- "Using Web services to secure communication from Vista/Server 2008 to this machine via SSL" (p. 8-20)
- "Using IEEE802.1X authentication (for EAP-TLS)" (p. 8-29)
- "Linking an OpenAPI system with this machine" (p. 9-4)
- "Using the FTP server and WebDAV server functions (WebDAV server function only)" (p. 9-9)

Also, if this machine is used for any of the following purposes, this machine submits (attaches) a device certificate that has been registered in this machine. For details, refer to the relevant reference page.

- "Sending scanned data by E-mail (with digital signature)" (p. 4-20)
- "Using IEEE802.1X authentication (for EAP-TTLS or PEAP)" (p. 8-29)
- "Using applications that communicate with this machine with TCP Socket" (p. 9-2)
- To submit a certificate upon request from a server (SMTP, POP, LDAP, WebDAV)

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

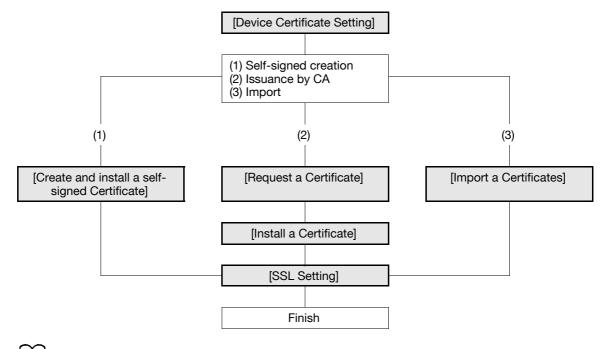

Reference

This machine enables you to use multiple registered device certificates depending on protocols. For details on how to use device certificates depending on purposes, refer to page 8-9.

8.1.1 [Device Certificate Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] → [PKI Settings] → [Device Certificate Setting].

	& Admir	istrator			L	ogout
	Ready	to Scan				
	🚺 In Men	u (Admin Mode)				
Security 💽 Dis	play				 1	To Main M
▼ PKI Settings	Device	Certificate List				
Device Certificate Setting	New	/ Registration				
► SSL Setting	Default		Subject	Validity	Detail	Setting
▶ Protocol Setting			-	Period		0
External Certificate	•	KMBT103000 (retri-	MARTICESCHER	29/09/2009	Detail	Setting
Setting	0	INSPECTIVE CONTRACTOR	MOTOSIE: NAM	06/10/2009	Detail	Setting
Certificate Verification Settings	c	Requesting Certificate	METCHIC: Not		Detail	Setting
Address Reference Setting		1				
Restrict User Access						
Copy Security					OK	Cancel
Auto Logout						

Item	Description	Prior check
[New Registration]	Register a new device certificate. Select a registration method: creating a self-signed certif- icate, requesting an issuance of a certificate, or importing a certificate.	
[Default]	Specify the default device certificate. When not using device certificates depending on proto- cols, specify the default device certificate.	Default device certif- icate
[Issuer]	Displays an issuer of a device certificate.	
[Subject]	Displays a destination to issue a device certificate to.	
[Validity Period]	Displays the validity period of a device certificate.	
[Detail]	Enables you to confirm detailed information about a de- vice certificate.	
[Setting]	Enables you to remove or export a device certificate if it is installed. If [Requesting Certificate] is displayed in [Issuer] of the device certificate, you can install a CA-issued certificate in this machine.	

Reference

For details on how to remove a device certificate, refer to page 8-8.

For details on how to export a device certificate, refer to page 8-11.

bizhub C360/C280/C220

8.1.2 [Create and install a self-signed Certificate]

In the administrator mode of **PageScope Web Connection**, select [Security] \rightarrow [PKI Settings] \rightarrow [Device Certificate Setting] \rightarrow [New Registration] \rightarrow [Create and install a self-signed Certificate].

	🌆 Administrator	Logout ?
	Ready to Scan	
	in Menu (Admin Mode)	
Security 🔽 Dis	play	E To Main Menu
▼ PKI Settings	Create and install a self-sig	ned Certificate.
Device Certificate Setting	Common Name	192. 电均应
▶ SSL Setting	Organization	
Protocol Setting	Organizational Unit	
· · ·	Locality	
External Certificate Setting	State/Province	
Certificate Verification	Country	
Settings	Admin, E-mail Address	
Address Reference Setting		
Restrict User Access	Validity Start Date	06/10/2008 13:23:43
Copy Security	Validity Period	Day(s)(1-3650)
▶ Auto Logout		
	Encryption Key Type	RSA-1024 💌
		OK Cancel

Item	Description	Prior check
[Common Name]	Displays the IP address or domain name of this machine. This item shows the set value used to access this ma- chine.	
[Organization]	Enter an organization or association name (up to 63 characters).	
[Organizational Unit]	Enter an account name (up to 63 characters). You can also specify a null.	
[Locality]	Enter a city, ward, town, or village name (up to 127 characters).	
[State/Province]	Enter a prefecture name (up to 127 characters).	
[Country]	Enter the country name with a country code defined in ISO03166 (2 characters). United States: US, Great Britain: GB, Italy: IT, Australia: AU, The Netherlands: NL, Canada: CA, Spain: ES, Czech Republic: CZ, China: CN, Denmark: DK, Germany: DE, Ja- pan: JP, France: FR, Belgium: BE, Russia: RU	
[Admin. E-mail Ad- dress]	Enter the E-mail address of the administrator (up to 128 characters, excluding a space). If the administrator's E-mail address has been specified in [System Settings]►[Machine Setting], the registered E-mail address is displayed.	E-mail address of the administrator
[Validity Start Date]	Displays the validity period starting date. Displays the date and time (of this machine) when this page was displayed.	
[Validity Period]	Enter the validity period of a certificate with the number of days that have elapsed since the starting date.	
[Encryption Key Type]	Select a type of encryption key.	
[OK]	Click this button to create a self-signed certificate. It may take several minutes to create a certificate.	

8.1.3 [Request a Certificate]

In the administrator mode of **PageScope Web Connection**, select [Security] → [PKI Settings] → [Device Certificate Setting] → [New Registration] → [Request a Certificate].

	& Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		3
Security 🔽 Disp	lay		E To Main Menu
▼ PKI Settings	Request a Certificate		
Device Certificate Setting	Common Name	经济的研究	
▶ SSL Setting	Organization		
▶ Protocol Setting	Organizational Unit		
External Certificate	Locality		
Setting	State/Province		
Certificate Verification	Country		
Settings	Admin. E-mail Address		
Address Reference Setting			
Restrict User Access	Encryption Key Type	RSA-1024 🔽	
Copy Security			
Auto Logout			OK Cancel

Item	Description	Prior check
[Common Name]	Displays the IP address or domain name of this machine. This item shows the set value used to access this ma- chine.	
[Organization]	Enter an organization or association name (up to 63 characters).	
[Organizational Unit]	Enter an account name (up to 63 characters). You can also specify a null.	
[Locality]	Enter a city, ward, town, or village name (up to 127 characters).	
[State/Province]	Enter a prefecture name (up to 127 characters).	
[Country]	Enter the country name with a country code defined in ISO03166 (2 characters). United States: US, Great Britain: GB, Italy: IT, Australia: AU, The Netherlands: NL, Canada: CA, Spain: ES, Czech Republic: CZ, China: CN, Denmark: DK, Germany: DE, Ja- pan: JP, France: FR, Belgium: BE, Russia: RU	
[Admin. E-mail Ad- dress]	Enter the E-mail address of the administrator (up to 128 characters, excluding a space). If the administrator's E-mail address has been specified in [System Settings]⊷[Machine Setting], the registered E-mail address is displayed.	E-mail address of the administrator
[Encryption Key Type]	Select a type of encryption key.	
[OK]	Click this button to create certificate signing request data.	

[Certificate Signing Request Data]

	Administrator	Logout ?
	Ready to Scan	
		Ň
Security 🔽 Dis	play	E To Main Menu
▼ PKI Settings	Certificate Signing Request Data	
Device Certificate Setting		
▶ SSL Setting		
▶ Protocol Setting	xpLT05JQ0EgTUIOT0xUQSBiaXpodWlg	
External Certificate Setting	QzY1MjEVMBMGA1UECxMMMDAyMDZCMTAzM EQyMQowCAYDVQQLEwExMTEwLwYDVQQD EyhLTUJUMTAzMEQyLnRyYWluaW5nLmNzby5rb	
Certificate Verification Settings	25pY2FtaW5vbHRhLmpwMRgwFgYJ KoZihvcNAQkBFglob2dlQGhvZ2UwgZ8wDQYJKoZI	
Address Reference Setting		
Restrict User Access		Save OK
Copy Security		
▶ Auto Logout		
	_	

Item	Description	Prior check
[Certificate Signing Request Data]	Displays request data to issue a device certificate. Send the displayed character string to the CA.	
[Save]	Click this button to save certificate signing request data in your computer as a file.	

8.1.4 [Install a Certificate]

In the administrator mode of **PageScope Web Connection**, select [Security] → [PKI Settings] → [Device Certificate Setting] → [Setting] → [Install a Certificate].

Ask the CA to issue a certificate, and install the certificate sent from the CA in this machine.

	🌆 Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	8
Security 💌	Display	💷 To Main Menu
▼ PKI Settings	Install a Certificate	
► Device Certificate Setti	ng	
▶ SSL Setting		
▶ Protocol Setting		
External Certificate Setting		
Certificate Verification Settings		
Address Reference Setting		Install Cancel
Restrict User Access		
Copy Security		
Auto Logout		

Item	Description	Prior check
[Install a Certifi- cate]	Pastes text data sent from the CA.	
[Install]	Click this button to install a certificate.	

8.1.5 [Import a Certificates]

In the administrator mode of **PageScope Web Connection**, select [Security] → [PKI Settings] → [Device Certificate Setting] → [New Registration] → [Import a Certificates].

	& Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	
Security 💽 Dis	blay	E To Main Menu
▼ PKI Settings	Import Certificates (PKCS#12)	
Device Certificate Setting	File	
▶ SSL Setting		Browse
► Protocol Setting		
External Certificate Setting	Password	
Certificate Verification Settings		OK Cancel
Address Reference Setting		
Restrict User Access		
Copy Security		
▶ Auto Logout		
	-	

Item	Description	Prior check
[File]	Specify the file name of the device certificate to be import- ed. Click [Browse] to specify where to save a certificate file.	
[Password]	Enter the password to decode the encrypted certificate file (up to 32 characters).	

8.1.6 [SSL Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] → [PKI Settings] → [SSL Setting].

	🌆 Administrator	Logout 🧧
	Ready to Scan	
	In Menu (Admin Mode)	le l
Security 💌	Display	E To Main Menu
▼ PKI Settings	SSL Setting	
▶ Device Certificate Settir	ng Mode using SSL/TLS	Admin. Mode 🖌
► SSL Setting	Encryption Strength	AES-256, 3DES-168, RC4-128, DES-56, RC4-40 💌
▶ Protocol Setting		
External Certificate Setting		OK Cancel
Certificate Verification Settings		
Address Reference Setting		
Restrict User Access		
Copy Security		
Auto Logout		

Item	Description	Prior check
[Mode using SSL/TLS]	Select the PageScope Web Connection mode to apply SSL. Click [None] to disable SSL.	

Item	Description	Prior check
[Encryption Strength]	Specify the SSL encryption strength.	

8.1.7 [Remove a Certificate]

In the administrator mode of **PageScope Web Connection**, select [Security] → [PKI Settings] → [Device Certificate Setting] → [Setting] → "Remove a Certificate".

Click [OK] to remove the registered device certificate.

	🌆 Administrator		Logout ?
	ready to Scan		
	in Menu (Admin Mo	de)	3
Security 🔽 🕻	Display		🚛 To Main Menu
▼ PKI Settings	Remove a Certifi	cate	
Device Certificate Setting		PORT TOTAL Station (see A processing)	
▶ SSL Setting	Subject	PORT CRCL inside your have an indicate you	
•	Validity Period	06/10/2009 13:22:18	
▶ Protocol Setting	Are you sure you	want to remove the certificate?	
External Certificate Setting			
 Certificate Verification Settings 			OK Cancel
Address Reference Setting			
Restrict User Access			
Copy Security			
▶ Auto Logout			

Reference

- To remove the default device certificate while two or more certificates are registered, specify the other one as the default.
- If [Enhanced Security Mode] is enabled, the device certificate cannot be deleted.

8.2 Using device certificates depending on protocol


Configure settings to use device certificates depending on protocol.

This machine enables you to use multiple registered device certificates depending on protocols. Configure settings to fit your environment.

You can specify the device certificate to be used for each of the following protocols in this machine.

Protocol1	Protocol2	Description
[SSL]	[http Server]	 If this machine is used as an http server If the client accesses PageScope Web Connection via HTTPS, it is used to encrypt communication from the client to this machine. If the client prints data via IPPS, it is used to encrypt communication from the client to this machine.
[SSL]	[E-Mail Transmission (SMTP)]	 If this machine is used as an SMTP client This machine submits a device certificate upon request from the SMTP server.
[SSL]	[E-mail RX (POP)]	 If this machine is used as a POP client This machine submits a device certificate upon request from the POP server.
[SSL]	[TCP Socket]	 If this machine is used as a TCP Socket client This machine submits a device certificate upon request from the TCP Socket server.
[SSL]	[LDAP]	 If this machine is used as an LDAP client This machine submits a device certificate upon request from the LDAP server.
[SSL]	[WebDAV Client]	 If this machine is used as a WebDAV client This machine submits a device certificate upon request from the WebDAV server.
[SSL]	[OpenAPI]	 If this machine is used as an OpenAPI server If the OpenAPI client accesses this machine via SSL, it is used to encrypt communication from the client to this machine.
[SSL]	[Web Service]	 If this machine is used as a Web service server If Windows Vista accesses this machine via HTTPS, it is used to encrypt communication from Vista to this machine.
[IEEE802.1X]		 If this machine is used as an IEEE802.1X authentication client If this machine is authenticated by the IEEE802.1X server via EAP-TLS, it is used to encrypt communication. This machine submits a device certificate upon request from the server via EAP-TLS or EAP-PEAP.
[S/MIME]		This machine attaches a device certificate when send- ing an S/MIME E-mail message.

 Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.



Reference

When not using device certificates depending on protocols, specify the device certificate shown in [Default] of [Device Certificate Setting]. For details, refer to page 8-2.

8.2.1 [Device Certificate Setting]

Register a device certificate.

For details, refer to page 8-2.

8.2.2 [Protocol Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] → [PKI Settings] → [Protocol Setting].

Reference

• The function that uses device certificates depending on protocols is not available when a device certificate is not registered or is only in the certificate signing request state.

	Č.	n Menu (Admin Mode)			
Security V Disp	olay			ТТ	'o Main Me
PKI Settings	Prot	ocol Setting			
Device Certificate Setting		Protocol 1	Protocol 2	Edit	Delete
SSL Setting		SSL	http Server	Create	Delete
Protocol Setting	*	SSL	E-Mail Transmission (SMTP)	Edit	Delete
External Certificate	*	SSL	E-mail RX (POP)	Edit	Delete
Setting		SSL	TCP Socket	Create	Delete
Certificate Verification Settings	*	SSL	LDAP	Edit	Delete
Address Reference Setting	*	SSL	WebDAV Client	Edit	Delete
Restrict User Access		SSL	OpenAPI	Create	Delete
Copy Security	*	SSL	Web Service	Edit	Delete
▶ Auto Logout	*	IEEE802.1X		Edit	Delete
	*	S/MIME		Edit	Delete

Item	Description	Prior check
[Protocol 1]/[Proto- col 2]	Displays the classification for each protocol. If the target device certificate is registered, the protocol is marked by "*".	
[Create]	Select the protocol to specify a device certificate, and click [Create]. The device certificate registration page ap- pears, and you can specify the target device certificate. If the device certificate is already registered, [Edit] ap- pears. Clicking [Edit] enables you to change the target de- vice certificate or confirm the details of a device certificate.	
[Delete]	If the target device certificate is registered, click this but- ton to delete the registered information.	

8.3 Managing a device certificate

To manage a device certificate, use **PageScope Web Connection** to export it.

Obtaining a device certificate enables you to send an encrypted E-mail from the user to this machine using the obtained certificate (public key).

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.



Reference

The user can also obtain a device certificate by receiving an E-mail with a digital signature from this machine. For details on how to send an E-mail with a digital signature, refer to page 4-20.

8.3.1 [Device Certificate Setting]

Register a device certificate.

For details, refer to page 8-2.

8.3.2 [Export Certificate]


In the administrator mode of **PageScope Web Connection**, select [Security] → [PKI Settings] → [Device Certificate Setting] → [Setting] → [Export Certificate].

	Administrator	Logout 🤶
	Ready to Scan	
	In Menu (Admin Mode)	3
Security 🔽 Disp	lay	🗐 To Main Menu
▼ PKI Settings	Export Certificates (PKCS#12)	
Device Certificate Setting	Password	
▶ SSL Setting	Retype Password	
▶ Protocol Setting		
External Certificate Setting		OK Cancel
 Certificate Verification Settings 		
Address Reference Setting		
Restrict User Access		
▶ Copy Security		
▶ Auto Logout		
	-	
L		

Item	Description	Prior check
[Password]	Enter the password (up to 32 characters). The entered password is required when importing a certif- icate.	
[Retype Password]	Reenter the password for confirmation (up to 32 charac- ters).	
[OK]	Click this button to move to the Download page.	

-8

Clicking [Download] downloads a certificate in your computer.

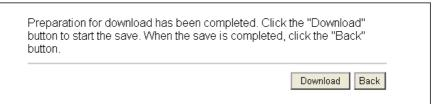


8.4 Registering a user certificate in this machine

Register a user certificate in this machine.

There are two methods of registering a certificate: (1) directly specifying a certificate when registering an E-mail address and (2) automatically registering a certificate by sending an E-mail with a digital signature to this machine.

Registering a user certificate in this machine enables you to send an encrypted E-mail from this machine to the user using the registered certificate (public key).

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

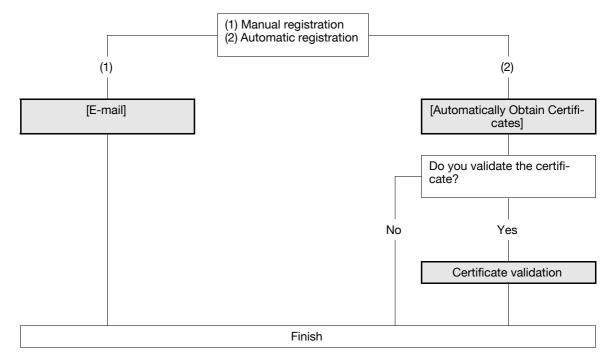

8.4.1 [E-mail]

In the administrator mode of **PageScope Web Connection**, select [Store Address] → [Address Book] → [Store Address] → [New Registration] → [E-mail].

	Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	S
Store Address 🛛 🗸 🛛	lisplay	🚛 To Main Menu
▼ Address Book	Address Book (E-mail)	
Store Address	No.	
▶ Icon	Use opening number	
▶ Group	 Direct Input 	
▶ Program	Name	
-	Index	
▶ Temporary One-Touch	Specify a keyword for address s	search and display by registered name.
Subject		ABC 💌
▶ Text		🗖 Main
Prefix/Suffix	Destination Information	
	E-mail Address	
	Registration of Certification Ir	nformation
	Registration of Certification	
	, , , , , , , , , , , , , , , , , , ,	
		Browse
	Contraction of Certification In	nformation
	Limiting Access to Destinatio	ne .
	Linning Access to Destinatio	
		Display
		OK Cancel

Item	Description	Prior check
[Registration of Certification Infor- mation]	Select the [Registration of Certification Information] check box. Click [Browse], and specify where to save the certifi- cate information to be registered. Certificate information is supported only as a DER (Distin- guished Encoding Rules) file. Clicking [Deletion of Certification Information] deletes the registered certificate information. You cannot register a certificate if the E-mail address to be registered as a destination does not match that of the user certificate. Before registering a certificate, check that those E-mail addresses are the same.	Where to save a cer- tificate

bizhub C360/C280/C220

8.4.2 [Automatically Obtain Certificates]

In the administrator mode of PageScope Web Connection, select [Network] - [E-mail Setting] - [S/MIME].

	http://www.administrator	Logout ?
•	Ready to Scan	
6	n Menu (Admin Mode)	3
Network 💽 Displa	ау	E To Main Menu
► TCP/IP Setting	S/MIME	
▼ E-mail Setting	S/MIME Comm.Setting	ON 🛩
► E-mail RX (POP)		address specified in the device registration
► E-mail TX (SMTP)	creation.)	dress specified at the time of certification
► S/MIME	Digital Signature	Do not add signature 💌
▶ LDAP Setting	E-Mail Text Encrypt. Method	3DES 💌
► IPP Setting	Automatically Obtain Certificates	ON 🖌
▶ FTP Setting	Print S/MIME information	ON 💌
► SNMP Setting	Certificate Verification Level Settings	
SMB Setting	Validity Period	Confirm
-	Key Usage	Do Not Confirm 💌
▶ Web Service Settings	Chain	Do Not Confirm 💌
Bonjour Setting	Expiration Date Confirmation	Do Not Confirm 💌
NetWare Setting		
AppleTalk Setting		OK Cancel
Network Fax Setting		
RebDAV Settings		
OpenAPI Setting		
TCP Socket Setting		
IEEE802.1X Authentication Setting		
LLTD Setting		
Bluetooth Setting		

Item	Description	Prior check
[S/MIME Comm. Setting]	Select [ON].	
[Automatically Ob- tain Certificates]	Select [ON].	
[Print S/MIME In- formation]	To print S/MIME information, select [ON].	

Reference

- Before you register a certificate, you must register the E-mail address of the user for the certificate with this machine.
- Automatically Obtain Certificates is available only when this machine can receive an E-mail. For details on settings for receiving an E-mail, refer to page 6-9.
- When the conditions above are satisfied, send an E-mail with a digital signature from a computer connected to a network to this machine. The certificate received by this machine is automatically registered when the E-mail address registered in that certificate matches the user's E-mail address registered in this machine.

8.4.3 Certificate validation

[Certificate Verification Level Settings]

In the administrator mode of PageScope Web Connection, select [Network] >> [E-mail Setting] >> [S/MIME].

Item	Description	Prior check
[Certificate Verifi- cation Level Set- tings]	To verify the certificate, configure settings to verify the certificate.	
[Validity Period]	Select whether to check that the target certificate is within the validity period.	
[Key Usage]	Select whether to check that the certificate is used ac- cording to the purpose approved by the issuer.	
[Chain]	Select whether to check that the certificate chain (certification path) is correct. The chain is validated by referencing the external certificates managed on this machine. For details, refer to page 8-34.	
[Expiration Date Confirmation]	Select whether to check that the target certificate is within the validity period. The OCSP service and CRL (Certificate Revocation List) are checked in this order when the expiration date of the certificate is checked.	

[Certificate Verification Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].

	🍌 Administrator	Logout 🤶
	Ready to Scan	
	n Menu (Admin Mode)	
Security 🔽 D	splay	E To Main Menu
▶ PKI Settings	Certificate Verification Settings	
Certificate Verification	Certificate Verification Settings	ON 💌
Settings	Timeout	15 sec. (5-300)
Address Reference Setting	CCSP Service	
Restrict User Access	URL	
Copy Security	Proxy Settings	
Auto Logout	Proxy Server Address	Please check to enter host name.
•	_	
	Proxy Server Port Number	8080 (1-65535)
	User Name	
	I Password is changed.	
	Password	
	Address not using Proxy Server	
		Please check to enter host name.
		OK Cancel

Item	Description	Prior check
[Certificate Verifi- cation Setting]	Select [ON] to verify the server certificate.	
[Timeout]	Enter a timeout period for expiration date confirmation.	Do you confirm the expiration date?
[OCSP Service]	Select this check box to use the OCSP service.	
[URL]	Enter the URL of the OCSP service (up to 511 characters). If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.	

Item	Description	Prior check
[Proxy Server Ad- dress]	To confirm the expiration date via a proxy server, enter its address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the proxy server (up to 63 characters).	
[Address not using Proxy Server]	To enable expiration date confirmation, specify an ad- dress that does not use the proxy server depending on your environment. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	


8.5 Restricting the use of the SMB address registered in the address book

Configure settings to restrict the use of the SMB address registered in the address book.

When the login user selects the required SMB address from the address book to send data, the system performs SMB authentication using the user name and password, which are specified in User Name and Password for user authentication. If the user name and password for user authentication are used for SMB authentication, you do not need to register SMB authentication information in the address book that everyone can access, so you can restrict the use of the SMB address by other people.

To use this function, do not enter any characters in [User ID] and [Password] of the SMB address.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

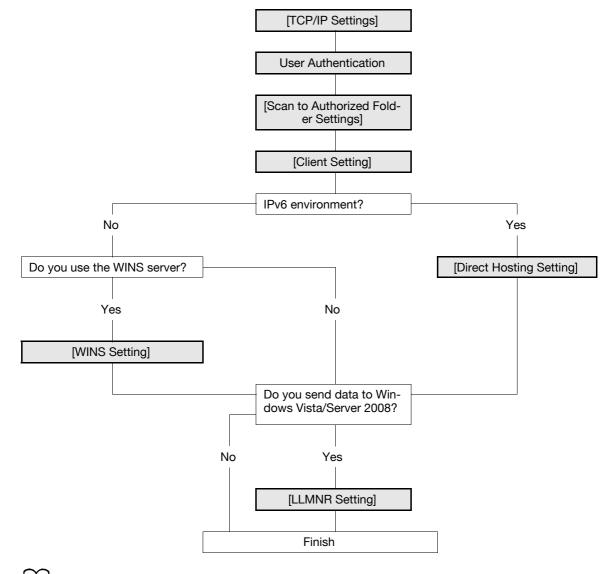

Reference

If [Scan to Authorized Folder Settings] is set to [ON], you cannot use some functions. For details, refer to page 8-42.

For details on how to register the SMB address, refer to page 11-7.

Configure settings to use this machine in the TCP/IP network environment.

• To specify the destination computer with the computer name (host name) for SMB transmission in IPv6 environment, prepare a DNS server and configure DNS settings in this machine.

For details, refer to page 2-2.

8.5.2 User Authentication

Configure settings to restrict users who use this machine.

For details, refer to the following reference pages.

- "Restricting users of this machine (MFP authentication)" (p. 7-2)
- "Restricting users of this machine (Active Directory)" (p. 7-10)
- "Restricting users of this machine (Windows domain or workgroup)" (p. 7-15)
- "Restricting users of this machine (NDS over TCP/IP)" (p. 7-22)
- "Restricting users of this machine (LDAP)" (p. 7-25)

8.5.3 [Scan to Authorized Folder Settings]

Configure settings to restrict the specification of addresses that users directly enter. For details, refer to page 8-42.

8.5.4 [Client Setting]

Configure SMB client settings. For details, refer to page 4-3.

8.5.5 [WINS Setting]

To perform SMB transmission via routers, configure the WINS server settings. For details, refer to page 4-4.

8.5.6 [Direct Hosting Setting]

To perform SMB transmission in an IPv6 environment, enable the Direct Hosting service. For details, refer to page 4-5.

8.5.7 [LLMNR Setting]

To perform name resolution in the environment configured to communicate with Windows Vista/Server 2008, and where the DNS server is not running, enable the LLMNR function.

For details, refer to page 4-5.


8.6 Using Web services to secure communication from Vista/Server 2008 to this machine via SSL

Configure settings to use the encrypted SSL communication from a computer running on the Windows Vista/Server 2008 to this machine in a Web services environment. Security of Web services communication can be enhanced using the SSL protocol encryption.

When you configure the SSL communication settings, check the following points.

- To use the encrypted SSL communication between this machine and the computer, you must set the bidirectional SSL communication between them. For details on configuring settings to establish an SSL communication from this machine to Windows Vista/Server 2008, refer to page 8-21.
- Your computer must be able to resolve the name of this machine using the DNS. Register this machine in the DNS server and configure the DNS settings in your computer in advance.
- If the certificate of this machine is not the one issued by the Certificate Authority (CA), you must register the device certificate in [Trusted Root Certification Authorities] of the local computer.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

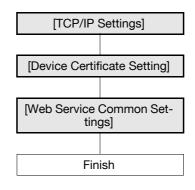

8.6.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

8.6.2 [Device Certificate Setting]

Configure settings for SSL communication.

For details, refer to page 8-2.

8.6.3 [Web Service Common Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [Web Service Settings] → [Web Service Common Settings].

Item	Description	Prior check
[Friendly Name]	Enter a Friendly Name (up to 62 characters).	
[SSL Setting]	Select [ON].	
[Publication Serv- ice]	If you use this machine in an environment where NetBIOS is disabled or only the IPv6 protocol communication is used by the Windows Vista or Server 2008 system, set this item to [Enable].	


8.7 Using Web services to establish an SSL communication from this machine to Vista/Server 2008

Configure settings to use the encrypted SSL communication from this machine to a computer running on the Windows Vista/Server 2008 in a Web services environment. Security of Web services communication can be enhanced using the SSL protocol encryption.

When you configure the SSL communication settings, check the following points.

- To use the encrypted SSL communication between this machine and the computer, you must set the bidirectional SSL communication between them. For details on configuring settings to establish an SSL communication from Windows Vista/Server 2008 to this machine, refer to page 8-20.
- Create a certificate at the computer first, and then associate the TCP/IP communication port (the default port number is 5358).

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

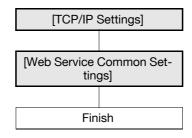

8.7.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

8.7.2 [Web Service Common Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [Web Service Settings] → [Web Service Common Settings].

Item	Description	Prior check
[Friendly Name]	Enter a Friendly Name (up to 62 characters).	
[SSL Setting]	Select [ON].	
[Publication Serv- ice]	If you use this machine in an environment where NetBIOS is disabled or only the IPv6 protocol communication is used by the Windows Vista or Server 2008 system, set this item to [Enable]. The Publication Service function can detect up to 512 destinations, including those detected with the NetBIOS service.	
[Certificate Verifi- cation Level Set- tings]	To verify the certificate, configure settings to verify the certificate.	
[Validity Period]	Select whether to check that the target certificate is within the validity period.	
[Key Usage]	Select whether to check that the certificate is used ac- cording to the purpose approved by the issuer.	
[Chain]	Select whether to check that the certificate chain (certifi- cation path) is correct. The chain is validated by referencing the external certifi- cates managed on this machine. For details, refer to page 8-34.	
[Expiration Date Confirmation]	Select whether to check that the target certificate is within the validity period. The OCSP service and CRL (Certificate Revocation List) are checked in this order when the expiration date of the certificate is checked.	

[Certificate Verification Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].


	🍌 Administrator	Logout ?
	Ready to Scan	
	👘 In Menu (Admin Mode)	Ð
Security 🔽 Dia	splay	💷 To Main Menu
PKI Settings	Certificate Verification Settings	
Certificate Verification	Certificate Verification Settings	ON 💌
Settings	Timeout	15 sec. (5-300)
Address Reference Setting	CCSP Service	
Restrict User Access	URL	
Copy Security	Proxy Settings	
Auto Logout	Proxy Server Address	Please check to enter host name.
	Proxy Server Port Number	8080 (1-65535)
	User Name	
	Ressword is changed.	
	Password	
	Address not using Proxy Server	
		Please check to enter host name.
		OK Cancel
		UK Cancel

Item	Description		
[Certificate Verifi- cation Setting]	Select [ON] to verify the server certificate.		
[Timeout]	Enter a timeout period for expiration date confirmation.	Do you confirm the expiration date?	
[OCSP Service]	Select this check box to use the OCSP service.		
[URL]	Enter the URL of the OCSP service (up to 511 characters). If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.		
[Proxy Server Ad- dress]	To confirm the expiration date via a proxy server, enter its address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address	
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number	
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).		
[Password is changed.]	Select this check box to change the password.		
[Password]	Enter the password to log in to the proxy server (up to 63 characters).		
[Address not using Proxy Server]	To enable expiration date confirmation, specify an ad- dress that does not use the proxy server depending on your environment. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.		

Configure settings to enable IP address filtering.

With IP address filtering, you can restrict access from the specified IP addresses. You can specify both IP addresses that are allowed to access this machine and IP addresses that are not allowed to access this machine.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

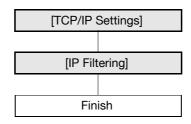

Reference

• IP address filtering is not supported in the IPv6 environment.

8.8.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

8.8.2 [IP Filtering]

In the administrator mode of **PageScope Web Connection**, select [Network] \mapsto [TCP/IP Settings] \mapsto [IP Filtering].

	凝 Administrator			Logout ?
	Ready to Scan			
	n Menu (Admin M	lode)		3
Network 🔽 Disp	olay			E To Main Menu
▼ TCP/IP Setting	IP Filtering			
► TCP/IP Setting	Permit Access		Enable 💌	
► IP Filtering	Set1	0.0.0.0	- 0.0.0.0	
▶ IPsec	Set2	0.0.0.0	- 0.0.0.0	
⊫ E-mail Setting	Set3	0.0.0.0	- 0.0.0.0	
EDAP Setting	Set4	0.0.0.0	- 0.0.0.0	
▶ IPP Setting	Set5	0.0.0.0	- 0.0.0.0	
▶ FTP Setting	Deny Access		Enable 💌	_
► SNMP Setting	Set1	0.0.0.0	- 0.0.0.0	
▶ SMB Setting	Set2	0.0.0.0	- 0.0.0.0	
Web Service Settings	Set3	0.0.0.0	- 0.0.0.0	
Bonjour Setting	Set4	0.0.0.0	- 0.0.0.0	
▶ NetWare Setting	Set5	0.0.0.0	- 0.0.0.0	
AppleTalk Setting	000	0.0.0	0.0.0.0	
Network Fax Setting				OK Cancel
⊫ WebDAV Settings				ON Cancer
OpenAPI Setting				
TCP Socket Setting				
IEEE802.1X Authentication Setting				
▶ LLTD Setting				
Bluetooth Setting				
	_			
<				


Item	Description	Prior check
[Permit Access]	To specify addresses you permit access from, select [En- able].	
[Set 1] to [Set 5]	Enter the start and end addresses of ranges you permit access from. Format: *.*.* (Asterisk * can be 0 to 255)	Address ranges that you permit access from
[Deny Access]	To specify addresses you deny access from, select [Enable].	
[Set 1] to [Set 5]	Specify the start and end addresses of ranges you deny access from. Format: *.*.* (Asterisk * can be 0 to 255)	Address ranges that you deny access from

8.9 Communicating using IPsec

Configure settings for IPsec communication.

The IPsec-based communication can prevent a data falsification and reveal of each IP packet. The communication can be secured even if you use the transport and application layers that do not support encryption.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

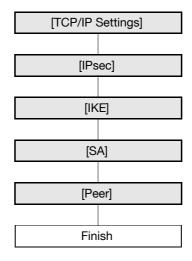

8.9.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

8.9.2 [IPsec]

In the administrator mode of PageScope Web Connection, select [Network] >> [TCP/IP Setting]>> [IPsec].

	🌆 Administrator			Lo	gout
	Ready to Scan				
	in Menu (Admin Mode)				K
Network 🔽 🛙	isplay			Е Т	o Main Men
▼ TCP/IP Setting	IPsec				
► TCP/IP Setting	IPsec		OFF 🚩		
▶ IP Filtering	IKE				
► IPsec	Key Validity Pe		28800	sec. (80-604800)	
⊫ E-mail Setting	Diffie-Hellman G		Group 2	· ·	
▶ LDAP Setting		. Set Edit	1		
▶ IPP Setting	1	Edit	Delete		
▶ FTP Setting	2	Edit	Delete		
► SNMP Setting	3	Edit	Delete		
▶ SMB Setting	4	Edit	Delete		
⊫ Web Service Settings	SA				
▶ Bonjour Setting	Lifetime After Es	stablishing S	A 3600	sec. (120-604800)	
NetWare Setting		. Set Edit			
▶ AppleTalk Setting	1	Edit			
⊫ Network Fax Setting	2	Edit	Delete		
▶ WebDAV Settings	3	Edit			
OpenAPI Setting	4	Edit			
TCP Socket Setting	5	Edit	Delete		
IEEE802.1X Authentication	6	Edit			
Setting	7	Edit	Delete		
LLTD Setting	8	Edit			
Bluetooth Setting	_	Lon	Delete		
	Peer				
	N	o. Set Edit	Delete		
	1	Edit	Delete		
	2	Edit	Delete		
	3	Edit	Delete		
	4	Edit	Delete		
	5	Edit	Delete		
	6	Edit	Delete		
	7	Edit	Delete		
	8	Edit	Delete		
	9	Edit	Delete		
	10	Edit	Delete		
				OK	Cancel
				UNI	

	Item	Description	Prior check
-	[IPsec]	Select [ON].	

8.9.3 [IKE]

In the administrator mode of PageScope Web Connection, select [Network] >>> [TCP/IP Setting] >>>> [IPsec].

Item	Description	Prior check
[Key Validity Peri- od]	Enter a validation period of the common key that is used for encrypted communication. When this period has expired, a new key is created. This can secure the communication.	
[Diffie-Hellman Group]	Select the Diffie-Hellman group.	

[IKE Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [TCP/IP Setting] → [IPsec] → [IKE] → [Edit].

(Up to four groups can be registered for the IKE.)

IKE Setting	
No.	1
Encryption Algorithm	OFF 💌
Authentication Algorithm	OFF 💌
	OK Cancel

Item	Description	Prior check
[Encryption Algo- rithm]	Select an encryption algorithm to be used for creation of the common key.	
[Authentication Al- gorithm]	Select an authentication algorithm to be used for creation of the common key.	

8.9.4 [SA]

In the administrator mode of PageScope Web Connection, select [Network] >> [TCP/IP Setting] >> [IPsec].

Item	Description	Prior check
[Lifetime After Es- tablishing SA]	Enter a validation period of the common key that is used for encrypted communication. When this period has expired, a new key is created. This can secure the communication.	

[SA Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] → [TCP/IP Setting] → [IPsec] → [SA] → [Edit].

(Up to eight groups can be registered for the SA.)

No.	1
Security Protocol	ESP 💌
ESP Encryption Algorithm	AES_CTR 💌
ESP Authentication Algorithm	MD5 💌
AH Authentication Algorithm	OFF 💌
	OK Cancel

Item	Description	Prior check
[Security Protocol]	Select a security protocol to use.	
[ESP Encryption Algorithm]	If you have set the Security Protocol to [ESP], select the ESP encryption algorithm.	
[ESP Authentica- tion Algorithm]	If you have set the Security Protocol to [ESP], select the ESP authentication algorithm.	
[AH Authentication Algorithm]	If you have set the Security Protocol to [AH], select the AH authentication algorithm.	

8.9.5 [Peer]

In the administrator mode of **PageScope Web Connection**, select [Network] → [TCP/IP Setting] → [IPsec] → [Peer] → [Edit].

(Up to 10 peers can be registered.)

ON 🛩
OFF 💌


Item	Description	Prior check
[Perfect Forward Secrecy]	To increase the IKE security level, select [ON]. If you have selected [ON], the communication time in- creases.	
[Peer]	Enter the IP address of the peer. When using IPv6, you can specify the IPv6 address.	IP address of the peer
[Pre-Shared Key Text]	Enter the Pre-Shared Key text to be shared with the peer (up to 64 characters). This text must be the same as that used at the peer.	
[Encapsulation Mode]	Select an IPsec operation mode.	

8.10 Using IEEE802.1X authentication

If you use this machine in a wired LAN environment having the IEEE802.1x authentication system, you must configure the supplicant (authentication client) function of this machine.

Using IEEE802.1x authentication can restrict any device not permitted by the administrator to connect to this LAN environment. Configure settings to fit your environment.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

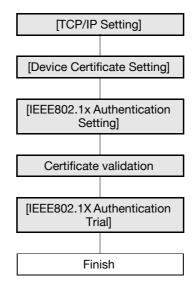

8.10.1 [TCP/IP Setting]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

8.10.2 [Device Certificate Setting]

Register the client certificate (device certificate) on this machine, based on the EAP authentication method to be used.

- If [EAP-Type] is [EAP-TLS], you must register the device certificate.
- If [EAP-Type] is [EAP-TTLS] or [PEAP], you may be required to register the device certificate according to your applications.

For details on device certificate registration, refer to page 8-2.

In the administrator mode of **PageScope Web Connection**, select [Network] → [IEEE802.1x Authentication Setting] → [IEEE802.1x Authentication Setting].

	& Administrator	Logout ?
	Ready to Scan	
	🕡 In Menu (Admin Mode)	Ð
Network 💌 Disp	lay	E To Main Menu
► TCP/IP Setting	IEEE802.1X Authentication Setting	
⊫ E-mail Setting	Authentication	Authenticated
LDAP Setting	Status	Autrenticated
► IPP Setting	Those settings marked with an "*" will tak OFF/ON.	e effect after the main switch is turned
▶ FTP Setting	IEEE802.1X Authentication Setting*	ON 💌
▶ SNMP Setting	Supplicant Setting	
SMB Setting	User ID	
Neb Service Settings	Password is changed.	
▶ Bonjour Setting	Password	
NetWare Setting	EAP-Type	OFF 🖌
· · · · · · · · · · · · · · · · · · ·	EAP-TTLS	
AppleTalk Setting	anonymous	
Network Fax Setting	Inner Authentication Protocol	MSCHAPv2
▶ WebDAV Settings	Server ID	
▶ OpenAPI Setting	Client Certificates (To install, access Security -> SSL/TLS)	Not installed.
TCP Socket Setting	Encryption Strength	Low V
▼ IEEE802.1X Authentication	Certificate Verification Level Settings	2007
Setting	Validity Period	Confirm
► IEEE802.1X Authentication	ĊN	Do Not Confirm 👻
Setting	Chain	Do Not Confirm 👻
IEEE802.1X Authentication Trial	Network Stop Time*	
▶ LLTD Setting	Stop Time*	0sec. (30-255)
Bluetooth Setting		
		OK Cancel
<		

Item	Description	Prior check
[Authentication Status]	 The authentication status is shown as follows. [Authenticated]: The authentication has completed. [Authenticating]: The authentication is in progress. [Unauthenticated]: Not authenticated status. [Authentication Failed]: The authentication has failed. [Failed to Retrieve Status]: No authentication status could be obtained. When you press [Refresh], the authentication status is updated. 	
[IEEE802.1x Au- thentication Set- ting]	Select [ON].	
[Supplicant Set- ting]	Configure settings required in order for this machine, which is a supplicant (authentication client), to receive au- thentication from the authentication server. Configure settings to fit your environment.	
[User ID]	Enter a user ID (up to 128 characters). This user ID is used for all EAP-Type options.	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password (up to 128 characters). The password is used for all EAP-Type options other than [EAP-TLS].	
[EAP-Type]	Select an EAP authentication method. If you select [Depend on Server], the EAP-Type provided by the authentication server will be used for authentica- tion. Configure the supplicant settings as required for this machine according to the EAP-Type provided by the au- thentication server. Do not set this item to [OFF].	EAP authentication method

Item	Description	Prior check
[EAP-TTLS]	Configure settings for EAP-TTLS.	
[anonymous]	Enter an anonymous name to be used for EAP-TTLS au- thentication (up to 128 characters). This item is available if [EAP-Type] is set to [EAP-TTLS] or [Depend on Server].	
[Inner Authentica- tion Protocol]	Select an EAP-TTLS inner authentication protocol. This item is available if [EAP-Type] is set to [EAP-TTLS] or [Depend on Server].	
[Server ID]	Enter a server ID (up to 64 characters). This setting is required if you verify the CN of the server certificate.	Whether to verify the CN of the server cer- tificate
[Client Certificate]	Select whether to encrypt authentication information us- ing client certificates of this machine. You can configure this setting when client certificates are registered in this machine. If [EAP-Type] is [EAP-TLS], the client certificates are al- ways required. This setting can be configured even if [EAP-Type] is set to [EAP-TTLS] or [PEAP].	
[Encryption Strength]	 Select an encryption strength level for encrypted communication with TLS. [Low]: Keys of any length are used for communication. [Mid]: Keys that are more than 56 bits in length are used for communication. [High]: Keys that are more than 128 bits in length are used for communication. [High]: Keys that are more than 128 bits in length are used for communication. This item is available if [EAP-Type] is set to anything other than [OFF] or [EAP-MD5]. 	
[Network Stop Time]	If an authentication process does not succeed within the specified time, all network communication will stop. To specify the delay between the start of an authentication process and the stop of network communication, select this box.	
[Stop Time]	Specify the delay (sec.) between the start of an authenti- cation process and the stop of network communication. To restart the authentication process after network com- munication has stopped, turn the main power of this ma- chine off and on again.	

8.10.4 Certificate validation

[IEEE802.1x Authentication Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] → [IEEE802.1x Authentication Setting] → [IEEE802.1x Authentication Setting].

Item	Description	Prior check
[Certificate Verifi- cation Level Set- tings]	To verify the server certificate, configure settings to verify the certificate.	
[Validity Period]	Select whether to check that the server certificate is within the validity period.	
[CN]	Select whether to check that the CN of the server certifi- cate matches the server address. To check the CN, specify [Server ID].	
[Chain]	Select whether to check that the server certificate chain (certification path) is correct. The chain is validated by referencing the external certifi- cates managed on this machine. For details, refer to page 8-34.	

In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].

	& Administrator	Logout ?
	Ready to Scan	
	🗊 In Menu (Admin Mode)	C
Security 🔽 Dis	play	E To Main Menu
▶ PKI Settings	Certificate Verification Settings	
Certificate Verification	Certificate Verification Settings	ON 💌
Settings	Timeout	15 sec. (5-300)
Address Reference Setting	CCSP Service	
Restrict User Access	URL	
Copy Security	Proxy Settings	
▶ Auto Logout	Proxy Server Address	Please check to enter host name.
	_	
	Proxy Server Port Number	8080 (1-65535)
	User Name	
	🗹 Password is changed.	
	Password	
	Address not using Proxy Server	
		Please check to enter host name.
		OK Cancel

Item	Description	Prior check
[Certificate Verifi- cation Setting]	Select [ON] to verify the server certificate.	

In the administrator mode of **PageScope Web Connection**, select [Network] → [IEEE802.1x Authentication Setting] → [IEEE802.1X Authentication Trial].

	http://www.actionary.com/actiona	Logout	?
e	Ready to Scan		
1	n Menu (Admin Mode)		3
Network Vetwork	ay	E To Main Me	enu
► TCP/IP Setting	IEEE802.1X Authentication T	rial	
⊫ E-mail Setting	Authentication	Authenticated	Refresh
EDAP Setting	Status	Automotica	
▶ IPP Setting			_
▶ FTP Setting		Authentication Trial	
▶ SNMP Setting			
E SMB Setting			
🗏 Web Service Settings			
▶ Bonjour Setting			
⊫ NetWare Setting			
AppleTalk Setting			
Network Fax Setting			
⊫ WebDAV Settings			
▶ OpenAPI Setting			
► TCP Socket Setting			
▼ IEEE802.1X Authentication Setting			
IEEE802.1X Authentication Setting			
 IEEE802.1X Authentication Trial 			
▶ LLTD Setting			
Bluetooth Setting			
<			

Item	Description	Prior check
[Authentication Status]	 The authentication status is shown as follows. [Authenticated]: The authentication has completed. [Authenticating]: The authentication is in progress. [Unauthenticated]: Not authenticated status. [Authentication Failed]: The authentication has failed. [Failed to Retrieve Status]: No authentication status could be obtained. When you press [Refresh], the authentication status is updated. 	
[Authentication Tri- al]	Click this button to attempt authentication immediately.	


8.11 Managing external certificates

You can manage external certificates from this machine.

Root certificates or interim certificate issued by a trusted Certification Authority (CA), certificates issued by a trusted End Entity (EE), or distrusted certificates can be registered with this machine for management. The registered external certificates are referenced during chain validation of a certificate, when making sure that its certificate path has no problems.

[External Certificate Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] ► [PKI Settings] ► [External Certificate Setting].

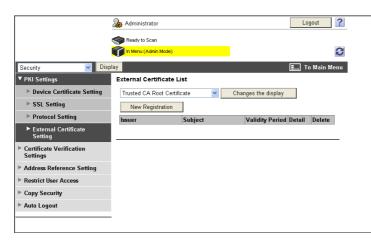

Item	Description
Certificate type	Select the type of an external certificate you want to display, and click [Change the display]. Then external certificates of the selected type are displayed in the list.
[New Registration]	Click this button to register a new external certificate. Click [Browse] in the new registration window to specify a new external certificate to be registered.
[Issuer]	Displays the issuer of an external certificate.
[Subject]	Displays the destination of an external certificate.
[Validity Period]	Displays the validity period of an external certificate.
[Detail]	Check detailed information about an external certificate.
[Delete]	Displays a message asking you to confirm deletion, enables you to delete an external certificate.

[New Registration]

	🌆 Administrator		Logout 🥐
	Ready to Scan		
	n Menu (Admin Mode)		3
Security 🔽 Di	splay		💷 To Main Menu
▼ PKI Settings	Import Certificates (PEM/DER)		
Device Certificate Setting	File		
▶ SSL Setting		Browse	
Protocol Setting			
External Certificate Setting			
Certificate Verification Settings			OK Cancel
Address Reference Setting			
Restrict User Access			
Copy Security			
▶ Auto Logout			

Item	Description
[File]	 Click [Browse] to specify a new external certificate to be registered. If [Trusted CA Root Certificate] is selected, register the route certificate of the trusted CA (certificate authority). If [Trusted CA Intermediate Certificate] is selected, register the interim certificate of the trusted CA (certificate authority). If [Trusted EE (End Entity) Certificate] is selected, individually register the trusted certificates. If [Non-Trusted Certificate] is selected, individually register the untrusted certificates.

Reference

Туре	Description
[Trusted CA Root Cer- tificate]	You must import the certificate of the CA that issued the certificate in question in this machine in advance, if you wish to validate the chain of a submitted cer- tificate.
[Trusted CA Intermedi- ate Certificate]	You must import the certificate of the intermediate certificate authority in this machine in advance, if the submitted certificate is issued by an intermediate certificate authority. You must also import the root certificate of the CA, which certifies the intermediate certificate authority, in this machine in advance.
[Trusted EE (End Entity) Certificate]	Trusted EE refers to the certificate to be submitted. By importing a certificate in this machine in advance, the certificate will be identified as a trusted certificate when it is submitted. If a certificate is registered as the trusted EE certificate in advance, this machine will skip validation of the certificate chain when it is submitted and will recognize it as a trusted certificate.
[Non-Trusted Certifi- cate]	Register non-trusted certificates in this machine.

8.12 Limiting accessible destinations for each user

Register and edit reference allowed groups.

When you register a user with this machine, add the user to a reference allowed group. In addition, when you add a destination to the address book, grant reference access permission only to the reference allowed group you add the user to. This limits the accessible destinations for each user.

You can also specify the access allowed level of each reference allowed group. Even a user who does not belong to a group permitted to reference a destination can still reference the destination if the access allowed level of the user is higher than or equal to that of the group permitted to reference the destination.

Reference

For details on the registration of users, refer to page 7-6.

For details on the registration of destinations with the address book, refer to page 11-7.

[Address Reference Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] >> [Address Reference Setting] >> [Edit].

		凝 Administrator		Logout ?
Security Display > PKI Settings Reference Allowed Group Registration Certificate Verification No. Settings Reference Allowed Group Name Address Reference Setting Access Allowed Level Restrict User Access OK		Ready to Scan		
► PKI Settings Reference Allowed Group Registration ► Certificate Verification Settings No. 1 ► Address Reference Setting Access Allowed Group Name ● ► Restrict User Access ● OK		n Menu (Admin Mode)		C
▷ Certificate Verification Settings No. 1 Reference Allowed Group Name	Security 🔽 Dis	splay		E To Main Menu
Settings Reference Allowed Group Name Address Reference Setting Access Allowed Level Restrict User Access OK	▶ PKI Settings	Reference Allowed Group Regis	tration	
Restrict User Access Copy Security OK Cancel			1	
► Copy Security OK Cancel	Address Reference Setting	Access Allowed Level	0 🛩	
	Restrict User Access			
h Auto Lowout	Copy Security			OK Cancel
· Auto Eugout	▶ Auto Logout			

Item	Description
[No.]	Displays the registration number.
[Reference Allowed Group Name]	Enter the name of the reference allowed group (up to 24 characters).
[Access Allowed Level]	Specify the access allowed level of the reference allowed group.

8.13 Restricting Registration and Change by a User

You can restrict the registering of addresses or biometric/IC card information and the changing of the From address by general users.

[Restrict User Access]

In the administrator mode of PageScope Web Connection, select [Security] >>> [Restrict User Access].

	🍌 Administrator		Logout 🤶
	Ready to Scan In Menu (Admin Mode) In Menu (Admin Mode)		C
Security 🔽 🖸	splay		🚛 To Main Menu
▶ PKI Settings	Restrict User Access		
 Certificate Verification Settings Address Reference Setting Restrict User Access 	Registering and Changing Addresses Biometric/IC Card Information Registration Changing the "From" Address	Allow V Allow V Login User Address	×
 Copy Security Auto Logout 			OK Cancel

Item	Description
[Registering and Changing Addresses]	Select [Restrict] to restrict registering and changing addresses by users.
[Biometric/IC Card In- formation Registration]	Select [Restrict] to restrict registering biometric/IC card information by users.
[Changing the "From" Address]	To restrict changing the From address by users when sending an E-mail from this machine, select [Admin. E-mail Address] or [Login User Address]. If [Admin. E-mail Address] is selected, the administrator's E-mail address is set as the From address of the E-mail to be sent from this machine. If [Login User Address] is selected, the user's E-mail address is set as the From address when it is registered. However, when the user's E-mail address is not registered or S/MIME is used to send an E-mail, the administrator's E-mail ad- dress is set as the From address. If [Allow] is selected, the user can change the From address before sending an E-mail.

Reference

- If [Enhanced Security Mode] is enabled, [Registering and Changing Addresses] is set to [Restrict].
- [Biometric/IC Card Information Registration] is available when the optional authentication unit is installed in this machine.
- If user authentication is enabled, the default of [Changing the "From" Address] is set to [Login User Address].

8.14 Configuring Copy Security Settings

Configure settings to use the copy guard and password copy functions.

Using the copy guard function enables you to print a copy guard (text with copy inhibit information embedded) on a document. If an attempt is made to copy a document with a copy guard printed, a warning message is displayed to disable copying.

Using the password copy function enables you to embed a password in a document. If an attempt is made to copy a document with a password embedded, the system will prompt you to enter the password. Copying cannot be performed unless the correct password is entered.

Reference

- To use the copy guard and password copy functions, install the optional **Security Kit SC-507** in this machine.
- For details on the copy guard and password copy functions, refer to the [User's Guide Copy Operations].

[Copy Security]

In the administrator mode of PageScope Web Connection, select [Security] >> [Copy Security].

(If the optional Security Kit SC-507 is not installed, this menu item will not be displayed.)

	凝 Administrator		Logout
	Ready to Scan		
	n Menu (Admin Mode)		S
Security 💌	Display		🚛 To Main Menu
▶ PKI Settings	Copy Security		
Certificate Verification	Copy Guard	ON 🔽	
Settings	Password Copy	ON 💌	
Address Reference Setting			
Restrict User Access			OK Cancel
Copy Security			
▶ Auto Logout			

Item	Description
[Copy Guard]	Select [ON] to use the copy guard function.
[Password Copy]	Select [ON] to use the password copy function.

8.15 Configuring the administrator password

Configure the administrator password of this machine.

[Administrator Password Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] **>** [Administrator Password Setting].

Reference

- If [Enhanced Security Mode] is enabled, this menu item will not be displayed.
- If a device certificate has not been registered, this menu item will not be displayed .
- This menu does not appear if [Mode using SSL/TLS] is set to [None] in [Security] → [PKI Settings] → [SSL Setting], when a device certificate is already registered.

	🎥 Administrator	Logout 🤶
	Ready to Scan	_
	Menu (Admin Mode)	3
Security 🔽 Dis	play	E To Main Menu
▶ PKI Settings	Administrator Password Setting	
Certificate Verification	Password is changed.	
Settings	New Administrator Password	
Address Reference Setting	Re-type New Administrator Password	
Restrict User Access		
Copy Security		OK Cancel
Auto Logout		
 Administrator Password Setting 		

Item	Description
[Password is changed.]	Select this check box to change the password.
[New Administrator Password]	Enter a new administrator password (up to 8 characters, excluding space and ").
[Re-type New Adminis- trator Password]	Enter the new administrator password again for confirmation.

Reference

 You cannot register a password less than eight characters when [Security Settings]
 → [Security Details]
 → [Password Rules] is set to [Enable] in the [Administrator Settings] on the Control Panel. If a user password containing less than eight characters has already been registered, change the password so that it contains eight characters before setting [Password Rules] to [Enable].

8.16 Configuring the function permission of the public user

Configure the function permission and reference permission of the public users.

[Public User]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] **>>** [User Authentication Setting] **>>** [Public User].

(This menu item will not be displayed if the public user access is not permitted.)

	h Administrator	Logout 🧧
	Ready to Scan	
	n Menu (Admin Mode)	
		_
	play	E To Main Men
General Settings	Public User	
User Authentication Setting	Function Permission	
User Registration	Сору	Allow 💌
Default Function	Scan	Allow 💙
Permission	Save to External Memory	Restrict 🛩
Public User	External Memory Document Scan	Restrict 🛩
Administrative Setting	Fax	Allow Y
Account Track Settings	Print	Allow 🖌
External Server Settings	User Box	Allow 🖌
	Print Scan/Fax TX	Allow 🖌
Public User Box Setting	Manual Destination Input	Allow
User/Account Common Setting	Mobile/PDA	Allow 🖌
	Limited Color Print	Allow 🖌
Scan to Home Settings		
Scan to Authorized Folder Settings	Output Permission(Print)	
Securiga	Color	Allow 💙
	Black	Allow 💌
	Output Permission(TX)	
	Color	Allow 🔽
	Limiting Access to Destinations	
	Reference Allowed Group	
		Search from List
		Registered Reference Group Number
		Registered Reference Group Number
		TotalO
	Access Allowed Level	Totalo
	No. Access Altimed Fale	0 🗸
		OK Cancel

Item	Description
[Function Permission]	Specify function permissions. Specify whether to permit [Copy], [Scan], [Save to External Memory], [External Memory Document Scan], [Fax], [Print], [User Box], [Print Scan/Fax TX], [Manual Destination Input], [Mobile/PDA], and [Limited Color Print]. If all operations are disabled, no user will not be able to log in to this machine as the public user.
[Output Permis- sion(Print)]	Configure settings to restrict the print functions. You can specify whether to permit color and black printing respectively.
[Output Permis- sion(TX)]	Configure settings to restrict the transmission functions. You can also specify whether to permit the transmission of color images.
[Limiting Access to Destinations]	Restrict address book entries that the public user can reference. To add the public user to a reference allowed group, select the check box and click [Search from List]. From the displayed list, select the reference allowed group to which the public user is added. You can select one or more reference allowed groups. To specify the access allowed level, select the check box and specify the ac- cess allowed level.

Reference

- By default, the sheets printed in the single color or 2 color mode are counted as being printed in color. To restrict use of the color printing or color image transmission functions, you can change this behavior to treat printing in the single color or 2 color mode as monochrome printing if necessary. For details, refer to page 10-40.
- Whether to allow the [Save to External Memory] function can be specified when [Save Document] is set to [ON] in [System Settings]→[User Box Settings]→[External Memory Function Settings]. Whether to allow the [External Memory Document Scan] function can be specified when [USB to User Box] is set to [ON] in [External Memory Function Settings]. For details, refer to page 12-7.
- When [Security Settings] >> [Security Details] >> [Manual Destination Input] is set to [Restrict] in [Administrator Settings] on the control panel, the user cannot manually enter the address regardless of the setting of this function.
- To connect this machine to a cellular phone or PDA, install the optional Local Interface Kit EK-605 in this machine. Whether to allow the [Mobile/PDA] function can be specified when [Bluetooth] is set to [Enable] in [Network]→[Bluetooth Setting] and [Bluetooth Print Settings] is set to [ON] in [System Settings]→[System Connection Setting].

8.17 Restricting Users' Direct Entry of Destinations

You can restrict users' direct entry of destinations.

Enabling this item disables direct entry of destinations except for recipients of faxes or IP address faxes. Therefore users can specify sending destinations only by accessing the address book. Enabling this item also applies the following restrictions.

- Users cannot save documents to User Boxes
- Users cannot transmit documents from User Boxes
- Users cannot use annotation User Boxes
- Users cannot use the image panel
- Users cannot select addresses from the transmission history
- Users cannot use the URL notification function

To restrict direct entry of destinations by users, it is effective to combine following settings depending on your operating environments.

- Restrict address registration by users (p. 8-37).
- If you do not want users to use the LDAP server, do not register the LDAP server.(p. 10-5)
- When you permit the public user access, restrict scanning by the public user.(p. 8-40)
- If you are concerned about retrieval of images from User Boxes, do not grant the User Box operation to users.(p. 12-8)
- If you are concerned about retrieval of images via TCP Socket, disable TCP Socket.(p. 9-2)

Reference

By configuring Scan to Authorized Folder Settings in an environment where user authentication is enabled, you can restrict the access to SMB destinations registered in the address book. For details, refer to page 8-18.

[Scan to Authorized Folder Settings]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] ► [Scan to Authorized Folder Settings].

	& Administrator		Logout 🤶
	Seady to Scan		
	📦 In Menu (Admin Mode)		3
User Auth/Account Track 💌 Disp	lay		E To Main Menu
▶ General Settings	Scan to Authorized Folder Settings		
User Authentication Setting	Allows scanning to authorized folders.		
Account Track Settings	Scan to Authorized Folder Settings	ON 🛩	
External Server Settings			
▶ Public User Box Setting			OK Cancel
User/Account Common Setting			
Scan to Home Settings			
Scan to Authorized Folder Settings			

Item	Description
[Scan to Authorized Folder Settings]	To restrict users' direct entry of destinations, select [ON].



9

9 Cooperating with applications


9.1 Using applications that communicate with this machine with TCP Socket

Configure setting for TCP Socket of this machine.

TCP Socket is used for data communication between this machine and application software running on the computer.

If you have registered the device certificate on this machine, you can encrypt TCP Socket communications between the application software and this machine with SSL.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

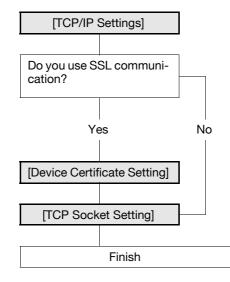

Reference

- If you use PageScope Authentication Manager for authentication, configure the TCP Socket setting to use SSL/TLS.
- If authentication is performed by the external server when using applications that communicate with this machine using TCP Socket, configure the TCP Socket setting to use SSL/TLS.

9.1.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

9.1.2 [Device Certificate Setting]

Configure settings for SSL communication. For details, refer to page 8-2.

9.1.3 [TCP Socket Setting]

In the administrator mode of PageScope Web Connection, select [Network] >> [TCP Socket Setting].

	Administrator
	Ready to Scan
	🗊 In Menu (Admin Made)
Network 💌	splay 📃 📰 To Main Menu
► TCP/IP Setting	TCP Socket Setting
⊫ E-mail Setting	(Turn the main switch OFF, and then ON , when changing TCP Socket.)
▶ LDAP Setting	TCP Socket
▶ IPP Setting	Port Number 0 (1-65535)
► FTP Setting	
► SNMP Setting	Port No.(SSL) 0 (1-65535)
SMB Setting	TCP Socket(ASCII Mode)
, and the second s	Port No.(ASCII Mode) 0 (1-65535)
Neb Service Settings	
Bonjour Setting	OK Cancel
NetWare Setting	
AppleTalk Setting	
Network Fax Setting	
WebDAV Settings	
OpenAPI Setting	
TCP Socket Setting	
▶ IEEE802.1X Authentication Setting	
▶ LLTD Setting	
▶ Bluetooth Setting	
	_
<	ш

Item	Description	Prior check
[TCP Socket]	Select this check box.	
[Port Number]	Enter a port number.	
[Use SSL/TLS]	To use the SSL/TLS, select the [Use SSL/TLS] check box.	Do you use SSL/TLS?
[Port No.(SSL)]	Enter the port number to be used for SSL communication.	

Reference

- If [Enhanced Security Mode] is enabled, [Use SSL/TLS] is automatically enabled.
- If you select [OK] after changing multiple port numbers together in **PageScope Web Connection** or on the **Control Panel**, a port number duplication error may be displayed. When this error is displayed, first change one port number and select [OK]. Then change another one and select [OK].

9.2 Linking an OpenAPI system with this machine

Configure the OpenAPI settings of this machine.


These settings are required when you want to link an OpenAPI system with this machine.

If you have registered the device certificate on this machine and if you use this machine as a communication server, you can encrypt OpenAPI communications from the client to this machine using SSL. Also, this machine can request the OpenAPI client for a submission of the client certificate. When the client connects to this machine, the submitted client certificate is verified and the client can be authenticated.

When this machine communicates as a client and when the certificate is submitted by the server, this machine can verify the submitted certificate.

If the OpenAPI connection application supports the SSDP function, you can notify the application that the OpenAPI service has started on this machine by using the SSDP function of this machine. If the OpenAPI service is searched by the SSDP function in the application, a response will be returned when this machine satisfies relevant search conditions.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

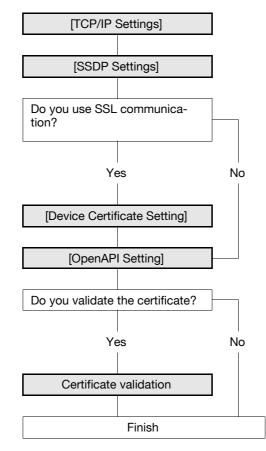

Reference

 If you use PageScope Authentication Manager for authentication, configure the OpenAPI setting to use SSL/TLS.

9.2.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

9.2.2 [SSDP Settings]

In the administrator mode of PageScope Web Connection, select [Network] >> [SSDP Settings].



Item	Description	Prior check
[SSDP]	You can notify the application that the OpenAPI service has started on this machine, if the OpenAPI connection application supports the SSDP function and it is set to [ON]. If the OpenAPI service is searched by the SSDP function in the application, a response will be returned when this machine satisfies relevant search conditions.	Does the application support the SSDP function?
[Multicast TTL Set- ting]	Enter TTL (Time To Live) for SSDP multi-cast packet. The value is decremented by one each time a communi- cation is established via the router. When the value reach- es 0, packets are discarded.	

9.2.3 [Device Certificate Setting]

Configure settings for SSL communication.

For details, refer to page 8-2.

9.2.4 [OpenAPI Setting]

In the administrator mode of PageScope Web Connection, select [Network] >> [OpenAPI Setting].

	Administrator	Logout
	Ready to Scan	
	👔 In Menu (Admin Mode)	
Network 🔽 🖸	isplay	E To Main Me
► TCP/IP Setting	OpenAPI	
⊫ E-mail Setting	Use SSL/TLS	Non-SSL Only 💌
EDAP Setting	Port Number	50001 (1-65535)
► IPP Setting	Port No.(SSL)	50003 (1-65535)
▶ FTP Setting	Certificate Verification Level Settings	
► SNMP Setting	Client Certificates	Do not request
▶ SMB Setting	Validity Period CN	Do Not Confirm
Web Service Settings	Key Usage	Do Not Confirm
Bonjour Setting	Chain	Do Not Confirm
▶ NetWare Setting	Expiration Date Confirmation	Do Not Confirm 💙
AppleTalk Setting		
Network Fax Setting		OK Cancel
▶ WebDAV Settings		
OpenAPI Setting		
TCP Socket Setting		
■ IEEE802.1X Authentication Setting		
▶ LLTD Setting		
Bluetooth Setting		

Item	Description	Prior check
[Use SSL/TLS]	To use SSL encryption, select [SSL Only] or [SSL/Non-SSL].	Do you use SSL/TLS?
[Port Number]	Enter a port number.	
[Port No.(SSL)]	Enter the port number to be used for SSL communication.	

Reference

- If [Enhanced Security Mode] is enabled, [Use SSL/TLS] is set to [SSL Only].
- When you use **PageScope Authentication Manager** for authentication from the printer driver, set [System Connection] → [OpenAPI Settings] → [Authentication] to [OFF] in [Administrator Settings] on the **Control Panel**.
- If you select [OK] after changing multiple port numbers together in **PageScope Web Connection** or on the **Control Panel**, a port number duplication error may be displayed. When this error is displayed, first change one port number and select [OK]. Then change another one and select [OK].

Q

9.2.5 Certificate validation

[Certificate Verification Level Settings]

In the administrator mode of PageScope Web Connection, select [Network] ► [OpenAPI Settings].

Item	Description	Prior check
[Certificate Verifi- cation Level Set- tings]	To verify the certificate, configure settings to verify the certificate.	
[Client Certificate]	Specify whether to request for client certificates. If you authenticate the client by requesting for its certificate (verification of client certificate), select [Request].	Do you request for client certificates?
[Validity Period]	Select whether to check that the target certificate is within the validity period.	
[CN]	Select whether to check that the CN of the certificate matches the server address.	
[Key Usage]	Select whether to check that the certificate key is being used properly.	
[Chain]	Select whether to check that the certificate chain (certifi- cation path) is correct. The chain is validated by referencing the external certifi- cates managed on this machine. For details, refer to page 8-34.	
[Expiration Date Confirmation]	Select whether to check the target certificate for valida- tion. The OCSP service and CRL (Certificate Revocation List) are checked in this order when the expiration date of the certificate is checked.	

[Certificate Verification Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].

	🍌 Administrator	Logout ?
	Ready to Scan	
	👔 In Menu (Admin Mode)	3
Security 🔽 Di	splay	🗐 To Main Menu
PKI Settings	Certificate Verification Settings	
Certificate Verification	Certificate Verification Settings	ON 🛩
Settings	Timeout	15 sec. (5-300)
Address Reference Setting	CCSP Service	
Restrict User Access	URL	
Copy Security	Proxy Settings	
Auto Logout	Proxy Server Address	Please check to enter host name.
	-	
	Proxy Server Port Number	8080 (1-65535)
	User Name	
	Ressword is changed.	
	Password	
	Address not using Proxy Server	
		Please check to enter host name.
		OK Cancel
		OK Calicel

Item	Description	Prior check
[Certificate Verifi- cation Setting]	Select [ON] to verify the certificate.	
[Timeout]	Enter a timeout period for expiration date confirmation.	Do you confirm the expiration date?
[OCSP Service]	Select this check box to use the OCSP service.	
[URL]	Enter the URL of the OCSP service (up to 511 characters). If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.	
[Proxy Server Ad- dress]	To confirm the expiration date via a proxy server, enter its address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the proxy server (up to 63 characters).	
[Address not using Proxy Server]	To enable expiration date confirmation, specify an ad- dress that does not use the proxy server depending on your environment. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	


9.3 Using the FTP server and WebDAV server functions

Configure settings to use the FTP server and WebDAV server functions of this machine.

These settings are required when you use an application that links with this machine as an FTP client or a WebDAV client.

If you use this machine as the WebDAV server, you can encrypt the communication from the application with SSL for security enhancement.

Use the following flowchart to configure settings.

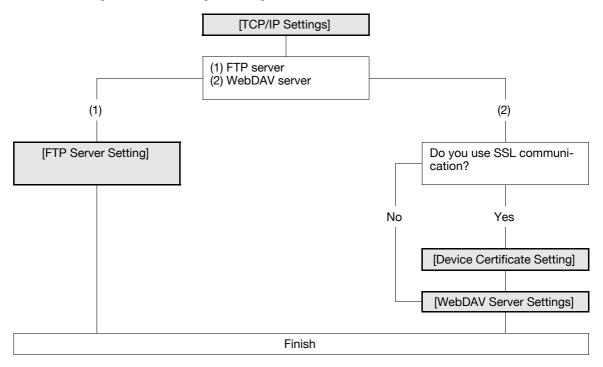

9.3.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

9.3.2 [Device Certificate Setting]

Configure settings for SSL communication. For details, refer to page 8-2. Q

9.3.3 [FTP Server Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] **>>** [FTP Setting] **>>** [FTP Server Setting].

	🌆 Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		3
Network	Display		🚛 To Main Menu
► TCP/IP Setting	FTP Server		
⊫ E-mail Setting	FTP Server	ON 🔽	
▶ LDAP Setting			
► IPP Setting			OK Cancel
▼ FTP Setting			
► FTP TX Setting			
► FTP Server Setting			
▶ SNMP Setting			
▶ SMB Setting			
▶ Web Service Settings			
▶ Bonjour Setting			
NetWare Setting			
► AppleTalk Setting			
▶ Network Fax Setting			
▶ WebDAV Settings			
▶ OpenAPI Setting			
► TCP Socket Setting			
▶ IEEE802.1X Authentication Setting			
► LLTD Setting			
Bluetooth Setting			
<			
N	III		

Item	Description	Prior check
[FTP Server]	Select [ON].	

Reference

• If [Enhanced Security Mode] is enabled, this item is set to [OFF].

9.3.4 [WebDAV Server Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] → [WebDAV Settings] → [WebDAV Server Settings].

	🌆 Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	2
Network	Display	E To Main Menu
► TCP/IP Setting	WebDAV Server Settings	
⊫ E-mail Setting	WebDAV Settings	ON 💌
LDAP Setting	SSL Setting	Non-SSL Only 💌
▶ IPP Setting	Access Rights Settings	
▶ FTP Setting	Password is changed. (Pas New Password	sswora is currently set.)
► SNMP Setting	Retype New Password	
▶ SMB Setting	netype new Password	Initial Password
Neb Service Settings		IIIItal E asswuld
Bonjour Setting		OK Cancel
▶ NetWare Setting		OK Cancel
AppleTalk Setting		
Network Fax Setting		
▼ WebDAV Settings		
▶ WebDAV Client Settings		
WebDAV Server Settings	S	
▶ OpenAPI Setting		
TCP Socket Setting		
IEEE802.1X Authentication Setting		
▶ LLTD Setting		
▶ Bluetooth Setting		
<		
N		

Item	Description	Prior check
[WebDAV Settings]	Select [ON].	
[SSL Setting]	To use the SSL/TLS protocol, select [SSL Only] or [SSL/Non-SSL].	Do you use SSL?
[Password is changed.]	Select this check box to change the password.	
[Current Password]	Enter the currently specified password (up to 8 charac- ters). This item is not displayed when the default is not changed.	
[New Password]	Enter the password used to access the WebDAV server (up to 8 characters, excluding space and ").	
[Retype New Pass- word]	Reenter the password for confirmation (up to 8 charac- ters).	
[Initial Password]	To initialize the existing password, click this button. Default setting: sysadm	

Reference

• Before you use the SSL protocol, register the device certificate. For details, refer to page 8-2.

9.4 Canceling the connection with applications

You can cancel the connection from this machine to the server when an error occurs on the server while **Pag-eScope My Panel Manager** is running.

[System Connection Setting]

In the administrator mode of **PageScope Web Connection**, select [System Settings] **>>** [System Connection Setting].

	-		
	Administrator		Logout ?
	Ready to Scan		
	n Menu (Admin Mode)		3
System Settings 🔽 Disp	olay		E To Main Menu
Machine Setting	System Connection Setting		
Register Support Information	Prefix/Suffix Automatic Setting	OFF 🛩	
Network TWAIN	Application Connection Setting		
User Box Setting	PageScope My Panel Manager	OFF 🐱	
Kamp Settings	My Spool	OFF 🛩	
Blank Page Print Settings	Bluetooth Print Settings	ON 🚩	
Skip Job Operation Settings			
Flash Display Setting			OK Cancel
System Connection Setting			
Display Setting			
Outline PDF Setting			

Item	Description
[PageScope My Panel Manager]	Select [OFF] when canceling the connection from this machine to PageScope My Panel Manager .
[My Spool]	This setting is not used.



10 Managing

10.1 Specifying the date and time of this machine

Specify the date and time of the clock built into this machine.


Select one of two procedures: manually specifying the date and time and obtaining them from the NTP server via the network.

Before using Fax in this machine, specify the date and time of this machine. When connecting this machine to Active Directory, specify the date and time of this machine as required.

Specify the date and time of this machine when using this machine for the following purposes. For details, refer to the relevant reference page.

- "Searching for the E-mail address in the LDAP server" (p. 10-5)
- "Restricting users of this machine (Active Directory)" (p. 7-10)

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

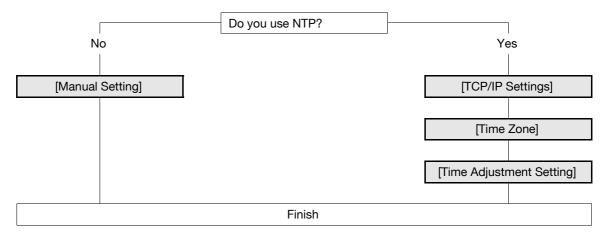

10.1.1 [Manual Setting]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] → [Date/Time Setting] → [Manual Setting].

	& Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		8
Maintenance 🔽 Dis	play		🚛 To Main Menu
▶ Meter Count	Manual Setting		
ROM Version	Date		
Import/Export	Year	2008	
Status Notification Setting	Month	10	
Total Counter Notification Setting	Day Time	8	
▼ Date/Time Setting	Hour	11	
Manual Setting	Minute	58	
► Time Adjustment Setting	Time Zone	GMT 0:00 🔽	
▶ Timer Setting	🗆 Daylight Saving Time	(1-150)	
•			
Network Error Code Display Setting			OK Cancel
▶ Reset			
License Settings			
Edit Font/Macro			

Item	Description	Prior check
[Year]	Enter the year.	
[Month]	Enter the month.	
[Day]	Enter the day.	
[Hour]	Enter the hour.	
[Minute]	Enter the minute.	
[Time Zone]	Specify the time difference from GMT.	Time Zone
[Daylight Saving Time]	Specify the daylight saving time as required.	

10.1.2 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

10.1.3 [Time Zone]

Specify the time zone. For details, refer to page 10-3.

10.1.4 [Time Adjustment Setting]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] → [Date/Time Setting] → [Time Adjustment Setting].

▶ Meter Count Time Adjustment Setting ▶ ROM Version Time Adjustment Setting ▶ Import/Export Auto IPv6 Retrieval ▶ Status Notification Setting NTP Server Address ▶ Total Counter Notification Setting Port No. ▼ Date/Time Setting Auto Time Adjustment ▶ Manual Setting Polling Interval	?	Logout 🤶		Administrator	
Meter Count Time Adjustment Setting ON v ROM Version Time Adjustment Setting ON v Import/Export Auto IPv6 Retrieval ON v Status Notification Setting NTP Server Address Please check to enter host name. D0.0.0 Dot No. 123 (1-65535) V Date/Time Setting Auto Time Adjustment OFF v Manual Setting Polling Interval 24 (1-240) Time Setting Adjust OFF v Network Error Code Display Adjust OK				Pasakuta Saan	
Maintenance Display To Main Meter Count Time Adjustment Setting Ime Adjustment Setting ROM Version Time Adjustment Setting ON Import/Export Auto IPv6 Retrieval ON Status Notification Setting OH ON Total Counter Notification Setting Port No. 123 (1-66535) Date/Time Setting Auto Time Adjustment OFF OFF Manual Setting Polling Interval 24 (1-240) Time Adjustment Setting Adjust OK Cancer Network Error Code Display Adjust OK Cancer	2	-			
Meter Count Time Adjustment Setting ROM Version Time Adjustment Setting Import/Export Auto IPv6 Retrieval NTP Server Address □ Please check to enter host name. 0.0.0.0 □ 0.0.0 Total Counter Notification Setting Port No. 123 (1-65535) Auto Time Adjustment ○FF ♥ Polling Interval 24 Timer Setting Adjust Timer Setting Adjust		<u>K</u>			
ROM Version Time Adjustment Setting ON v Import/Export Auto IPv6 Retrieval ON v Status Notification Setting NTP Server Address Please check to enter host name. D.0.0.0 D.0.0.0 D.0.0.0 * Total Counter Notification Setting Port No. 123 (1-65535) * Date/Time Setting Auto Time Adjustment OFF v * Manual Setting Polling Interval 2.4 (1-240)	Menu	E To Main Men		play	Maintenance 🔽 Disp
Import/Export Auto IP-6 Retrieval ON v Status Notification Setting NTP Server Address Please check to enter host name. Total Counter Notification Setting Port No. 123 (1-65535) Date/Trime Setting Auto Time Adjustment OFF v Manual Setting Polling Interval 24 (1-240)				Time Adjustment Setting	► Meter Count
Import Export NTP Server Address Please check to enter host name. Status Notification Setting D.0.0.0 Total Counter Notification Setting Port No. 123 (1-65535) Date/Time Setting Auto Time Adjustment OFF v Manual Setting Polling Interval 24 (1-240) Time Adjustment Setting Adjust OK Network Error Code Display Setting Adjust OK			ON 💌	Time Adjustment Setting	ROM Version
Status Notification Setting 0.0.0 Total Counter Notification Setting Port No. 123 (1-65635) Auto Time Adjustment OFF • Manual Setting Polling Interval Time Adjustment Setting Adjust Time Setting Adjust			ON 💌	Auto IPv6 Retrieval	▶ Import/Export
▶ Total Counter Notification Setting 0.0.0 ▶ Date/Time Setting Port No. ▶ Manual Setting OFF ▼ ▶ Manual Setting Polling Interval ▶ Time Adjustment Setting 24 ▶ Time Setting Adjust OK Cance ▶ Network Error Code Display Setting Adjust OK Cance		nter host name.		NTP Server Address	Status Notification Setting
Setting Port No. 123 (1-66535) * Date/Time Setting Auto Time Adjustment OFF * * Manual Setting Polling Interval 24 (1-240) * Time Adjustment Setting Adjust OK * Timer Setting Adjust OK			0.0.0.0		_
Manual Setting Poling Interval Adjust OK Cance Time Adjust OK Cance Network Error Code Display Setting)	123 (1-65535)	Port No.	
Time Adjustment Setting Time Adjustment Setting Timer Setting Adjust OK Cance Network Error Code Display Setting			OFF 💌	Auto Time Adjustment	Date/Time Setting
Timer Setting Adjust OK Cance Network Error Code Display Setting			24 (1-240)	Polling Interval	▶ Manual Setting
Network Error Code Display Setting				·	▶ Time Adjustment Setting
Setting		OK Cancel	Adjust		Timer Setting
Reset					
					Reset
License Settings					License Settings
Edit Font/Macro					Edit Font/Macro

Item	Description	Prior check
[Time Adjustment Setting]	Select [ON].	
[Auto IPv6 Retriev- al]	To automatically obtain the IPv6 address of the NTP serv- er, select [ON]. This item is necessary when IPv6 is used while DHCPv6 is enabled.	Can the IPv6 ad- dress be obtained automatically?
[NTP Server Ad- dress]	Enter the NTP server address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Port No.]	Enter a port number. Default setting: 123	Server port number
[Auto Time Adjust- ment]	To automatically connect to the NTP server and correct the time, select [ON].	Can the time be cor- rected automatical- ly?
[Polling Interval]	When automatically correcting the time, specify its interval on a hour basis.	
[Adjust]	Click this button to connect to the NTP server in the spec- ified conditions and adjust the time.	

10.2 Searching for the E-mail address in the LDAP server


Configure settings to search for the E-mail address in the LDAP server.

When the LDAP server is used for user management, you can search for the E-mail address via the LDAP server. Using this setting enables you to display [Address Search] in the Fax/Scan mode and search for the address via the LDAP server. When specifying an address, use the LDAP server to eliminate the need to register the address in this machine or directly enter the address.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

Reference

- When specifying Active Directory as the LDAP server and enabling GSS-SPNEGO authentication, register the DNS server connected to Active Directory in [TCP/IP Settings] of this machine. Also specify the date and time for this machine to match the system time of Active Directory.
- To use the same LDAP server for destination search and for user authentication, the LDAP server certificate verification setting for destination search specified in [Setting Up LDAP] is also applicable to the LDAP server certificate verification setting for user authentication specified in [User Auth/Account Track] → [External Server Settings]. For details on configuring the LDAP server for user authentication and certificate verification, refer to page 7-25.

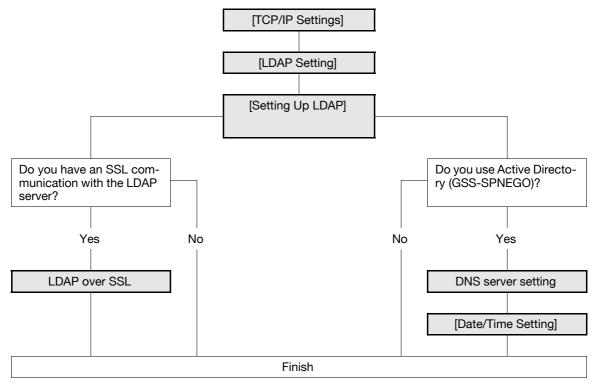

Reference

For details on how to send an E-mail using the LDAP search function, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

10.2.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment.

For details, refer to page 2-2.

10.2.2 [LDAP Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] → [LDAP Setting] → [LDAP Setting].

	凝 Administrator		Logout ?
	Ready to Scan		
	n Menu (Admin Mode)		e
Network	Display		E To Main Menu
TCP/IP Setting	LDAP Setting		
⊫ E-mail Setting	Enabling LDAP	ON 💌	
▼ LDAP Setting			
► LDAP Setting			OK Cancel
Setting Up LDAP			
▶ IPP Setting			
▶ FTP Setting			
► SNMP Setting			
▶ SMB Setting			
Web Service Settings			
Bonjour Setting			
NetWare Setting			
AppleTalk Setting			
Network Fax Setting			
WebDAV Settings			
OpenAPI Setting			
TCP Socket Setting			
IEEE802.1X Authentication Setting			
LLTD Setting			
Bluetooth Setting			
<			
	111		

Item	Description	Prior check
[Enabling LDAP]	Select [ON].	

10.2.3 [Setting Up LDAP]

In the administrator mode of **PageScope Web Connection**, select [Network] → [LDAP Settings] → [Setting Up LDAP] → [Edit].

Reference

• After registering the LDAP server, click [Check Connection] in [LDAP Server List] to check whether this machine can be connected to the registered LDAP server.

	旛 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	
Network 🔽 Dis	splay	🚛 To Main Menu
► TCP/IP Setting	Setting Up LDAP	
⊫ E-mail Setting	No.	1
▼ LDAP Setting	LDAP Server Name	
▶ LDAP Setting	Server Address	Please check to enter host name.
Setting Up LDAP		0.0.0.0
▶ IPP Setting	Port Number	389 (1-65535)
▶ FTP Setting	Enable SSL	
SNMP Setting	Port Number (SSL)	<u>636 (</u> 1-65535)
-	Certificate Verification Level Settings Validity Period	Confirm
SMB Setting	CN	Do Not Confirm V
Web Service Settings	Key Usage	Do Not Confirm V
Bonjour Setting	Chain	Do Not Confirm
▶ NetWare Setting	Expiration Date Confirmation	Do Not Confirm V
AppleTalk Setting	Search Base	
⊫ Network Fax Setting	Timeout	60 sec. (5-300)
WebDAV Settings	Max.Search Results	100 (5-1000)
OpenAPI Setting	Authentication Method	anonymous V
TCP Socket Setting	Login Name	anonymous
▶ IEEE802.1X Authentication	Password is changed.	anonymous
Setting	Password	
LLTD Setting	Domain Name	
Bluetooth Setting	Select Server Authentication Method	Set Value
	Use Referral	ON V
	Search Condition Attributes	Name 🗸
	Initial Setting for Search Details	
	Name	OR 💌
	E-mail	OR 🖌
	Fax Number	OR 🖌
	Last Name	OR 🖌
	First Name	OR 💌
	City	OR 🗸
	Organization	OR 🗸
	Organizational Unit	OR 💌
		OK Cancel
		OK Caliber
<		

Item	Description	Prior check
[LDAP Server Name]	Enter the name of an LDAP server (up to 32 characters).	
[Server Address]	Specify the LDAP server address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Port Number]	Enter a port number. Default setting: 389	
[Search Base]	Enter the search starting point in the directory structure under the LDAP server (up to 255 characters). This search function also covers subdirectories under the entered starting point.	Search base
[Timeout]	Enter the timeout period for LDAP search.	
[Max.Search Re- sults]	Enter the maximum number of items that can be received as LDAP search results.	

Item	Description	Prior check
[Authentication Method]	Select the authentication method to log in to the LDAP server. The authentication method must match that used in the LDAP server. If [anonymous] is selected, [Login Name], [Password], and [Domain Name] can be omitted. If [GSS-SPNEGO] is selected, log in to the server in the Kerberos authentication method. The Kerberos authenti- cation method is supported by Active Directory.	Server authentica- tion method
[Login Name]	Enter the login name to log in to the LDAP server (up to 255 bytes).	
[Password is changed.]	Select this check box to change the password.	
[Password]	Enter the password to log in to the LDAP server (up to 128 bytes, excluding space and ").	
[Domain Name]	Enter the domain name to log in to the LDAP server (up to 64 characters). If [GSS-SPNEGO] is selected, enter the domain name of Active Directory.	Authentication MethodDomain name
[Select Sever Au- thentication Meth- od]	Select the server authentication method. Select [Set Value] to use the settings of [Login Name], [Password], and [Domain Name]. Select [User Authentication] to use the user name and password specified for user authentication. If [Dynamic Authentication] is selected, the system prompts you to enter the user name and password at LDAP searching.	
[Use Referral]	Select whether to use the referral function. Make an appropriate choice to fit the LDAP server envi- ronment.	
[Search Condition Attributes]	Select the attribute of the name used for LDAP searching. You can toggle this attribute between [Name] (cn) and [Nickname] (displayName).	Name attribute
[Initial Setting for Search Details]	Specify LDAP search conditions.	

10.2.4 LDAP over SSL

[Setting Up LDAP]

In the administrator mode of **PageScope Web Connection**, select [Network] → [LDAP Settings] → [Setting Up LDAP] → [Edit].

Item	Description	Prior check
[Enable SSL]	Select this check box to encrypt an SSL communication between this machine and the LDAP server.	Does the server sup- port SSL?
[Port Number (SSL)]	Enter the port number to be used for SSL communication. Default setting: 636	Server port number
[Certificate Verifi- cation Level Set- tings]	To verify the server certificate, configure settings to verify the certificate.	
[Validity Period]	Select whether to check that the server certificate is within the validity period.	
[CN]	Select whether to check that the CN of the server certificate matches the server address.	
[Key Usage]	Select whether to check that the server certificate is used according to the purpose approved by the issuer.	

Item	Description	Prior check
[Chain]	Select whether to check that the server certificate chain (certification path) is correct. The chain is validated by referencing the external certifi- cates managed on this machine. For details, refer to page 8-34.	
[Expiration Date Confirmation]	Select whether to check that the server certificate is within the validity period. The OCSP service and CRL (Certificate Revocation List) are checked in this order when the expiration date of the certificate is checked.	

[Certificate Verification Setting]

In the administrator mode of **PageScope Web Connection**, select [Security] **>>** [Certificate Verification Setting].

	& Administrator	Logout ?
	Ready to Scan	
	📦 In Menu (Admin Mode)	3
Security 🔽 Dis	splay	E To Main Menu
▶ PKI Settings	Certificate Verification Settings	
Certificate Verification	Certificate Verification Settings	ON 💌
Settings	Timeout	15 sec. (5-300)
Address Reference Setting	CCSP Service	
Restrict User Access	URL	
Copy Security	Proxy Settings	
Auto Logout	Proxy Server Address	Please check to enter host name.
	_	
	Proxy Server Port Number	8080 (1-65535)
	User Name	
	🖾 Password is changed.	
	Password	
	Address not using Proxy Server	
		Please check to enter host name.
		OK Cancel

Item	Description	Prior check
[Certificate Verifi- cation Setting]	Select [ON] to verify the server certificate.	
[Timeout]	Enter a timeout period for expiration date confirmation.	Do you confirm the expiration date?
[OCSP Service]	Select this check box to use the OCSP service.	
[URL]	Enter the URL of the OCSP service (up to 511 characters). If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.	
[Proxy Server Ad- dress]	To confirm the expiration date via a proxy server, enter its address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Proxy Server Port Number]	Enter the port number of a proxy server.	Server port number
[User Name]	Enter the user name to log in to the proxy server (up to 63 characters).	
[Password is changed.]	Select this check box to change the password.	

Item	Description	Prior check
[Password]	Enter the password to log in to the proxy server (up to 63 characters).	
[Address not using Proxy Server]	To enable expiration date confirmation, specify an ad- dress that does not use the proxy server depending on your environment. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	

10.2.5 DNS server setting

When specifying Active Directory as the LDAP server and enabling GSS-SPNEGO authentication, register the DNS server connected to Active Directory.

For details on DNS Server Setting, refer to page 2-2.

10.2.6 [Date/Time Setting]

To use Active Directory, specify the date and time of this machine.

For details, refer to page 10-2.


10.3 Displaying this machine on the network map

Configure settings to display this machine on the network map in Windows Vista or Server 2008.

When the LLTD function of this machine is enabled, the network position of this machine can be displayed on the network map. Also, when you click the icon of this machine on the network map, you can access **PageScope Web Connection**.

The network map is very useful for checking the location and information of this machine and for network troubleshooting.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

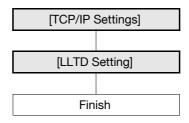

10.3.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

10.3.2 [LLTD Setting]

In the administrator mode of PageScope Web Connection, select [Network] >> [LLTD Setting].

	🌆 Administrator		Logout ?
	Ready to Scan		
	n Menu (Admin Mode)		3
Network 🔽 D	isplay		E To Main Menu
► TCP/IP Setting	LLTD Setting		
⊫ E-mail Setting	LLTD Setting	Enable 💌	
▶ LDAP Setting			
▶ IPP Setting			OK Cancel
⊫ FTP Setting			
SNMP Setting			
🗏 SMB Setting			
🗏 Web Service Settings			
Bonjour Setting			
⊫ NetWare Setting			
AppleTalk Setting			
🖹 Network Fax Setting			
WebDAV Settings			
OpenAPI Setting			
TCP Socket Setting			
IEEE802.1X Authentication Setting			
LLTD Setting			
Bluetooth Setting			
<	_		

Item	Description	Prior check
[LLTD Setting]	Select [Enable].	


10.4 Monitoring this machine by SNMP Manager

Configure settings to monitor this machine using the SNMP manager.

Using the SNMP manager, you can communicate with the SNMP agent of this machine and get, manage, and supervise this machine information via the network. The SNMP can be used in the TCP/IP environment or IPX/SPX environment.

Also, you can send this machine status information to others using the SNMP TRAP function. For details, refer to page 10-18.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

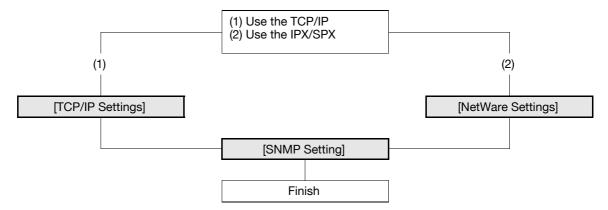

10.4.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

10.4.2 [NetWare Settings]

In the administrator mode of **PageScope Web Connection**, select [Network] ► [NetWare Settings] ► [Net-Ware Settings].

	🌆 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	£
Network 🔽 Di	splay	E To Main Menu
► TCP/IP Setting	NetWare Setting	
⊫ E-mail Setting	* is reflected after reset.	
▶ LDAP Setting	IPX Setting	ON V
▶ IPP Setting	(Turn the main switch OFF, and then ON, w	
► FTP Setting	Ethernet Frame Type*	Auto Detect 👻
SNMP Setting	NetWare Print Mode*	OFF 👻
SMB Setting	PServer	
-	Print Server Name*	
Web Service Settings	Password is changed.	
Bonjour Setting	Print Server Password*	
▼ NetWare Setting	Polling Interval*	1 sec.(1-65535)
► NetWare Setting	Bindery/NDS Setting*	NDS
▶ NetWare Status	Bindery	
AppleTalk Setting	File Server Name*	
Network Fax Setting	NDS	
NebDAV Settings	NDS Context Name*	
•	NDS Tree Name*	
▶ OpenAPI Setting	Nprinter/Rprinter	
TCP Socket Setting	Print Server Name*	
► IEEE802.1X Authentication	Printer Number*	255 (0-255,255:Auto)
Setting	User Authentication Setting	ON 🔽
LLTD Setting		
Bluetooth Setting		OK Cancel
	—	
<		

Item	Description	Prior check
[IPX Setting]	Select [ON].	
[Ethernet Frame Type]	Select a frame type to be used.	Frame type

10.4.3 [SNMP Setting]

In the administrator mode of PageScope Web Connection, select [Network] >> [SNMP Setting].

	Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	3
Network 🔽 Di	splay	E To Main Menu
► TCP/IP Setting	SNMP Setting	
▶ E-mail Setting	SNMP ON 💙	
▶ LDAP Setting	SNMP v1/v2c(IP)	
► IPP Setting	SNMP v3(IP)	
▶ FTP Setting	SNMP v1 (IPX)	
SNMP Setting	UDP Port Setting 161 (1-65535)
SMB Setting	SNMP v1 /v2c Setting	
Neb Service Settings	Read Community Name public	7
 Bonjour Setting 	✓ Write Community Name private	Ĩ
	Provide Provid	
NetWare Setting	SNMP v3 Setting	
AppleTalk Setting	Context Name	
Network Fax Setting	V Discovery User Name public	
RebDAV Settings	Read User Name initial	
OpenAPI Setting	Security Level auth-password/priv-	password 🚩
TCP Socket Setting	Password is changed. (Password is currently set.)	
IEEE802.1X Authentication Sotting	auth-password	
Setting	Password is changed. (Password is currently set.)	
LLTD Setting	priv-password	
Bluetooth Setting	Write User Name restrict	
	Security Level auth-password/priv-	password 🚩
	auth-password □ Password is changed. (Password is currently set.)	
	Current Password	
	New Password	
	Retype New Password	
	priv-password	
	Password is changed. (Password is currently set.)	
	Current Password	
	New Password	
	Retype New Password	
	Encryption Algorithm DES 💌	
	Authentication Method MD5 💌	
	TRAP Setting	
	Allow Setting Allow V	
	Trap Setting when Authentication	
	Fails	
	Administrator Information	
	Device Name	
	Device Location	
	Administrator Name	
		OK Cancel
<		

Item	Description	Prior check
[SNMP Setting]	Select [ON]. When you use the SNMP, select whether to use [SNMP v1/v2c (IP)], [SNMP v3 (IP)], or [SNMP v1 (IPX)]. You can select [SNMP v1 (IPX)] only when the IPX is ena- bled.	The protocol you use (TCP/IP or IPX/SPX)
[UDP Port Setting]	Enter a UDP port number. Default setting: 161	
[SNMP v1/v2c Set- ting]	Configure the settings for SNMP v1/v2c.	

Item	Description	Prior check
[Read Community Name]	Enter a community name used for reading (up to 15 characters, excluding space and \).	
[Write Community Name]	Enter a community name used for reading and writing (up to 15 characters, excluding space and \).	
[SNMP v3 Setting]	Set the settings for SNMP v3.	
[Context Name]	Enter a context name (up to 63 characters, excluding space and \).	
[Discovery User Name]	Enter a context user for detection (up to 32 characters, excluding space and \).	
[Read User Name]	Enter a user name of the read-only user (up to 32 characters, excluding space and \).	
[Security Level]	Select a security level of the read-only user.	
[Password is changed.]	Select this check box to change the password.	
[auth-password]	Enter the password of the read-only user for authentica- tion (up to 32 from 8 characters, excluding space and \).	
[Password is changed.]	Select this check box to change the password.	
[priv-password]	Enter the privacy password of the read-only user to be used for privacy (encryption) (up to 32 from 8 characters, excluding space and \).	
[Write User Name]	Enter a user name used of the read and write-only user (up to 32 characters, excluding space and \).	
[Security Level]	Select a security level of the read and write-only user.	
[auth-password]	Enter the password of the read and write-only user for au- thentication (up to 8 to 32 characters, excluding space and \).	
[Password is changed.]	Select this check box to change the password.	
[priv-password]	Enter the privacy password of the read and write-only user to be used for privacy (encryption) (up to 8 to 32 characters, excluding space and \).	
[Password is changed.]	Select this check box to change the password.	
[Encryption Algo- rithm]	Select an encryption algorithm.	
[Authentication Method]	Select an authentication method.	
[Device Name]	Enter the name of this machine (up to 255 characters).	
[Device Location]	Enter the location to install this machine (up to 255 characters).	
[Administrator Name]	Enter the administrator name (up to 255 characters).	


10.5 Reporting the status of this machine (by E-mail)

Configure settings to report the status of this machine to the administrator by E-mail.

If an alarm has occurred on this machine, it can be reported to the specified destination by E-mail.

A combination of POP before SMTP authentication, APOP authentication, SMTP authentication and SSL/TLS encryption can be used for notification by E-mail.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

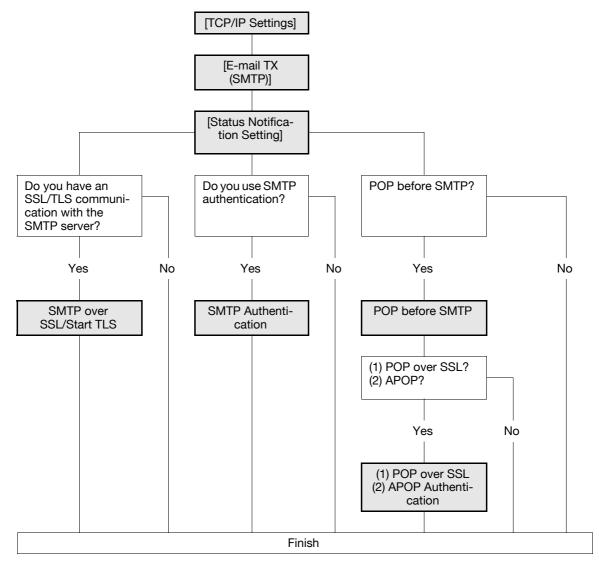

10.5.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

10.5.2 [E-mail TX (SMTP)]

In the administrator mode of **PageScope Web Connection**, select [Network] → [E-mail Setting] → [E-mail TX (SMTP)].

Item	Description	Prior check
[E-mail TX Setting]	Select the [E-mail TX Setting] check box.	
[E-mail Notifica- tion]	Select [ON].	

Item	Description	Prior check
[SMTP Server Ad- dress]	Enter the SMTP server address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Port Number]	Enter a port number. Default setting: 25	Server port number
[Connection Time- out]	Specify the timeout period for a communication with a server.	
[Max Mail Size]	Select whether to limit the size of an E-mail to be sent.	
[Server Capacity]	Enter the SMTP server capacity. A mail that exceeds the upper limit of the server capacity will be discarded. If an E-mail is divided, this setting is made invalid.	Server reception limit
[Admin. E-mail Ad- dress]	Displays the E-mail address of the administrator. Register the administrator's E-mail address in [System Settings]⊷[Machine Setting] if it is not registered.	
[Binary Division]	Select this check box to divide an E-mail. If the E-mail software that received an E-mail does not have a restoration function, you may not be able to read the E-mail.	Restoration function of E-mail software
[Divided Mail Size]	Enter the divided mail size to divide an E-mail.	Server reception limit

10.5.3 [Status Notification Setting]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] → [Status Notification Setting] → [E-mail Address] → [Edit].

	Administrator		Logout ?
	ready to Scan		
	👔 In Menu (Admin Mode)		3
Maintenance 🛛 🔽 Dis	olay		E To Main Menu
▶ Meter Count	Status Notification Setting		
ROM Version	Destination	E-mail Address1	
Import/Export	Notification Address		
Status Notification Setting	Alert		
ž	🗔 Replenish Paper Tray		
Total Counter Notification Setting	□ JAM		
•	🗆 PM Call		
⊫ Date/Time Setting	Replace Staples		
▶ Timer Setting	🗔 Replenish Toner		
Network Error Code Display	🗔 Finisher Tray Full		
Setting	🗆 Service Call		
Reset	🗖 Job Finished		
License Settings	🗆 Hole-Punch Scrap Box Full		
Edit Font/Macro	🗆 Waste Toner Box Full		
	🗆 Drum Unit/Developing Unit Life		
⊫ Job Log	🗖 Fusing Unit Yield		
	Transfer Roller Yield		
	🗔 Transfer Belt Unit Yield		
	🗆 Ozone Filter Yield		
			OK Cancel

Item	Description	Prior check
[Notification Ad- dress]	Enter the destination E-mail address.	Notification address
[Replenish Paper Tray]	Sends a notification when the paper tray is empty.	
[JAM]	Sends a notification when a page has been jammed.	
[PM Call]	Sends a notification when the periodical inspection is re- quired.	
[Replace Staples]	Sends a notification when there are no staples remaining.	

Item	Description	Prior check
[Replenish Toner]	Sends a notification when the toner is empty.	
[Finisher Tray Full]	Sends a notification when the capacity of the finisher tray has been exceeded.	
[Service Call]	Sends a notification when a service call has occurred.	
[Job Finished]	Sends a notification when the job has finished.	
[Hole-Punch Scrap Box Full]	Sends a notification when you need to empty the punch scrap box.	
[Waste Toner Box Full]	Sends a notification when the waste toner box needs to be replaced.	
[Drum Unit/Devel- oping Unit Life]	Sends a notification when the drum unit or developing unit needs to be replaced.	
[Fusing Unit Yield]	Sends a notification when the fusing unit needs to be replaced.	
[Transfer Roller Yield]	Sends a notification when the transfer roller unit needs to be replaced.	
[Transfer Belt Unit Yield]	Sends a notification when the transfer belt needs to be replaced.	
[Ozone Filter Yield]	Sends a notification when the ozon filter needs to be replaced.	

10.5.4 SMTP over SSL/Start TLS

Configure the settings for SMTP over SSL or Start TLS. For details, refer to page 4-10.

10.5.5 SMTP Authentication

Configure SMTP authentication settings. For details, refer to page 4-12.

10.5.6 POP before SMTP

Configure the settings for POP before SMTP. For details, refer to page 4-13.

10.5.7 POP over SSL

Configure the settings for POP over SSL. For details, refer to page 4-14.

10.5.8 APOP Authentication

Configure APOP authentication settings. For details, refer to page 4-16.


10.6 Reporting the status of this machine (TRAP)

Configure settings to report the status of this machine to the administrator using the SNMP TRAP functions.

If an alarm has occurred on this machine, it can be reported to the specified IP address or IPX address by the SNMP TRAP.

To use the SNMP TRAP functions, you must set the SNMP in advance. For details, refer to page 10-12.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

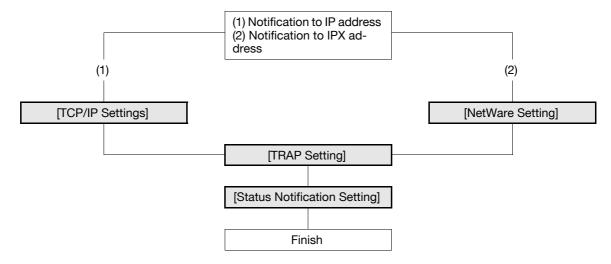

10.6.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

10.6.2 [NetWare Setting]

In the administrator mode of **PageScope Web Connection**, select [Network] ► [NetWare Setting] ► [Net-Ware Setting].

	🌆 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	Ð
Network	Display	E To Main Menu
► TCP/IP Setting	NetWare Setting	
⊫ E-mail Setting	* is reflected after reset.	
▶ LDAP Setting	IPX Setting	ON V
▶ IPP Setting	(Turn the main switch OFF, and then ON,	
► FTP Setting	Ethernet Frame Type*	Auto Detect 💌
► SNMP Setting	NetWare Print Mode*	OFF 👻
▶ SMB Setting	PServer	
Neb Service Settings	Print Server Name*	
	Password is changed.	
▶ Bonjour Setting	Print Server Password*	
▼ NetWare Setting	Polling Interval*	1sec.(1-65535)
NetWare Setting	Bindery/NDS Setting*	NDS 🗸
▶ NetWare Status	Bindery	
AppleTalk Setting	File Server Name*	
Network Fax Setting	NDS	
WebDAV Settings	NDS Context Name*	
▶ OpenAPI Setting	NDS Tree Name*	
TCP Socket Setting	Nprinter/Rprinter Print Server Name*	
-	Print Server Name Printer Number*	
IEEE802.1X Authentication Setting	Printer Number* User Authentication Setting	255 (0-255,255:Auto)
► LLTD Setting	Oser Admentication Setting	
Bluetooth Setting		
Enclosed Secting		OK Cancel
<		

Item	Description	Prior check
[IPX Setting]	Select [ON].	
[Ethernet Frame Type]	Select a frame type to be used.	Frame type

10.6.3 [TRAP Setting]

In the administrator mode of PageScope Web Connection, select [Network] > [SNMP Setting].

Item	Description	Prior check
[Allow Setting]	Select [Allow].	
[Trap Setting when Authentication Fails]	Select whether to enable TRAP transmission at the time of authentication failure.	

10.6.4 [Status Notification Setting]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] >> [Status Notification Setting] >> [IP Address] or [IPX Address] >> [Edit].


Item	Description	Prior check
[Destination Ad- dress]	If the destination has an [IP Address], enter it. If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address. If the destination has an [IPX Address], enter it using an 8- digit hexadecimal value.	Notification address
[Port Number]	If the destination has an [IP Address], enter its port number.	
[Node Address]	If the destination has an [IPX Address], enter the node ad- dress using a 12-digit hexadecimal value.	
[Community Name]	Enter a community name (up to 15 characters).	
[Replenish Paper Tray]	Sends a notification when the paper tray is empty.	
[JAM]	Sends a notification when a page has been jammed.	
[PM Call]	Sends a notification when the periodical inspection is re- quired.	
[Replace Staples]	Sends a notification when there are no staples remaining.	
[Replenish Toner]	Sends a notification when the toner is empty.	
[Finisher Tray Full]	Sends a notification when the capacity of the finisher tray has been exceeded.	
[Service Call]	Sends a notification when a service call has occurred.	
[Job Finished]	Sends a notification when the job has finished.	
[Hole-Punch Scrap Box Full]	Sends a notification when you need to empty the punch scrap box.	
[Waste Toner Box Full]	Sends a notification when the waste toner box needs to be replaced.	
[Drum Unit/Devel- oping Unit Life]	Sends a notification when the drum unit or developing unit needs to be replaced.	
[Fusing Unit Yield]	Sends a notification when the fusing unit needs to be replaced.	
[Transfer Roller Yield]	Sends a notification when the transfer roller unit needs to be replaced.	
[Transfer Belt Unit Yield]	Sends a notification when the transfer belt needs to be replaced.	
[Ozone Filter Yield]	Sends a notification when the ozon filter needs to be replaced.	

Configure settings to report the counter information of this machine by E-mail.

You can send the counter information being managed on this machine to the specified destination by E-mail.

A combination of POP before SMTP authentication, APOP authentication, SMTP authentication and SSL/TLS encryption can be used for notification by E-mail.

Use the following flowchart to configure settings. Clicking a step jumps to the associated procedure.

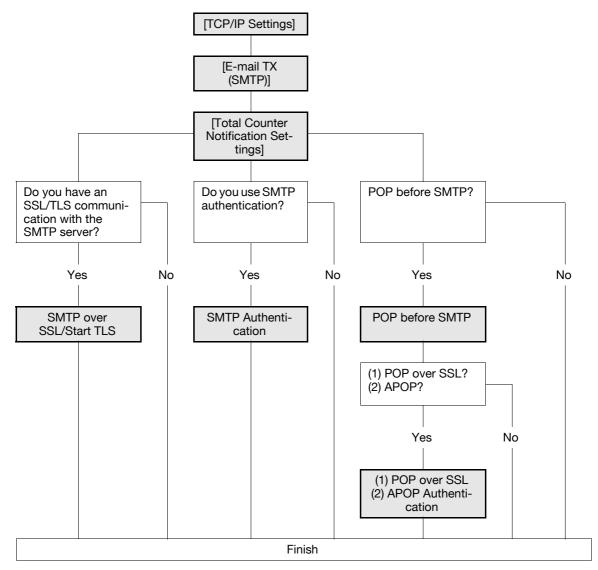

10.7.1 [TCP/IP Settings]

Configure settings to use this machine in the TCP/IP network environment. For details, refer to page 2-2.

10.7.2 [E-mail TX (SMTP)]

In the administrator mode of **PageScope Web Connection**, select [Network] → [E-mail Setting] → [E-mail TX (SMTP)].

Item	Description	Prior check
[E-mail TX Setting]	Select the [E-mail TX Setting] check box.	
[Total Counter No- tification]	Select [ON].	
[SMTP Server Ad- dress]	Enter the SMTP server address. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.	Server address
[Port Number]	Enter a port number. Default setting: 25	Server port number
[Connection Time- out]	Specify the timeout period for a communication with a server.	
[Max Mail Size]	Select whether to limit the size of an E-mail to be sent.	
[Server Capacity]	Enter the SMTP server capacity. A mail that exceeds the upper limit of the server capacity will be discarded. If an E-mail is divided, this setting is made invalid.	Server reception limit
[Admin. E-mail Ad- dress]	Displays the E-mail address of the administrator. Register the administrator's E-mail address in [System Settings]⊷[Machine Setting] if it is not registered.	
[Binary Division]	Select this check box to divide an E-mail. If the E-mail software that received an E-mail does not have a restoration function, you may not be able to read the E-mail.	Restoration function of E-mail software
[Divided Mail Size]	Enter the divided mail size to divide an E-mail.	Server reception limit

10.7.3 [Total Counter Notification Settings]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] **>>** [Total Counter Notification Settings].

	Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	8
Maintenance V Disp		
Maintenance <u>Disp</u> Meter Count	Total Counter Notification Setting	E To Main Menu
	Model Name	
ROM Version		
Import/Export	Schedule Setting	
Status Notification Setting	Schedule 1	
Total Counter Notification Setting	C Daily	
▶ Date/Time Setting	Interval of Day(s)	1 (1-31)
Timer Setting	C Weekly Interval of Week(s)	1 (1-6)
Network Error Code Display	Day of the Week	Mon V
Setting	Monthly	
le Reset	Interval of Month(s)	1 (1-6)
License Settings	Date of the Month	1 (1-31)
Edit Font/Macro	Schedule 2	
	C Daily	
	Interval of Day(s)	1(1-31)
	C Weekly	
	Interval of Week(s) Day of the Week	1 (1-6) Mon 🗸
	 Monthly 	
	Interval of Month(s)	1 (1-6)
	Date of the Month	1(1-31)
	Register Notification Address Address 1	
	E-mail Address	
	Notifies by Schedule1	
	Notifies by Schedule2	
	Address 2	
	E-mail Address	
	Notifies by Schedule1	
	Address 3	
	E-mail Address	
	Notifies by Schedule1	
	Notifies by Schedule2	
	Test Notice	
	Send notice after setting complete,	OFF V
		OK Cancel

Item	Description	Prior check
[Model Name]	Enter a model name to be included in the notification mail message (up to 20 characters).	
[Notification Schedule Setting]	Specify the conditions for the notification schedule. Schedules 1 and 2 can be registered with different set- tings.	Notification schedule
[Notification Ad- dress Setting]	Enter the destination E-mail address (up to 320 charac- ters). In addition, select a notification schedule.	Destination
[Send notice after setting complete]	If [ON] is selected, a notification is tested when you press [OK].	

10.7.4 SMTP over SSL/Start TLS

Configure the settings for SMTP over SSL or Start TLS. For details, refer to page 4-10.

10.7.5 SMTP Authentication

Configure SMTP authentication settings. For details, refer to page 4-12.

10.7.6 POP before SMTP

Configure the settings for POP before SMTP. For details, refer to page 4-13.

10.7.7 POP over SSL

Configure the settings for POP over SSL. For details, refer to page 4-14.

10.7.8 APOP Authentication

Configure APOP authentication settings. For details, refer to page 4-16.

10.8 Checking the counter of this machine

Check the counter information being managed on this machine.

[Counter]

In the administrator mode of PageScope Web Connection, select [Maintenance] >> [Counter].

	A A A A A						
	Ready to Scan						
	In Menu (Admin Mode)						
Maintenance 🗸 Dis	play						To Maiı
Mantenance	Total Counter						
	Total	0			1		
ROM Version	Total Duplex	0			-		
Import/Export	# of Originals	0			-		
Status Notification Setting	# of Used Paper	0			1		
Total Counter Notification	Copy Counter				_		
Setting		Full Color	Black	Single Color	2 C	olor	Total
Note/Time Setting	Total	0	0	0	0		0
Timer Setting	Large Size	0	0	0	0		0
Network Error Code Display Setting	Print Counter	-		1-			
Reset		Full Color	Blac	ck	2 Color	T	otal
	Total	0	0		0	0	
License Settings	Large Size	0	0		0	0	
Edit Font/Macro	Scan / Fax Counter						
Job Log		Print (Full Colo	ur)	Print (Black)		Scans	
	Total	0	.,	0		6	
	Large Size	0		0		0	
	Fax TX	0			_		
	Fax RX	0			_		
	Total (Copy + Print)	Full Colo		Black		2 Colo	-
	Total	Puil Colo	ſ	О			ſ
	Paper Size / Type C			19		0	
	Paper Size	Paper	Type		Count		
	11" x 17"	Not Spe			0		
	8 1/2" x 14"	Not Sp	ecified		0		
	8 1/2" x 11"	Not Spe			0		
	5 1/2" x 8 1/2"	Not Spe			0		
	A3	Not Spe			0		
	B4	Not Spe			0		
	85 A4	Not Spe Not Spe			0		
	A4 A5	Not Spe			0		
					10		

10.9 Checking the machine ROM version

Check the ROM version of this machine.

[ROM Version]

In the administrator mode of PageScope Web Connection, select [Maintenance] >> [ROM Version].

	🌆 Administrator	Logout 🤶
	Ready to Scan	
	in Menu (Admin Mode)	3
Maintenance 🔽 D	isplay	💷 To Main Menu
Meter Count	ROM Version	
ROM Version	MFP Controller BOOT Program	
Import/Export	MFP Controller SubSet	
	MFP Controller Operation Panel Message Data	- Contract of the second second
Status Notification Setting	Eax Board Controller1	New York Concernsion
Total Counter Notification	Fax Board Controller2	Test water and the second of
Setting	Scanner	100 00 00 00 00 00 00 00 00 00 00 00 00
▶ Date/Time Setting	Printer	CONTRACTOR AND ADDRESS
Timer Setting	ADF	- A CONTRACT OF A CONTRACT OF
-	Finisher	-80700-c-01204000
Network Error Code Display Setting	Panel CPU	ALC: NOT THE OWNER OF THE OWNER
	DSC1	And the second second second
Reset	LCT	Contraction of the Contraction
▶ License Settings	Loadable Device Driver	
► Edit Font/Macro	SD Voice Data	ACCOUNT AND ADDRESS OF
	Movie Data	
⊫ Job Log	Dictionary Data	
	OCR Library	
	MFP Controller System	AND REAL PROPERTY.
	MFP Controller Print Controller	-10,000,000
	MFP Controller Print Controller Font	
	MFP Controller Print Controller Demo Pag	je in the second se
	MFP Controller MIO	400-400-000-00-400-00
	MFP Controller PSWC	ADDRESS OF ADDRESS OF ADDRESS
	MFP Controller MIB IF	
	MFP Controller IPP IF	
	MFP Controller Outside Controller IF	
	MFP Controller TCP/Socket	ADD-0-10-00-000
	MFP Controller OPEN API	And the second second
	MFP Controller Operation Panel	AND DESCRIPTION OF A DESCRIPTION
	MFP Controller CSRC Control Body	And the second sec
	MFP Controller PIC	

10.10 Importing and exporting the machine configuration information

You can save (export) the configuration information being stored in this machine to the computer. You can also write (import) the information from the computer to this machine.

[Import/Export]

In the administrator mode of PageScope Web Connection, select [Maintenance] > [Import/Export].

	🌆 Administrator	Logout ?
	Ready to Scan	
	in Menu (Admin Mode)	8
Maintenance 🔽 🗌	Display	💷 To Main Menu
▶ Meter Count	Import/Export	
ROM Version	 Device Setting 	
► Import/Export	C Counter	
Status Notification Setting	 Authentication Information 	
 Total Counter Notification Setting 	C Address C Copy Protect/Stamp	
⊫ Date/Time Setting	 Restriction Code List 	
Timer Setting		
Network Error Code Display Setting		Export Import
Reset		
License Settings		
Edit Font/Macro		
🖻 Job Log		

Item	Description
[Device Setting]	Import or export device setting values.
[Counter]	Export the counter information. The counter can only be exported.
[Authentication Infor- mation]	Back up or restore all authentication data. This function also allows you to import or export user registration information or authentication data. When the optional authentication unit is used on this machine, you can import or export the authentication data. When you export the authentication data, you can set a password as required. The specified password is required for importing the authentication informa- tion. If you use PageScope Authentication Manager for authentication, this item is not displayed.
[Address]	Back up or restore all address data. This function also allows you to import or export address data. When you export the destination information, you can set a password as required. The specified password is required for importing the destination information.
[Copy Protect/Stamp]	Import or export copy protect or stamp data.
[Restriction Code List]	Import or export the list of inhibited codes of our deprecated OpenAPI con- nection applications.

Reference

- You cannot edit exported files.
- When importing an E-mail address with an exported certificate, register the certificate information again after importing it.
- For details on the list of inhibited codes, contact your service representative.

10.11 Using the timer functions


Configure the Power Save and Weekly Timer functions.

The power save function has two modes: Low Power and Sleep. More electric power will be saved in the Sleep mode when compared with the Low Power mode. However, the Sleep mode takes more time to warm up this machine than the Low Power mode. Select the mode appropriate to your application.

The Weekly Timer function allows you to specify the time before transition to the Sleep mode in units of days or weeks. You can control the power saving according to your application.

[Power Save Setting]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] ► [Timer Setting] ► [Power Save Setting].

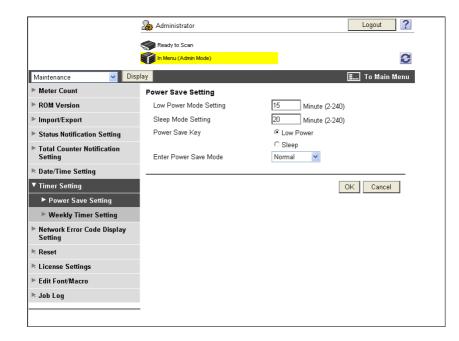

Item	Description
[Low Power Mode Set- ting]	Enter a time interval before transition to the Low Power mode since the last operation of this machine.
[Sleep Mode Setting]	Enter a time interval before transition to the Sleep mode since the last opera- tion of this machine.
[Power Save Key]	If you do not operate this machine for a long time, you can forcibly switch this machine to the power saving mode by pressing the Control Panel key on the Power Save . Select the mode this machine will transition to when you press the Power Save key.
[Enter Power Save Mode]	Specify how to return to the Power Save mode after printout of the fax docu- ment that was received in the Power Save mode. Setting this item to [Immediately] returns this machine immediately after re- ceiving a fax while it is not being used (in the night for example), thus saving the electric power more efficiently. If you set this item to [Normal], this machine returns to the Power Save mode after the specified transition time has elapsed.

[Weekly Timer Setting]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] **>>** [Timer Setting] **>>** [Weekly Timer Setting].

	& Administrator			Logout ?
	Ready to Scan			
	n Menu (Admin Mode)			3
Maintenance 🔽 Disp	lay			E To Main Menu
Meter Count	Weekly Timer Settin	ng		
ROM Version	🗆 Use Weekly Time	r		
Import/Export	Date Setting			
Status Notification Setting		2008 🖌 October	 Set 	ting
Total Counter Notification Setting	Work Time Setti	ng ON Time		OFF Time
▶ Date/Time Setting	🗖 Sun	0 : 0	\sim	0 : 0
▼ Timer Setting	🗖 Mon	0 : 0	~	0 : 0
▶ Power Save Setting	Tue 🗖	0 : 0	~	0 : 0
Weekly Timer Setting	☐ Wed		~	0 : 0
Network Error Code Display Setting	Π Thu	0 : 0	~	
Reset	Fri 🗖		~	
▶ License Settings	🗖 Sat	0 : 0	\sim	
Edit Font/Macro	Use Power Save	Power Save Start Time		Power Save End Time
	-	0 : 0	~	0 : 0
	🗆 Use Overtime Pas	sword		
	Password is	changed.		
				OK Cancel

Item	Description
[Use Weekly Timer]	To use the Weekly Timer function, select this check box and specify the oper- ation date and time. Specify dates or days of every week when the Weekly Timer function is acti- vated. You can also specify both dates and days of the week at the same time. Click [Setting] to specify the days when Weekly Timer operates.
[Use Power Save]	To use the Power Save function, select this check box and specify the OFF Time and the Power Save End Time.
[Use Overtime Pass- word]	Specify the overtime password to restrict the users who can temporarily use this machine while it is being placed in the Sleep mode by the Weekly Timer function. To specify the overtime password, select this check box and enter the password (up to eight characters, excluding + and ").



10.12 Displaying a network error code

If an error has occurred on the network, its error code can be displayed.


Configure this item if you wish to check the network error codes for troubleshooting and other purposes.

Reference

For details on the network error codes, refer to page 15-19.

[Network Error Code Display Setting]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] ► [Network Error Code Display Setting].

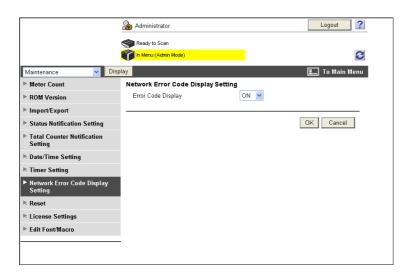

Item	Description
[Error Code Display]	Select [ON].

10.13 Initializing the configuration information

You can initialize the network settings (to the factory defaults), reset the controller, and delete the entire destination information.

[Network Setting Clear]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] **>>** [Reset] **>>** [Network Setting Clear].

(If [Enhanced Security Mode] is enabled, this menu item will not be displayed.)

If you click [Clear], the network settings of this machine are cleared to the factory defaults.

	San Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	S
Maintenance 🔽 Dis	play	E To Main Menu
Meter Count	Network Setting Clear	
ROM Version	Network setting is returned to the factory defaults.	
Import/Export		Clear
Status Notification Setting		
Total Counter Notification Setting		
⊫ Date/Time Setting		
⊨ Timer Setting		
Network Error Code Display Setting		
▼ Reset		
Network Setting Clear		
▶ Reset		
Format All Destination		
⊨ License Settings		
▶ Edit Font/Macro		

[Reset]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] → [Reset] → [Reset]. If you click [Reset], the controller is reset.

	& Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	3
Maintenance 🔽 Di	splay	💷 To Main Menu
▶ Meter Count	Reset	
ROM Version	Controller is reset.	
Import/Export		Reset
Status Notification Setting		
Total Counter Notification Setting		
▶ Date/Time Setting		
► Timer Setting		
Network Error Code Display Setting		
▼ Reset		
Network Setting Clear		
► Reset		
► Format All Destination		
License Settings		
▶ Edit Font/Macro		

[Format All Destination]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] **>>** [Reset] **>>** [Format All Destination].

If you click [Format], the entire destination data being registered on this machine is erased.

	Administrator	Logout ?
	Ready to Scan	
	👔 In Menu (Admin Mode)	3
Maintenance 🔽 🖸	isplay	E To Main Menu
▶ Meter Count	Format All Destination	
ROM Version	All the registered destinations are deleted.	
▶ Import/Export		Format
Status Notification Setting		
 Total Counter Notification Setting 		
▶ Date/Time Setting		
⊨ Timer Setting		
Network Error Code Display Setting		
▼ Reset		
Network Setting Clear		
▶ Reset		
Format All Destination		
⊫ License Settings		
Edit Font/Macro		



To enhance the functions of this machine by registering the optional License kit, you can obtain a request code and enable the functions.

Reference

• This menu item will not be displayed if the extension memory supplied together with the optional **Up-grade Kit UK-203** is not installed.

Reference

For details on the license code acquisition and function enabling, refer to the [Quick Guide Copy/Print/Fax/Scan/Box Operations].

[Get Request Code]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] → [License Settings] → [Get Request Code].

If you click [OK], a request code is issued.

	🌆 Administrator	Logout ?
	Ready to Scan	
	in Menu (Admin Mode)	3
Maintenance 🔽	Display	🚛 To Main Menu
Meter Count	Get Request Code	
ROM Version	Do you want to get a Request Code?	
Import/Export		
Status Notification Setting		OK
Total Counter Notification Setting		
▶ Date/Time Setting		
⊫ Timer Setting		
Network Error Code Display Setting		
▶ Reset		
▼ License Settings		
► Get Request Code		
Install License		

[Install License]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] → [License Settings] → [Install License].

	_	
	Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	
Maintenance 🔽 Disp	lay	E To Main Menu
▶ Meter Count	Install License	
► ROM Version	Enter a Function Code.	
▶ Import/Export	Function Code	
Status Notification Setting		
Total Counter Notification Setting	Enter the License Code.	
▶ Date/Time Setting	License Code	
▶ Timer Setting		
Network Error Code Display Setting		OK Cancel
▶ Reset		
▼ License Settings		
Get Request Code		
► Install License		
► Edit Font/Macro		

Item	Description
[Function Code]	Enter the function code.
[License Code]	Enter the license code.
[OK]	Click this button to enable the function.

You can create and download log data (accounting log, counting log, or audit log) of the jobs that were executed in this machine. For details on viewing the output job logs, contact your service representative.

(This menu is not displayed when [Security Settings] ►► [Security Details] ►► [Job Log Settings] is set to [No] in the [Administrator Settings] on the **Control Panel**.)

Reference

- For details on [Job Log Settings], refer to the [User's Guide Copy Operations].
- If the job log writing area has reached the upper limit, output job logs.

[Create Job Log]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] ► [Job Log] ► [Create Job Log].

When you click [OK], the machine starts creating job log data. After creation is completed, you can download job log data using [Download Job Log].

	🎥 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	2
Maintenance 🔽 Dis	play	E To Main Menu
Meter Count	Create Job Log	
▶ ROM Version	Creates Job Log.	
b Incontinued	Current Job Log will be deleted and new Job Log will be created.	
Import/Export	Are you sure you want to continue?	
Status Notification Setting		
Total Counter Notification Setting		OK
► Date/Time Setting		
▶ Timer Setting		
Network Error Code Display Setting		
⊫ Reset		
▶ License Settings		
Edit Font/Macro		
▼ Job Log		
► Create Job Log		
► Download Job Log		
	-	

Reference

• If you attempt to create job log data when some already exists, a confirmation message is displayed to check if you want to delete the job log data that is not output in order to create new job log data. When there is job log data that is not output, download it before creating new job log data.

[Download Job Log]

In the administrator mode of **PageScope Web Connection**, select [Maintenance] → [Job Log] → [Download Job Log].

When downloading job log data, click [OK] and also click [Download].

	& Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	8
Maintenance 🔽 Di	splay	E To Main Menu
▶ Meter Count	Download Job Log	
ROM Version	Job Log download will begin. Are you sure you want to continue?	
Import/Export	Are you sure you want to continue?	
Status Notification Setting		OK
Total Counter Notification Setting		
▶ Date/Time Setting		
▶ Timer Setting		
Network Error Code Display Setting		
⊫ Reset		
License Settings		
▶ Edit Font/Macro		
▼ Job Log		
Create Job Log		
► Download Job Log		
	_	

Reference

• To download job log data, create it in [Create Job Log] in advance.

10.16 Configuring settings for printing blank pages

Configure settings related to printing blank pages.

You can specify whether to print text on blank pages when the stamp function prints text.

[Blank Page Print Settings]

In the administrator mode of **PageScope Web Connection**, select [System Settings] **>>** [Blank Page Print Settings].

	& Administrator		Logout ?
	Ready to Scan		
	👔 In Menu (Admin Mode)		C
System Settings Vise	olay		E To Main Menu
Machine Setting	Blank Page Print Settings		
Register Support Information	Print Setting	Do Not Print 🛩	
Network TWAIN			
User Box Setting			OK Cancel
Stamp Settings			
Blank Page Print Settings			
Skip Job Operation Settings			
Flash Display Setting			
System Connection Setting			
▶ Display Setting			
Outline PDF Setting			

Item	Description
[Print Setting]	Specify whether to print text on blank pages when the stamp function prints text.


Configure settings for skipping jobs.

When the job currently being printed is being halted with a warning message stating the paper is empty, the mailbin has overflowed, or there is no matching paper, you can configure the machine to skip the job and print the next job waiting to be printed if it is eligible for printing.

Two settings are provided: One allows you to specify whether to skip the job when the next job is a fax; the other allows you to specify whether to skip the job when the next job is not a fax.

[Skip Job Operation Settings]

In the administrator mode of **PageScope Web Connection**, select [System Settings] **>>** [Skip Job Operation Settings].

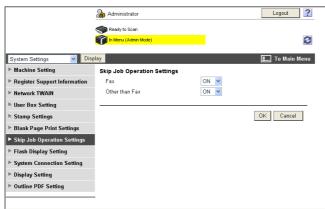

Item	Description	
[Fax]	Specify whether to skip the job when the next job is a fax.	
[Other than Fax]	Specify whether to skip the job when the next job is not a fax.	



10.18 Configuring Outline PDF Settings

Configure settings to outline graphics when creating an outline PDF.

Reference

For details on outline PDF, refer to the [User's Guide Network Scan/Fax/Network Fax Operations].

[Outline PDF Setting]

In the administrator mode of PageScope Web Connection, select [System Settings] >> [Outline PDF Setting].



Item	Description
[Graphic Outlining]	Specify the level to scan a graphic (line image) when creating an outline PDF. The graphic (line image) outlining level becomes higher in the order of [LOW], [MIDDLE], and [HIGH]. If [OFF] is specified, the target graphic (line image) will not be outlined.

10.19 Managing Single Color /2 Color Output

When you restrict color printing or restrict the number of sheets printed in color or black, you can specify whether to count the sheets printed in the single color or 2 color mode as being printed in color or in black.

By default, the sheets printed in the single color or 2 color mode are counted as being printed in color. When you treat single or 2 color printing as black printing, you can permit users to print in the single or 2 color mode while you do not permit the users to print in color.

When you treat single color or 2 color printing as black printing, you can manage only full color printing as color printing.

[User/Account Common Setting]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] **>>** [User/Account Common Setting].

🎥 Administrator		Logout ?
Ready to Scan		
👘 In Menu (Admin Mode)		æ
splay		🚛 To Main Menu
User/Account Common Setting		
Single Color > 2 Color Output Management	Color 💌	
management		
		OK Cancel
		OIX Called
	splay User/Account Common Setting	play User/Account Common Setting Single Color > 2 Color Output Color > 2

Item	Description
[Single Color > 2 Color Output Management]	Select whether to treat single color or 2 color printing as [Color] or [Black] printing.

11 Registering

11 Registering

11.1 Registering Font or Macro

You can register or delete fonts or macros to or from this machine.

[Edit Font/Macro]

In the administrator mode of PageScope Web Connection, select [Maintenance] > [Edit Font/Macro].

	Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	C
Maintenance 🔽 Dis	play	E To Main Menu
▶ Meter Count	Edit Font/Macro	
ROM Version	New Registration	
Import/Export		Font Type PCL Font 🔽 🔽
Status Notification Setting	Type Location Name	ID Delete
Total Counter Notification Setting		
⊫ Date/Time Setting		
▶ Timer Setting		
Network Error Code Display Setting		
▶ Reset		
License Settings		
► Edit Font/Macro		
	-	

Item	Description
[New Registration]	Click this button to add a font or macro.
[Font Type]	Select a type of font or macro and click [Go], and the list of fonts or macro of the selected type is displayed.
[Type]	Displays the type of each registered font/macro.
[Location]	Displays the location to save the registered font or macro.
[Name]	Displays the name of the registered font or macro.
[ID]	Displays the ID of the registered font or macro.
[Delete]	Click this button to delete the selected font/macro.

[New Registration]

Item	Description
[Type]	Select a type of font/macro to be added.
[ID]	Enter the ID of the font/macro. This ID is required if you have set the [Type] to [PCL Font] or [PCL Macro] and if you have selected the [Manual Setting] check box. If you enter an ID that has already been used, the existing ID will be overwritten by it.
[Location]	Select the storage location of the font/macro.

Register the administrator information and the address of this machine.

The registration of this machine is required for E-mail or Internet fax transmissions.

[Machine Setting]

In the administrator mode of PageScope Web Connection, select [System Settings] >> [Machine Setting].

	🌆 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	2
System Settings V	blay	E To Main Menu
► Machine Setting	Machine Setting	
Register Support Information	Device Location	
Network TWAIN	Administrator Registration	
User Box Setting	Administrator Name	
Stamp Settings	E-mail Address	
Blank Page Print Settings	Extension No.	
Skip Job Operation Settings	Input Machine Address	
	Device Name	
▶ Flash Display Setting	E-mail Address	
System Connection Setting		
Display Setting		OK Cancel
Outline PDF Setting		

Item	Description
[Device Location]	Enter the installation location of this machine (up to 255 characters).
[Administrator Regis- tration]	Register the administrator name and contact information of this machine.
[Administrator Name]	Enter the administrator name of this machine (up to 20 characters).
[E-mail Address]	Enter the E-mail address of the administrator (up to 128 characters). This setting is required for sending E-mail messages.
[Extension No.]	Enter the extension number of the administrator (up to eight characters).
[Input Machine Ad- dress]	Register the device name and E-mail address of this machine.
[Device Name]	Enter the device name (up to 80 characters). This name is used as a part of an Internet fax subject name.
[E-mail Address]	Enter the E-mail address of this machine (up to 320 characters). This setting is required when sending Internet faxes.

11.3 Registering support information

Register the support information for this machine.

To display this information, select [Information]►►[Online Assistance] in the user mode.

[Register Support Information]

In the administrator mode of **PageScope Web Connection**, select [System Settings] **>>** [Register Support Information].

	🌆 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	2
System Settings 🔽 Dis	play	E To Main Menu
▶ Machine Setting	Register Support Information	
Register Support Information	Contact Name	
Network TWAIN	Contact Information	
⊫ User Box Setting	Product Help URL	
Stamp Settings	Corporate URL	
Blank Page Print Settings	Supplies and Accessories	
Skip Job Operation Settings	Online Help URL	
▶ Flash Display Setting	Driver URL	
System Connection Setting	Engine Serial Number	11
▶ Display Setting		
Outline PDF Setting		OK Cancel

Item	Description
[Contact Name]	Enter the contact name for the machine (up to 63 characters).
[Contact Information]	Enter the contact name information for the machine such as the phone number and URL (up to 127 characters).
[Product Help URL]	Enter the URL of the Web page for product information (up to 127 characters).
[Corporate URL]	Enter the URL of the Web page for the manufacturer (up to 127 characters).
[Supplies and Acces- sories]	Enter consumables supplier information (up to 127 characters). C360 http://www.pagescope.com/download/webconnection/online- help/c360/v2/help.html C280 http://www.pagescope.com/download/webconnection/online- help/c280/v2/help.html C220 http://www.pagescope.com/download/webconnection/online- help/c220/v2/help.html
[Online Help URL]	Enter the online help URL (up to 127 characters).
[Driver URL]	Enter the driver storage location (up to 127 characters).
[Engine Serial Number]	Displays the serial number of this machine.

Register the header/footer program.

When copying a document, you can call the header/footer program registered in this item, and print a text or date/time at the top or bottom of the specified pages.

[Header/Footer Registration]

In the administrator mode of **PageScope Web Connection**, select [System Settings] **>>** [Stamp Settings] **>>** [Header/Footer Registration] **>>** [Edit].

	Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	3
		2
System Settings 🛛 👻 Disp	blay	💷 To Main Menu
▶ Machine Setting	Header/Footer Registration	
Register Support Information	No.	2
Network TWAIN	Name	
User Box Setting	Color	Black 💌
-	Pages	1st Page Only 👻
▼ Stamp Settings	Size	10pt 🖌
Header/Footer Registration	Text Type	Times Roman 💌
► Fax TX Settings	Date/Time Setting	
-	Date Type	07/1/23
Blank Page Print Settings	Time Type	None 🔽
Skip Job Operation Settings	Distribution Number	
Flash Display Setting	Text	
System Connection Setting	Output Method	Number only
Display Setting	Start Number Specification	1 (1-99999999)
▶ Outline PDF Setting	Header	
outline i bri ootung	Header String	
	Date/Time Setting	Do Not Print 💌
	Distribution Number	Do Not Print 💌
	Job Number	Do Not Print 💌
	Serial Number	Do Not Print 🐱
	User Name/Account Name	Do Not Print 💌
	Footer	
	Footer String	
	Date/Time Setting	Do Not Print 💌
	Distribution Number	Do Not Print 💌
	Job Number	Do Not Print 💌
	Serial Number	Do Not Print 💌
	User Name/Account Name	Do Not Print 💌
		OK Cancel

Item	Description
[No.]	Displays the registration number.
[Name]	Enter the registered name (up to 16 characters).
[Color]	Select the header or footer color.
[Pages]	Specify whether to print the header or footer only on the first page or all pages.
[Size]	Specify the character size used for the header or footer.
[Text Type]	Specify the character font used for printing.
[Date/Time Setting]	Select the respective display formats for date and time. You can make a selection when [Date/Time Setting] of either [Header] or [Footer] is set to [Print].
[Distribution Number]	Enter the text to be added to the distribution numbers and printed (up to 20 characters). Specify the output method and start number of the distribution numbers. When [Number only] is selected for the output method, two-digit distribution numbers are displayed in two digits. If [Put zeros in front (total 8-digits)] is selected, the numbers are always displayed in eight digits regardless of the specified number of digits. You can make a selection when [Distribution Number] of either [Header] or [Footer] is set to [Print].

Item	Description
[Header]/[Footer]	Specify whether to print the following items. [Header String]/[Footer String](Up to 40 characters) [Date/Time Setting] [Distribution Number] [Job Number] [Serial Number] (Engine serial No. of this machine) [User Name/Account Name] To print a distribution number, specify the desired number in [Distribution Number]. If user authentication or account track is not enabled, data will not be printed even when [User Name/Account Name] is set to [Print].

You can register or edit an address, and register an icon.

If a frequently used destination is registered in the address book, you can specify it and easily send a document. You can also register an icon in the address book.

[Store Address]

In the administrator mode of **PageScope Web Connection**, select [Store Address] → [Address Book] → [Store Address].

		eady to Scar					
		Menu (Admi	n Mode)				
Store Address 🛛 🔽 Dis	splay					I T	o Main Mer
▼ Address Book		ess Bool					
Store Address	The		/ho wants to transmit o	data can be registered			
► Icon		New Regis	tration				
▶ Group				Search by number.	1-5	50	🖌 Go
Program				Search from Index		~	Go
Temporary One-Touch	No.	Function	Name		S/MIME	Edit	Delete
Subject	1	E-mail	1			Edit	Delete
▶ Text	2	E-mail	2			Edit	Delete
▶ Prefix/Suffix	3	FTP	FTP1			Edit	Delete
	- 4	SMB	PC1			Edit	Delete
	5	WebDAV	WebDAV1			Edit	Delete
	6	User Box	box1			Edit	Delete
	-	Fax	Fax1			Edit	Delete
	7						

Item	Description
[New Registration]	Add new destinations to the address book.
[Search by number.]	Select a range of registration numbers, and then click [Go] to display the list of destinations in the selected range.
[Search from Index]	Select an index, and then click [Go] to display the list of addresses with the selected index.
[No.]	Displays the registration number.
[Function]	Displays the registered functions.
[Name]	Displays the registered name.
[S/MIME]	Displays whether a certificate is registered with the E-mail address.
[Edit]	Click this button to edit the registered address. The available items are the same as those for registration.
[Delete]	Delete an address from the address book.

[New Registration]►►[E-mail]

Item	Description
[No.]	Specify the registration number of the destination. If you select [Direct Input], enter the registration number.
[Name]	Enter the destination name (up to 24 characters).
[Index]	Select the index character used when searching for the destination. It is convenient to select the [Main] check box for a frequently used destina- tion.
[E-mail Address]	Enter the E-mail address of the destination (up to 320 characters).

Item	Description
[Registration of Certifi- cation Information]	Select this check box to register certificate information. Click [Browse] to specify the certificate to be registered. Certificate informa- tion is supported only as a DER (Distinguished Encoding Rules) file. To delete the registered certificate information, select [Deletion of Certification Information]. You cannot register a certificate if the E-mail address of the destination does not match that of the certificate. Before registering a certificate, check that those E-mail addresses are the same.
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.

[New Registration]►►[FTP]

Item	Description		
[No.]	Specify the registration number of the destination. If you select [Direct Input], enter the registration number.		
[Name]	Enter the destination name (up to 24 characters).		
[Index]	Select the index character used when searching for the destination. It is convenient to select the [Main] check box for a frequently used destina- tion.		
[Host Address]	Enter the IP address of the destination FTP server. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.		
[File Path]	Specify the destination directory (up to 127 bytes).		
[User ID]	Enter the user ID to log in to the destination FTP server (up to 63 bytes).		
[Password is changed.]	Select this check box to change the password. This item is displayed when editing the registered information.		
[Password]	Enter the password to log in to the destination FTP server (up to 63 bytes, excluding space and ").		
[anonymous]	Select whether to allow anonymous users to access the FTP server.		
[PASV Mode]	Select whether to communicate in PASV mode.		
[Proxy]	Select whether to use a proxy server.		
[Port No.]	Enter a port number.		
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.		

[New Registration]►►[SMB]

Item	Description	
[No.]	Specify the registration number of the destination. If you select [Direct Input], enter the registration number.	
[Name]	Enter the destination name (up to 24 characters).	
[Index]	Select the index character used when searching for the destination. It is convenient to select the [Main] check box for a frequently used destina- tion.	

Item	Description
[Host Address]	Enter the IP address of the destination computer. In the IPv4 environment, enter the IPv4 address, NetBIOS name, or host name. Enter the NetBIOS name in uppercase. If the DNS server has already been configured, you can enter the host name instead. For the host name, specify a fully-qualified domain name (FQDN). In the IPv6 environment, enter the IPv6 address or host name. If the DNS serv- er has already been configured, you can enter the host name instead. Howev- er, you can also specify the host name in an environment without the DNS server when resolving the names using the LLMNR function while the destina- tion computer is Windows Vista/Server 2008.
[File Path]	Specify the destination directory (up to 255 bytes).
[User ID]	Enter the user ID to log in to the destination computer (up to 127 bytes).
[Password is changed.]	Select this check box to change the password. This item is displayed when editing the registered information.
[Password]	Enter the password to log in to the destination computer (up to 127 bytes, excluding space and ").
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.

[New Registration]►►[WebDAV]

Item	Description		
[No.]	Specify the registration number of the destination. If you select [Direct Input], enter the registration number.		
[Name]	Enter the destination name (up to 24 characters).		
[Index]	Select the index character used when searching for the destination. It is convenient to select the [Main] check box for a frequently used destina- tion.		
[Host Address]	Enter the IP address of the destination WebDAV server. Format: *.*.* (Asterisk * can be 0 to 255) If the DNS server has already been configured, you can enter the host name instead. When using IPv6, you can specify the IPv6 address.		
[File Path]	Specify the destination directory (up to 142 bytes).		
[User ID]	Enter the user ID to log in to the destination WebDAV server (up to 63 bytes).		
[Password is changed.]	Select this check box to change the password. This item is displayed when editing the registered information.		
[Password]	Enter the password to log in to the destination WebDAV server (up to 63 bytes, excluding space and ").		
[SSL Settings]	Select whether to use SSL for encryption.		
[Proxy]	Select whether to use a proxy server.		
[Port No.]	Enter a port number.		
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.		

[New Registration]►►[User Box]

Item	Description
[No.]	Specify the registration number of the destination. If you select [Direct Input], enter the registration number.
[Name]	Enter the destination name (up to 24 characters).

Item	Description	
[Index]	Select the index character used when searching for the destination. It is convenient to select the [Main] check box for a frequently used destina- tion.	
[User Box No.]	Select the box number of the destination User Box from User Boxes registered with this machine.	
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.	

[New Registration]► [Fax]

(This registration is available if the optional $\ensuremath{\textit{Fx-502}}$ is installed.)

Item	Description	
[No.]	Specify the registration number of the destination. If you select [Direct Input], enter the registration number.	
[Name]	Enter the destination name (up to 24 characters).	
[Index]	Select the index character used when searching for the destination. It is convenient to select the [Main] check box for a frequently used destina- tion.	
[Destination]	Enter the fax number of the destination (up to 38 characters).	
[Confirm Fax Number]	Enter the fax number again to prevent an incorrect fax number from being reg- istered. This item is displayed when [Confirm Address (Register)] is [ON].	
[Line Setting]	Select a line to be used. This item is available when two optional Fax Kit FK-502 are installed.	
[Communication Set- ting]	Click [Display] to display the current communication settings. Select whether to enable each of [V34 Off], [ECM Off], [International Commu- nication] or [Check Destination].	
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.	

[New Registration]►►[IP Address Fax]

(Registration is possible when the IP address fax function is available.)

Item	Description	
[No.]	Specify the registration number of the destination. If you select [Direct Input], enter the registration number.	
[Name]	Enter the destination name (up to 24 characters).	
[Index]	Select the index character used when searching for the destination. It is convenient to select the [Main] check box for a frequently used destina- tion.	
[Destination Type]	Select the address format of the destination.	
[Address]	 Enter the IP address of the destination IP address fax machine. If [IP Address] is selected in [Destination Type], enter the IP address of the destination. When using IPv6, you can specify the IPv6 address. If [Host Name] is selected in [Destination Type], enter the host name of the destination. If the DNS server has already been configured, you can enter the host name instead. If [E-mail Address] is selected in [Destination Type], enter the E-mail address of the destination. If the DNS server has already been configured, you can enter the termail address instead. 	
[Port No.]	Enter a port number.	

Item	Description
[Destination Machine Type]	Select whether the destination machine is a color or monochrome machine.
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.

[New Registration]►►[Internet Fax]

(Registration is possible when the Internet fax function is available.)

Item	Description
[No.]	Specify the registration number of the destination. If you select [Direct Input], enter the registration number.
[Name]	Enter the destination name (up to 24 characters).
[Index]	Select the index character used when searching for the destination. It is convenient to select the [Main] check box for a frequently used destina- tion.
[E-mail Address]	Enter the E-mail address of the destination (up to 320 characters).
[Resolution]	Select a resolution the receiver machine supports.
[Paper Size]	Select a paper size the receiver machine supports.
[Compression Type]	Select a compression type the receiver machine supports.
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.

[lcon]

In the administrator mode of **PageScope Web Connection**, select [Store Address] >> [Address Book] >> [Icon] >> [Edit].

	Ready to Scan	
	👘 In Menu (Admin Mode)	3
Store Address 🛛 🔽	Display	E To Main Menu
▼ Address Book	Register Icon	
Store Address	No.	1
► Icon	Name © Specify Icon	1
► Group		Search from List
▶ Program		
Temporary One-Touch		Registered icon
▶ Subject		8
► Text		
▶ Prefix/Suffix		

Item	Description
[No.]	Displays the registration number of the destination.
[Name]	Displays the name of the destination.
[Specify Icon]	Select [Specify Icon].
[Search from List]	Click this button to display the list of icons. Select the icon you want to register.

You can register or edit a group destination.

You can register one or more destinations as a group.

When you want to send (broadcast) the same data to multiple destinations, it is convenient to have those destinations registered as a group. To register a group, you must register the destinations to be added to the group in advance.

[Group]

In the administrator mode of PageScope Web Connection, select [Store Address] → [Group].

	归 Administrator	Logout ?
	Ready to Scan Im Menu (Admin Mode) Image: Comparison of Comparison	3
Store Address 🛛 🔽 Di	splay	🛄 To Main Menu
▶ Address Book	Group List	
► Group ► Program	It is possible to register in the group address by making two o a group. It is necessary to register to the shortening address to register advance	-
Temporary One-Touch	New Registration	
▶ Subject ▶ Text	Search by number.	1-50 💌 Go
▶ Prefix/Suffix	No. Name 1 group1	Edit Delete

Item	Description
[New Registration]	Click this button to register a new group.
[Registration Number]	Select a range of registration numbers, and then click [Go] to display the list of destinations in the selected range.
[No.]	Displays the registration number.
[Name]	Displays the registered name.
[Edit]	Click this button to edit the registered group. The available items are the same as those for registration.
[Delete]	Click this button to delete the group.

[New Registration]

Item	Description
[Name]	Enter the destination name (up to 24 characters).
[Scan/Fax Address]	Click [Search from List] to display a list of the registered destinations. From the list of destinations in the address book, select the destinations you want to add to the group.
[Check Destination]	Check registered destinations.
[Specify Icon]	Click [Search from List], and then select an icon for a user you want to register from the displayed list.
[Limiting Access to Destinations]	Click [Display] to display the current settings for limiting access to destina- tions. Specify the access allowed level or reference allowed group required to ac- cess this destination.

You can register or edit a group destination.

You can register a combination of address information, communication information, and original information as a program destination.

[Program]

In the administrator mode of PageScope Web Connection, select [Store Address] → [Program].

	凝 Administrator			ogout
	Ready to Scan			
	👔 In Menu (Admin Mode)			
Store Address	Display		E 1	'o Main Mer
⊫ Address Book	Program List			
▶ Group	Allows you to register de Program key.	estination, scan settings and commu	nication settings inti	o one
▶ Program	PAGE1	Page (Displays 12 at a	time) PAGE	1 🔽 Go
Temporary One-Touch		g. (biopiajo iz ara	Change Page	
▶ Subject	No. Name	S/MIME	Edit	Delete
▶ Text	1 1		Edit	Delete
▶ Prefix/Suffix	2		Registration	Delete
	3		Registration	Delete
	4		Registration	Delete
	5		Registration	Delete
	6		Registration	Delete
	7		Registration	Delete
	8		Registration	Delete
	9		Registration	Delete
	10		Registration	Delete
	10		Registration	Delete
	12		Registration	Delete

Item	Description
[Page (Displays 12 at a time)]	Select a page, and then click [Go] to display the list of destinations on the se- lected page.
[Change Page Name]	Change the page name.
[No.]	Displays the registration number.
[Name]	Displays the registered name.
[S/MIME]	Displays whether a certificate is registered with the E-mail address.
[Registration]	Register a new program destination.
[Edit]	Edit a registered program destination. The available items are the same as those for registration.
[Delete]	Delete the program destination.

[Registration]► [E-mail]

Item	Description
[No.]	Displays the registration number.
[Name]	Enter the destination name (up to 24 characters).
[Destination Informa- tion]	Specify the destination. Select [Select from Address Book] or [Direct Input], and then specify the E-mail destination.
[Resolution]	Select the resolution used for scanning the original.
[File Type]	Select the file type for saving scanned data.
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].

Item	Description	
[File Name]	Enter the file name (up to 30 characters).	
[Page Setting]	Select whether to save the whole scanned pages in one file, or to divide a file into specified number of pages when saving the data. To use the Page Separation function, enter the number of pages for each file If the number of original pages is less than the setting of Page Separation, the original is saved as one file without being separated.	
[Subject]	Specify the subject of the E-mail message. If you select [Not Specified], the default subject is used. Click [Subject List] t view the content.	
[E-mail Body]	Specify the body text of the E-mail message. If you select [Text], the default body text is used. Click [Text List] to view the content.	
[File Attachment Set- ting]	Select whether to collectively attach all the divided files to one E-mail to send them (E-mail size: 200MB or less) or attach each file to one E-mail to send it (E-mail size: less than 400MB) when [Page Separation] is selected in [Page Setting]. When attaching each file to one E-mail, E-mails are sent by the number of divided files.	
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.	
[Original Type]	Select the original quality, such as text or photo.	
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.	
[Separate Scan]	Select whether to divide the original to scan.	
[Density]	Select the density.	
[Background Removal]	Adjust the density of the background.	
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.	
[Application Setting]	Click [Display] to display the setting.	
[Original Direction]	Select the orientation of the original.	
[2-Sided Binding Direc- tion]	Select the binding position of the original.	
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.	
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.	
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.	
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.	
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune] [Color], [Size], and [Text Type].	
[Compose(Head- er/Footer)]	Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and foot- ers. To specify a header or footer, you must select [System Settings] >> [Stamp Set tings] >> [Header/Footer Registration] to pre-register the header or footer in this machine.	

Item	Description
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.

[Registration]►►[FTP]

Item	Description	
[No.]	Displays the registration number.	
[Name]	Enter the destination name (up to 24 characters).	
[Destination Informa- tion]	Specify the destination. Select [Select from Address Book] or [Direct Input], and specify the FTP des- tination.	
[Resolution]	Select the resolution used for scanning the original.	
[File Type]	Select the file type for saving scanned data.	
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].	
[File Name]	Enter the file name (up to 30 characters).	
[Page Setting]	Select whether to save the whole scanned pages in one file, or to divide a file into specified number of pages when saving the data. To use the Page Separation function, enter the number of pages for each file. If the number of original pages is less than the setting of Page Separation, the original is saved as one file without being separated.	
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.	
[Original Type]	Select the original quality, such as text or photo.	
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.	
[Separate Scan]	Select whether to divide the original to scan.	
[Density]	Select the density.	
[Background Removal]	Adjust the density of the background.	
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.	
[Application Setting]	Click [Display] to display the setting.	
[E-mail Notification]	Specify whether to notify via E-mail the destination URL defined for saving scanned data. To notify the URL, specify the notification addresses. You can select the addresses from the list by clicking [Search from List].	
[Original Direction]	Select the orientation of the original.	
[2-Sided Binding Direc- tion]	Select the binding position of the original.	
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.	

Item	Description
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune], [Color], [Size], and [Text Type].
[Compose(Head- er/Footer)]	Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and foot- ers. To specify a header or footer, you must select [System Settings]→[Stamp Set- tings]→[Header/Footer Registration] to pre-register the header or footer in this machine.
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.

[Registration]►►[SMB]

Item	Description
[No.]	Displays the registration number.
[Name]	Enter the destination name (up to 24 characters).
[Destination Informa- tion]	Specify the destination. Select [Select from Address Book] or [Direct Input], and then specify the SMB address.
[Resolution]	Select the resolution used for scanning the original.
[File Type]	Select the file type for saving scanned data.
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].
[File Name]	Enter the file name (up to 30 characters).
[Page Setting]	Select whether to save the whole scanned pages in one file, or to divide a file into specified number of pages when saving the data. To use the Page Separation function, enter the number of pages for each file. If the number of original pages is less than the setting of Page Separation, the original is saved as one file without being separated.
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.
[Original Type]	Select the original quality, such as text or photo.
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.

Item	Description	
[Separate Scan]	Select whether to divide the original to scan.	
[Density]	Select the density.	
[Background Removal]	Adjust the density of the background.	
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.	
[Application Setting]	Click [Display] to display the setting.	
[E-mail Notification]	Specify whether to notify via E-mail the destination URL defined for saving scanned data. To notify the URL, specify the notification addresses. You can select the addresses from the list by clicking [Search from List].	
[Original Direction]	Select the orientation of the original.	
[2-Sided Binding Direc- tion]	Select the binding position of the original.	
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.	
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.	
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.	
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.	
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune], [Color], [Size], and [Text Type].	
[Compose(Head- er/Footer)]	Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and foot- ers. To specify a header or footer, you must select [System Settings] ► [Stamp Set- tings] ► [Header/Footer Registration] to pre-register the header or footer in this machine.	
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.	
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.	
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.	

Item	Description
[No.]	Displays the registration number.
[Name]	Enter the destination name (up to 24 characters).
[Destination Informa- tion]	Specify the destination. Select [Select from Address Book] or [Direct Input], and then specify the Web- DAV destination.
[Resolution]	Select the resolution used for scanning the original.
[File Type]	Select the file type for saving scanned data.
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].
[File Name]	Enter the file name (up to 30 characters).
[Page Setting]	Select whether to save the whole scanned pages in one file, or to divide a file into specified number of pages when saving the data. To use the Page Separation function, enter the number of pages for each file. If the number of original pages is less than the setting of Page Separation, the original is saved as one file without being separated.
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.
[Original Type]	Select the original quality, such as text or photo.
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.
[Separate Scan]	Select whether to divide the original to scan.
[Density]	Select the density.
[Background Removal]	Adjust the density of the background.
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.
[Application Setting]	Click [Display] to display the setting.
[E-mail Notification]	Specify whether to notify via E-mail the destination URL defined for saving scanned data. To notify the URL, specify the notification addresses. You can select the addresses from the list by clicking [Search from List].
[Original Direction]	Select the orientation of the original.
[2-Sided Binding Direc- tion]	Select the binding position of the original.
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune], [Color], [Size], and [Text Type].

Item	Description
[Compose(Head- er/Footer)]	Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and foot- ers. To specify a header or footer, you must select [System Settings] >> [Stamp Set- tings] >> [Header/Footer Registration] to pre-register the header or footer in this machine.
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.

[Registration]► [User Box]

Item	Description
[No.]	Displays the registration number.
[Name]	Enter the destination name (up to 24 characters).
[Destination Informa- tion]	Specify the destination. Select [Select from Address Book] or [Direct Input], and then specify the User Box destination.
[Resolution]	Select the resolution used for scanning the original.
[File Type]	Select the file type for saving scanned data.
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].
[File Name]	Enter the file name (up to 30 characters).
[Page Setting]	Select whether to save the whole scanned pages in one file, or to divide a file into specified number of pages when saving the data. To use the Page Separation function, enter the number of pages for each file. If the number of original pages is less than the setting of Page Separation, the original is saved as one file without being separated.
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.
[Original Type]	Select the original quality, such as text or photo.
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.
[Separate Scan]	Select whether to divide the original to scan.
[Density]	Select the density.
[Background Removal]	Adjust the density of the background.
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.
[Application Setting]	Click [Display] to display the setting.
[E-mail Notification]	Specify whether to notify via E-mail the destination URL defined for saving scanned data. To notify the URL, specify the notification addresses. You can select the addresses from the list by clicking [Search from List].

Item	Description
[Original Direction]	Select the orientation of the original.
[2-Sided Binding Direc- tion]	Select the binding position of the original.
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune], [Color], [Size], and [Text Type].
[Compose(Head- er/Footer)]	Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and foot- ers. To specify a header or footer, you must select [System Settings]→[Stamp Set- tings]→[Header/Footer Registration] to pre-register the header or footer in this machine.
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.

[Registration]►►[Fax]

Item	Description
[No.]	Displays the registration number.
[Name]	Enter the destination name (up to 24 characters).
[Destination Informa- tion]	Specify the destination. Select [Select from Address Book] or [Direct Input], and then specify the fax destination.
[Resolution]	Select the resolution used for scanning the original.
[File Type]	Select the file type for saving scanned data.
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.
[Original Type]	Select the original quality, such as text or photo.
[Separate Scan]	Select whether to divide the original to scan.

Item	Description		
[Density]	Select the density.		
[Background Removal]	Adjust the density of the background.		
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.		
[Application Setting]	Click [Display] to display the setting.		
[Timer TX]	Select whether to perform timer transmission. To perform timer transmission, enter the send time.		
[Password TX]	Select whether to perform password transmission. To perform password transmission, enter the password.		
[F-Code]	Select whether to use the F code for transmission. To use this function, enter the SUB address and password.		
[2-Sided Binding Direc- tion]	Select the binding position of the original.		
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.		
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.		
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.		
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.		
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune], [Color], [Size], and [Text Type].		
[Compose(Head- er/Footer)]	 Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and footers. To specify a header or footer, you must select [System Settings]→ [Stamp Settings]→ [Header/Footer Registration] to pre-register the header or footer in this machine. 		
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.		
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.		
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to ac- cess this destination.		

[Registration]►►[IP Address Fax]

Item	Description			
[No.]	Displays the registration number.			
[Name]	Enter the destination name (up to 24 characters).			
[Destination Informa- tion]	Specify the destination. Select [Select from Address Book] or [Direct Input], and then specify the IP ad- dress fax.			
[Resolution]	Select the resolution used for scanning the original.			
[File Type]	Select the file type for saving scanned data.			
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].			
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.			
[Original Type]	Select the original quality, such as text or photo.			
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.			
[Separate Scan]	Select whether to divide the original to scan.			
[Density]	Select the density.			
[Background Removal]	Adjust the density of the background.			
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.			
[Application Setting]	Click [Display] to display the setting.			
[2-Sided Binding Direc- tion]	Select the binding position of the original.			
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.			
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.			
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.			
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.			
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune], [Color], [Size], and [Text Type].			
[Compose(Head- er/Footer)]	 Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and footers. To specify a header or footer, you must select [System Settings] → [Stamp Settings] → [Header/Footer Registration] to pre-register the header or footer in this machine. 			
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.			

Item	Description
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.

[Registration]►►[Internet Fax]

Item	Description			
[No.]	Displays the registration number.			
[Name]	Enter the destination name (up to 24 characters).			
[Destination Informa- tion]	Specify the destination. Select [Select from Address Book] or [Direct Input], and then specify the Inter- net fax destination.			
[Resolution]	Select the resolution used for scanning the original.			
[File Type]	Select the file type for saving scanned data.			
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].			
[Subject]	Specify the subject of the E-mail message. If you select [Not Specified], the default subject is used. Click [Subject List] to view the content.			
[Text]	Specify the body text of the E-mail message. If you select [Not Specified], the default body text is used. Click [Text List] to view the content.			
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.			
[Original Type]	Select the original quality, such as text or photo.			
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.			
[Separate Scan]	Select whether to divide the original to scan.			
[Density]	Select the density.			
[Background Removal]	Adjust the density of the background.			
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.			
[Application Setting]	Click [Display] to display the setting.			
[2-Sided Binding Direc- tion]	Select the binding position of the original.			
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.			
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.			
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.			
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.			

Item	Description	
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune], [Color], [Size], and [Text Type].	
[Compose(Head- er/Footer)]	Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and foot- ers. To specify a header or footer, you must select [System Settings]→ [Stamp Set- tings]→ [Header/Footer Registration] to pre-register the header or footer in this machine.	
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.	
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.	
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.	

[Registration]►►[Group]

Item	Description	
[No.]	Displays the registration number.	
[Name]	Enter the destination name (up to 24 characters).	
[Destination Informa- tion]	Specify the destination. Click [Select from Address Book] to select the group to be registered as a pro- gram destination. Click [Check Destination] to check registered destinations.	
[Resolution]	Select the resolution used for scanning the original.	
[File Type]	Select the file type for saving scanned data.	
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].	
[File Name]	Enter the file name (up to 30 characters).	
[Page Setting]	Select whether to save the whole scanned pages in one file, or to divide a file into specified number of pages when saving the data. To use the Page Separation function, enter the number of pages for each file. If the number of original pages is less than the setting of Page Separation, the original is saved as one file without being separated.	
[Subject]	Specify the subject of the E-mail message. If you select [Not Specified], the default subject is used. Click [Subject List] to view the content.	
[Text]	Specify the body text of the E-mail message. If you select [Not Specified], the default body text is used. Click [Text List] to view the content.	
[File Attachment Set- ting]	Select whether to collectively attach all the divided files to one E-mail to send them (E-mail size: 200MB or less), or to attach each file to one E-mail to send it (E-mail size: less than 400MB) when [Page Separation] is selected in [Page Setting]. When attaching each file to one E-mail, E-mails are sent by the number of divided files.	
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.	
[Original Type]	Select the original quality, such as text or photo.	

Item	Description			
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.			
[Separate Scan]	Select whether to divide the original to scan.			
[Density]	Select the density.			
[Background Removal]	Adjust the density of the background.			
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.			
[Application Setting]	Click [Display] to display the setting.			
[E-mail Notification]	Specify whether to notify via E-mail the destination URL defined for saving scanned data. To notify the URL, specify the notification addresses. You can select the addresses from the list by clicking [Search from List].			
[Timer TX]	Select whether to perform timer transmission. To perform timer transmission, enter the send time.			
[Original Direction]	Select the orientation of the original.			
[2-Sided Binding Direc- tion]	Select the binding position of the original.			
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.			
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.			
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.			
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.			
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune] [Color], [Size], and [Text Type].			
[Compose(Head- er/Footer)]	Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and foot- ers.			
	To specify a header or footer, you must select [System Settings] → [Stamp Settings] → [Header/Footer Registration] to pre-register the header or footer in this machine.			
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.			
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.			
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.			

[Registration]► [No Destination]

Item	Description			
[No.]	Displays the registration number.			
[Name]	Enter the destination name (up to 24 characters).			
[Resolution]	Select the resolution used for scanning the original.			
[File Type]	Select the file type for saving scanned data.			
[Outline PDF]	Select whether to use the outline PDF function when [Compact PDF] is selected in [File Type].			
[File Name]	Enter the file name (up to 30 characters).			
[Page Setting]	Select whether to save the whole scanned pages in one file, or to divide a file into specified number of pages when saving the data. To use the Page Separation function, enter the number of pages for each file. If the number of original pages is less than the setting of Page Separation, the original is saved as one file without being separated.			
[Subject]	Specify the subject of the E-mail message. If you select [Not Specified], the default subject is used. Click [Subject List] to view the content.			
[Text]	Specify the body text of the E-mail message. If you select [Not Specified], the default body text is used. Click [Text List] to view the content.			
[File Attachment Set- ting]	Select whether to collectively attach all the divided files to one E-mail to send them (E-mail size: 200MB or less), or to attach each file to one E-mail to send it (E-mail size: less than 400MB) when [Page Separation] is selected in [Page Setting]. When attaching each file to one E-mail, E-mails are sent by the number of divided files.			
[Simplex/Duplex]	Select whether to scan one side or both sides of the original. You can scan one side of the first page of the original, and then scan both sides of the remaining pages.			
[Original Type]	Select the original quality, such as text or photo.			
[Color]	Select a color mode. The file formats for saving data may be limited according to the color mode you select.			
[Separate Scan]	Select whether to divide the original to scan.			
[Density]	Select the density.			
[Background Removal]	Adjust the density of the background.			
[Scan Size]	Select the paper size of the original. If you select [Standard Size], select the size and the feed direction. If you select [Custom Size], specify the height and width.			
[Application Setting]	Click [Display] to display the setting.			
[E-mail Notification]	Specify whether to notify via E-mail the destination URL defined for saving scanned data. To notify the URL, specify the notification addresses. You can select the addresses from the list by clicking [Search from List].			
[Timer TX]	Select whether to perform timer transmission. To perform timer transmission, enter the send time.			
[Password TX]	Select whether to perform password transmission. To perform password transmission, enter the password.			
[F-Code]	Select whether to use the F code for transmission. To use this function, enter the SUB address and password.			
[Original Direction]	Select the orientation of the original.			
[2-Sided Binding Direc- tion]	Select the binding position of the original.			
[Special Original]	If the original being sent is a mixed original (original with mixed page sizes), a Z-folded original (original folded in a zigzag shape), or a long original, select whichever is relevant.			

Item	Description	
[Book Scan]	Select whether to perform book copying. Using the book copy function enables you to divide page spreads (such as a book or catalog) into left and right pages to be scanned individually.	
[Erase]	Select whether to erase frames. Using the frame erase function enables you to erase unwanted areas around the original, such as transmission information printed on received faxes and the shadows of punched holes.	
[Compose(Date/Time)]	Specify whether to print the date and time data. To print the date and time data, configure the [Date Type], [Time Type], [Print Position], [Fine-Tune], [Color], [Pages], [Size], and [Text Type] settings.	
[Compose(Page)]	Select whether to print page numbers. To print data, specify [Start], [Page Number Type], [Print Position], [Fine-Tune], [Color], [Size], and [Text Type].	
[Compose(Head- er/Footer)]	Specify whether to print the header and footer. To print the header and footer, specify the registration number of the header and footer. Click [Confirm Registered Contents] to view the registered headers and foot- ers. To specify a header or footer, you must select [System Settings]→>[Stamp Set- tings]→>[Header/Footer Registration] to pre-register the header or footer in this machine.	
[Compose(Stamp)]	Select whether to print the stamp. To print the stamp, configure the stamp type ([Preset Stamp] or [Registered Stamp]), [Print Position], [Fine-Tune], [Color], [Pages], and [Size] settings. Click [Confirm Registered Contents] to check the registered stamp. To specify the registered stamp, you must register the stamp with this machine in ad- vance.	
[Stamp Combine Meth- od]	Select the combine method for combining elements using [Compose(Stamp)] functions. You can select whether to insert the element as an image or text.	
[Limiting Access to Destinations]	Click [Display] to display the setting. Specify the access allowed level or reference allowed group required to access this destination.	

11.8 Registering Temporary One-Touch Destination

The Temporary One-Touch function temporarily registers destinations and the operating procedures of transmission.

Unlike program destinations, registration information of a temporary one-touch destination is deleted when transmitting data to the destination registered as a temporary one-touch, or turning off the power of this machine.

Reference

• You cannot register a temporary one-touch destination when [Security Settings]→[Security Details]→[Manual Destination Input] is set to [Restrict] in the [Administrator Setting] on the **Control Panel**.

[Temporary One-Touch]

In the administrator mode of **PageScope Web Connection**, select [Store Address] **>>** [Temporary One-Touch].

	🌆 Administrator		Lo	gout 🛛 📝
	Ready to Scan			
	in Menu (Admin Mode)			2
Store Address	Display		Е Т	o Main Menu
🖻 Address Book	Temporary One-Tou	ch List		
▶ Group ▶ Program		ly registered. It is deleted by the power- tination, scan settings and communica		
Temporary One-Touch	No. Name	Ec	lit	Delete
 Subject 	1		Registration	Delete
► Text	2		Registration	Delete
► Prefix/Suffix	3		Registration	Delete
TIGHA SUIIA	4		Registration	Delete
	5		Registration	Delete
	6		Registration	Delete
	7		Registration	Delete
	8		Registration	Delete
	9		Registration	Delete
	10		Registration	Delete



The temporary one-touch destination to be registered is the same as the registered program address. However, [Registration of Certification Information] and [Limiting Access to Destinations] are not available for temporary one-touch destinations. For details on registration for temporary one-touch destinations, refer to page 11-13.

11.9 Registering the E-mail subject and body

Register the subject and message body used for sending E-mail messages or Internet faxes.

[Subject]

In the administrator mode of PageScope Web Connection, select [Store Address] → [Subject] → [Edit].

	Sector Administrator		Logout ?
	Ready to Scan		
	in Menu (Admin Mode)		8
Store Address 🛛 👻	Display		💷 To Main Menu
⊫ Address Book	Subject Registration		
▶ Group	No.	1	
▶ Program	Subject		
Temporary One-Touch			
► Subject			OK Cancel
► Text			
▶ Prefix/Suffix			

Item	Description
[No.]	Displays the registration number.
[Subject]	Register the subject of the E-mail message (up to 96 bytes).

[Text]

In the administrator mode of PageScope Web Connection, select [Store Address] -> [Text] -> [Edit].

	凝 Administrator		Logout ?
	Ready to Scan		a
Store Address	Display		🛃
⊫ Address Book	Text Registration		
▶ Group	No.	1	
▶ Program	Text		
Temporary One-Touch	Text		~
▶ Subject			- Lannes
► Text			
▶ Prefix/Suffix			OK Cancel

Item	Description
[No.]	Displays the registration number.
[Text]	Register the E-mail body (up to 384 bytes).

11.10 Simplifying entering E-mail addresses

Register prefixes and suffixes to simplify entering E-mail addresses.

Registration of domain names and other data in Prefix/Suffix enables you to retrieve registered strings when entering an E-mail address, allowing the prompt address entry.

[Prefix/Suffix]

In the administrator mode of PageScope Web Connection, select [Store Address]

	Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		3
Store Address 🛛 👻	Display		💷 To Main Menu
Address Book	Prefix/Suffix		
► Group	No.	1	
▶ Program	Prefix		
Temporary One-Touch	Suffix		
▶ Subject			
▶ Text			OK Cancel
Prefix/Suffix			

Item	Description
[No.]	Displays the registration number.
[Prefix]	Enter a Prefix (up to 20 characters).
[Suffix]	Enter a Suffix (up to 64 characters).



11.11 Using Data Management Utility

Manage copy protect data, stamp data, or font/macro data from a computer on the network using Data Management Utility of **PageScope Web Connection**.

11.11.1 Starting up Data Management Utility

Start up Data Management Utility from the **PageScope Web Connection** login page. Reference

- To use Data Management Utility, install Flash Player.
- To manage font or macro data, install Flash Player Ver.9.0 or later using Internet Explorer.
- You cannot start up multiple Data Management Utilities at the same time.
- 1 In the login page, select the desired Data Management Utility.

Login	
209	C Public User
	User Name
	Password
	C Administrator
View Mode	ି Flash ଡ HTML
	Flash Player is necessary to see in Flash form.
User Assist	☐ Display dialog box in case of warning.

2 Enter the administrator password of this machine.

	Administrator Password	OK Cancel
--	------------------------	-----------

Data Management Utility starts up.

Reference

For details on [Manage Copy Protect Data], refer to page 11-32.

For details on [Manage Stamp Data], refer to page 11-34.

For details on [Manage Font/Macro], refer to page 11-36.



11.11.2 Managing copy protect data

Manage copy protect data to be added to this machine.

Copy Protect proves that a document is a copied one by highlighting a character string on the document when a printed or copied document has been recopied. This function is available when preventing highly confidential documents from being copied secondarily.


Reference

• You cannot edit or delete copy protect data that is registered in this machine at shipment.

[Copy Protect List]

When [Manage Copy Protect Data] starts up, the registered copy protect data is listed.

(You can register up to eight copy protect data items.)

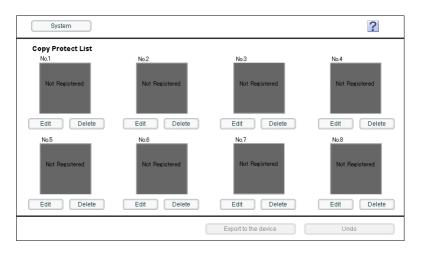

Item	Description
[System]	The system menu appears. In the System menu, you can handle [Auto Protect Setting], [Export], [Import], or [Exit]. For details, refer to page 11-33.
?	Displays the help about [Manage Copy Protect Data].
[Edit]	Displays the copy protect editing screen. In this page, you can edit the registered copy protect data or register new one. For details, refer to page 11-33.
[Delete]	Deletes the registered copy protect data. Copy protect data is not displayed in the copy protect list page; however, data is not actually deleted until it is written to this machine by clicking [Export to the device]. To cancel data deletion, click [Undo] [Export to the device] is se- lected.
[Export to the device]	Writes copy protect data to this machine. After newly registering, editing, or deleting copy protect data, click [Export to the device]. If you do not click [Export to the device], the edited contents are not updated.
[Undo]	Discards the edited contents and return to the previous state.

[System]

In the System menu, you can handle [Auto Protect Setting], [Export], [Import], or [Exit].

Item	Description
[Auto Protect Setting]	Displays the window that prohibits operations when the specified time has elapsed after the user paused operations. This prevents a third person from handling the system without the user's permission if the user leaves the seat while displaying the setting page. To use the Auto Protect function, specify the timeout period ranging from a time the user paused operations to a time the Auto Protect page appears.
[Export]	Backs up (exports) copy protect data defined in this machine in a file. To export data, click [OK] in the Confirmation screen.
[Import]	Reads copy protect data backed up in a file, and writes (imports) its contents to this machine. To import data, specify the file to be imported, and click [OK]. If there is copy protect data currently edited, it will be overwritten by the imported copy protect data.
[Exit]	Exits the application. The Confirmation screen appears. Click [OK].

[Edit]

Edit copy protect data.

You can specify the text, font, character size and style, and rotation angle required to use Copy Protect. You can edit data while checking the result in the preview.

No.1	Copy Protect Name	
	Copy Protect Text	
	Font Name	
	Arial Font Size	Bold
	24 ▼ Rotation Angle +++++ -180° -90° 0° 90	Degrees

Item	Description
[Copy Protect Name]	Enter a copy protect name (up to 16 characters).
[Copy Protect Text]	Enter the text to be displayed as copy protect data (up to 32 characters).
[Font Name]	Specify the desired font for copy protect text.
[Font Size]	Specify the desired font size for copy protect text.
[Bold]	Select this check box to specify the bold type for copy protect text.
[Italic]	Select this check box to specify the Italic type for copy protect text.
[Rotation Angle]	Specify the rotation angle for a copy protect text. You can enter a slider or numeric value to adjust the text rotation angle in 1- degree steps.

11.11.3 Managing stamp Data

Manage stamp data to be added to this machine.

You can register or delete a stamp image in this machine.

Reference


• You cannot edit or delete stamp data that is registered in this machine at shipment.

[Stamp List]

When [Manage Stamp Data] starts up, the registered stamp data is listed.

(You can register up to eight stamp data items.)

ī

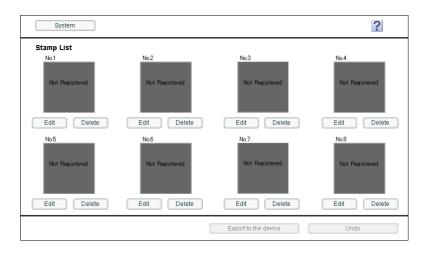

Item	Description
[System]	The system menu appears. In the System menu, you can handle [Auto Protect Setting], [Export], [Import], or [Exit]. For details, refer to page 11-35.
?	Displays the help about [Manage Stamp Data].
[Edit]	Displays the stamp editing screen. In this page, you can edit the registered stamp data or register new one. For details, refer to page 11-35.
[Delete]	Deletes the registered stamp data. Copy protect data is not displayed in the copy protect list page; however, data is not actually deleted until it is written to this machine by clicking [Export to the device]. To cancel data deletion, click [Undo] [Export to the device] is se- lected.
[Export to the device]	Writes stamp data to this machine. After newly registering, editing, or deleting stamp data, click [Export to the de- vice]. If you do not click [Export to the device], the edited contents are not up- dated.
[Undo]	Discards the edited contents and return to the previous state.

[System]

In the System menu, you can handle [Auto Protect Setting], [Export], [Import], or [Exit].

Item	Description
[Auto Protect Setting]	Displays the window that prohibits operations when the specified time has elapsed after the user paused operations. This prevents a third person from handling the system without the user's permission if the user leaves the seat while displaying the setting page. To use the Auto Protect function, specify the timeout period ranging from a time the user paused operations to a time the Auto Protect page appears.
[Export]	Backs up (exports) stamp data defined in this machine in a file. To export data, click [OK] in the Confirmation screen.
[Import]	Reads stamp data backed up in a file, and writes (imports) its contents to this machine. To import data, specify the file to be imported, and click [OK]. If there is stamp data currently edited, it is overwritten by the imported stamp data.
[Exit]	Exits the application. The Confirmation screen appears. Click [OK].

[Edit]

Edit stamp data.

You can specify an image and enlargement factor for stamp data. You can edit data while checking the result in the preview.

E dit Stamp No.1	Stamp Name
	Stamp image file Scan Zoom Magnification Internet for the source of t
	Preview

Item	Description
[Stamp Name]	Enter a stamp name (up to 16 characters).
[Stamp image file]	Click [Scan] to specify a bit map image to be used as a stamp, and click [OK].
[Zoom Magnification]	Specify the enlargement factor of a stamp image. You can enter a slider or numeric value to adjust the enlargement factor in steps of 1%.
[Preview]	Enlarges a stamp image. You can check the image details.

11.11.4 Managing font or macro

Manage font or macro data to be added to this machine.

You can register or delete fonts or macros to or from this machine.

Reference

• To manage font or macro data, install Flash Player Ver.9.0 or later using Internet Explorer.

[Font/Macro List]

When [Manage Font/Macro] starts up, the registered font or macro data is listed.

t/Macr	o List				
ont/Mac	ro	All	•		
No.	Туре	Destination	Name	ID	
0001	PCL Font	RAM	PcIFontInternal1		
0002	PCL Font	RAM	PcIFontInternal2		
0003	PCL Font	RAM	PcIFontInternal3		
0004	PCL Font	RAM	PcIFontinternal4		
0005	PCL Font	RAM	PcIFontInternal5		
0006	PS Font	RAM	PsFontinternal1		
0007	PS Font	RAM	PsFontInternal2		
0008	PS Font	RAM	PsFontInternal3		
0009	PS Font	RAM	PsFontInternal4		
0010	PS Font	RAM	PsFontInternal5		
0011	PCL Font	HDD	PcIFontHdd1		

Item	Description
[System]	The system menu appears. In the System menu, you can handle [Auto Protect Setting]or [Exit]. For details, refer to page 11-37.
?	Displays the help about [Font/Macro List].
3	Refreshes the font or macro list.
[Font/Macro]	Toggles the display between the font and macro lists.
[No.]	Displays a font or macro number.
[Type]	Displays a font or macro type.
[Destination]	Displays where the font or macro data is saved.
[Name]	Displays a font or macro name.
[ID]	Displays a font or macro ID number for PCL font or PCL macro.
[Add]	Adds new font or macro data. For details, refer to page 11-37.
[Delete]	Deletes the registered font or macro data.

[System]

In the System menu, you can handle [Auto Protect Setting]or [Exit].

Item	Description
[Auto Protect Setting]	Displays the window that prohibits operations when the specified time has elapsed after the user paused operations. This prevents a third person from handling the system without the user's permission if the user leaves the seat while displaying the setting page. To use the Auto Protect function, specify the timeout period ranging from a time the user paused operations to a time the Auto Protect page appears.
[Exit]	Exits the application. The Confirmation screen appears. Click [OK].

[Add]

Add fonts or macros to this machine.

Font/Macro settings	
Set the font/macro to add. Se	ect type, destination and the file.
For PCL font/macro, ID must	e specified.
Туре	Add PCL Font
Destination	HDD
ID	(0-32767)
	Please set the top level ID. (If not entered, it will be 1001.)
Add File	Reference

Item	Description
[Type]	Select a type of font or macro to be added.
[Destination]	Select where to save font or macro data. If data is saved in memory (RAM), it is deleted when this machine has been turned off. To continuously use font or macro data, save it in the HDD.
[ID]	Enter a font or macro ID number for PCL font or PCL macro. If it is not entered, the available ID is assigned automatically.
[Add File]	Click [Reference] to specify a font or macro file to be added to this machine.



12 Configuring Settings for User Box Functions

12.1 Configuring the environmental settings for using User Boxes

Configure environmental settings for using User Boxes.

You can configure settings for deleting unused User Boxes, deleting documents saved in User Boxes, or using external memory functions.

[Delete Unused User Box]

In the administrator mode of **PageScope Web Connection**, select [System Settings] → [User Box Setting] → [Delete Unused User Box].

Click [OK] to delete boxes containing no document.



In the administrator mode of **PageScope Web Connection**, select [System Settings] → [User Box Setting] → [Delete Secure Print File].

Click [OK] to delete documents stored in secure print User Boxes.



[Delete Time Setting]

In the administrator mode of **PageScope Web Connection**, select [System Settings] → [User Box Setting] → [Delete Time Setting].



Item	Description
[Auto Delete Secure Document]	Select this check box to specify the time before the documents stored in the Secure Print User Box are to be deleted automatically.
[Specify days]	To specify the document deletion timing by day count, select [Specify days], and specify the number of days before the documents are stored in the Secure Document User Box are to be deleted automatically.
[Specify Time]	To specify the document deletion timing by hour count, select [Specify Time], and specify the number of hours before the documents stored in the Secure Document User Box are to be deleted automatically.
[ID & Print Delete Time]	Select this check box to specify the time before the documents stored in the ID & Print User Box are to be deleted automatically. If user authentication settings are not configured, this item will not be displayed.
[Specify days]	To specify the document deletion timing by day count, select [Specify days], and specify the number of days before the documents stored in the ID & Print User Box are to be deleted automatically. If you have specified not to delete documents stored in the ID & Print User Box after they are printed, the specified deleting timing will be reset. After the spec- ified number of days has elapsed from the date of printing, the document will be deleted automatically.
[Specify Time]	To specify the document deletion timing by hour count, select [Specify Time], and specify the number of hours before the documents stored in the ID & Print User Box are to be deleted automatically. If you have specified not to delete documents stored in the ID & Print User Box after they are printed, the speci- fied deleting timing will be reset. After the specified number of hours has elapsed from the time of printing, the document will be deleted automatically.

Reference

• Specify whether to delete documents stored in the ID & Print User Box after they are printed in [ID & Print Delete Time]. For details, refer to page 12-9.

[Document Delete Time Setting]

In the administrator mode of **PageScope Web Connection**, select [System Settings] → [User Box Setting] → [Document Delete Time Setting].

	0	2
	Administrator	Logout ?
	ready to Scan	
	👔 In Menu (Admin Mode)	
System Settings 🛛 🔽 Disp	blay	🗐 To Main Menu
Machine Setting	Document Delete Time Setting	
Register Support Information	Delete Setting	ON 💌
Network TWAIN	Delete Time Setting © Do Not Delete	
▼ User Box Setting	C Specify days	1 day
▶ Delete Unused User Box	C Specify Time	min. (5-720)
▶ Delete Secure Print File	· Specify time	(min. (5-7.20)
▶ Delete Time Setting		
Document Delete Time Setting		OK Cancel
▶ Document Hold Setting		
External Memory Function Settings		
User Box Operation		
▶ ID & Print Delete Time		
Stamp Settings		
Blank Page Print Settings		
Skip Job Operation Settings		
Flash Display Setting		
System Connection Setting		
Display Setting		
► Outline PDF Setting		
outline i or optung		

Item	Description
[Delete Setting]	Select whether to specify the time to delete documents in User Boxes. Specify the deletion timing. This setting is applied to all the documents in Pub- lic User Boxes, Personal User Boxes, and Group User Boxes. Select [ON] to change the document deletion timing of the registered User Boxes for which deletion timing is specified respectively to that specified in this setting. In this case, you cannot specify the time for the user to delete a document. The document deletion timing specified in this setting is also ap- plied to newly created boxes. Only the administrator can change this setting.
[Do Not Delete]	Select this box when documents in User Boxes are not to be deleted.
[Specify days]	To specify the document deletion timing by day count, select [Specify days], and specify the number of days before the documents stored in User Boxes are to be deleted automatically. If you have specified not to delete documents stored in User Boxes after they are sent or printed, the specified deleting timing will be reset. After the speci- fied number of days has elapsed from the date of transmission or printing, the document will be deleted automatically.
[Specify Time]	To specify the document deletion timing by hour count, select [Specify Time], and specify the number of hours before the documents stored in User Boxes are to be deleted automatically. If you have specified not to delete documents stored in User Boxes after they are sent or printed, the specified deleting timing will be reset. After the speci- fied number of hours has elapsed from the date of transmission or printing, the document will be deleted automatically.

Reference

• Specify whether to delete documents stored in User Boxes after they are sent or printed in [Document Hold Setting]. For details, refer to page 12-6.

[Document Hold Setting]

In the administrator mode of **PageScope Web Connection**, select [System Settings] → [User Box Setting] → [Document Hold Setting].

	Administrator		Logout ?
			Logodi
	Ready to Scan		_
	In Menu (Admin Mode)		S
System Settings 🗸 Disp	blay		I To Main Menu
▶ Machine Setting	Document Hold Setting		
Register Support Information	Document Hold Setting	Hold	
Network TWAIN	Delete confirmation screen.	Not Specify 🖌	
▼ User Box Setting	·		
▶ Delete Unused User Box			OK Cancel
► Delete Secure Print File			
▶ Delete Time Setting			
Document Delete Time Setting			
Document Hold Setting			
External Memory Function Settings			
User Box Operation			
▶ ID & Print Delete Time			
▶ Stamp Settings			
Blank Page Print Settings			
Skip Job Operation Settings			
Flash Display Setting			
System Connection Setting			
▶ Display Setting			
Outline PDF Setting			

Item	Description
[Document Hold Set- ting]	Specify whether to automatically delete a document from a User Box after sending or printing it. When [Hold] is selected, the data of a document can be retained even after transmitting or printing the document.
[Delete confirmation screen.]	Specify whether to display the page for selecting whether to delete a docu- ment from a User Box after sending or printing it. This item is available when [Hold] is selected in [Document Hold Setting].

[External Memory Function Settings]

In the administrator mode of **PageScope Web Connection**, select [System Settings] → [User Box Setting] → [External Memory Function Settings].



Item	Description
[Save Document]	Select [ON] when sending scanned data to external memory or sending data stored in a User Box to external memory. To prevent data from being stolen, [OFF] is selected as the default setting. Change it to [ON] to enable this function.
[Print Document]	To print data in external memory, select [ON]. You can print prints only the file formats supported by this machine.
[USB to User Box]	Select [ON] when saving data stored in external memory to a User Box.

Reference

- Do not disconnect the external memory device while handling it.
- To enable [Save Document] (sending data to external memory) and [USB to User Box] (saving data stored in external memory in a User Box), you must permit the use of the function for each user. For details, refer to page 7-6.

[User Box Operation]

In the administrator mode of **PageScope Web Connection**, select [System Settings] ► [User Box Setting] ► [User Box Operation].



Item	Description
[Allow/Restrict User	Select whether to grant the User Box operation permissions to users.
Box]	Selecting [Restrict] disables users to create, edit or delete User Boxes.

[ID & Print Delete Time]

In the administrator mode of **PageScope Web Connection**, select [System Settings] → [User Box Setting] → [ID & Print Delete Time].



Item	Description
[Delete after Print]	Configure the post-print operation of documents in ID & Print User Boxes. Selecting [Confirm with User] displays a confirmation message, asking wheth- er to delete the document that has been printed. Selecting [Always Delete] automatically deletes the document after printing.

12.2 Specifying the maximum number of Public User Boxes

Specify the maximum number of Public User Boxes.

[Public User Box Setting]

In the administrator mode of **PageScope Web Connection**, select [User Auth/Account Track] **>>** [Public User Box Setting].

Ready to Scan In Menu (Admin Mode) N Public User Box Setting		💽
ay		🛃
·		E To Main Menu
Bublic Usor Box Sotting		
Fublic user box setting		
□ Set the maximum number of User		
	1000 /9 1000	
	[1000] (0-1000)	
		OK Cancel
		OK Cancel
	Boxes Maximum Number of User Boxes	Boxes

Item	Description
[Set the maximum number of User Boxes]	Select this check box to specify the maximum number of Public User Boxes.
[Maximum Number of User Boxes]	Enter the maximum number of Public User Boxes (in units of pieces).

12.3 Changing User Box settings

You can change settings of created User Boxes or delete them.

In the administrator mode, you can change the settings of a User Box or delete a User Box without entering the User Box password.

Reference

Use the user mode to handle documents in User Boxes. For details, refer to the [User's Guide Box Operations].

[Open User Box]

In the administrator mode of **PageScope Web Connection**, select [Box] >> [Open User Box], and specify the User Box to change settings.

	Ready to Scan		
	in Menu (Admin Mode)		8
Box 🔽	Display		🚛 To Main Menu
► Open User Box	User Box Number 1	User Box	box1
▶ Create User Box	Type Public	Name Owner Name	Public
▶ Open System User Box		User Box Setting	Delete User Box
Create System User Box	· -		

Item	Description
[User Box Setting]	Change the User Box settings. When PageScope Authentication Manager is used for authentication and you are logged in to the administrator mode, this item will not appear if you have selected a Personal User Box.
[Delete User Box]	Delete User Boxes. When PageScope Authentication Manager is used for authentication and you are logged in to the administrator mode, this item will not appear if you have selected a Personal User Box.

[User Box Setting]

Item	Description
[User Box Number]	Displays the User Box number.
[User Box Name]	Enter a User Box name (up to 20 characters).
[Index]	Select the indexing characters.
[Auto Delete Docu- ment]	Specify the time before documents in users boxes are deleted. Select [Do Not Delete] if you do not delete documents in User Boxes. To specify the document deletion timing by day count, select [Specify days], and specify the number of days before documents are to be deleted automat- ically. To specify the document deletion timing by hours and minutes, select [Specify Time], and specify the time before documents are to be deleted automatically. This item is available when [Delete Setting] is set to [ON] in [System Set- tings]+>[User Box Setting]+>[Document Delete Time Setting].
[User Box Expansion Function is changed.]	Select whether to add the confidential reception function to the User Box. If you add the function, enter the password (up to eight characters). This item appears when the optional Fax Kit FK-502 is installed.
[User Box Password is changed.]	To change the User Box password, select this check box and then enter the new password (up to eight characters, excluding space and double quotation (")).

Item	Description
[User Box Owner is changed.]	To change the User Box owner, select this check box and then select the User Box Type. When PageScope Authentication Manager is used for authentication and you are logged in to the administrator mode, this item will not appear if you have selected the Public User Box.

12.4 Creating new User Boxes

Enables to create a new User Box.

[Create User Box]

In the administrator mode of PageScope Web Connection, select [Box] → [Create User Box].

	& Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	C
Box 🔽 Dis	play	E To Main Menu
▶ Open User Box	Create User Box(Public/Group/P	ersonal)
Create User Box	Box is the function to save documents in Documents in the Box can be used for pri	
▶ Open System User Box	User Box Number	
Create System User Box	 Use opening number 	
	 Input directly 	(1-999999999)
	User Box Name	
	Use Box Password.	
	User Box Password	
	Retype User Box Password	
	Index	<u> </u>
	Specify a keyword for Box search an	d display by Name.
		ABC 💌
	Туре	Public 💌
	Auto Delete Document	
	O Not Delete	
	C Specify days	1 day 💙
	C Specify Time	min. (5-720)
	User Box Expansion Function	Display
		OK Cancel

Item	Description	
[User Box Number]	Specify the User Box number to be created. If you have selected [Input directly], enter the box number.	
[User Box Name]	Enter a User Box name (up to 20 characters).	
[Use Box Password.]	To use the User Box password, select this check box and then enter the pass- word (up to eight characters, excluding space and double quotation (")).	
[Index]	Select the indexing characters.	
[Туре]	Select the User Box type. If [Personal] is selected, specify the owner user name. If [Group] is selected, specify the owner account track name.	
[Auto Delete Docu- ment]	Specify the time before documents in users boxes are deleted. Select [Do Not Delete] if you do not delete documents in User Boxes. To specify the document deletion timing by day count, select [Specify days], and specify the number of days before documents are to be deleted automat- ically. To specify the document deletion timing by hours and minutes, select [Specify Time], and specify the time before documents are to be deleted automatically.	
[User Box Expansion Function]	Click [Display] to display details of the User Box expansion function. Select whether to add the confidential reception function to the User Box. If you add the function, enter the password (up to eight characters). This item appears when the optional Fax Kit FK-502 is installed.	

Reference

• You cannot register a password less than eight characters when [Security Settings] → [Security Details] → [Password Rules] is set to [Enable] in the [Administrator Settings] on the **Control Panel**. If a user password containing less than eight characters has already been registered, change the password so that it contains eight characters before setting [Password Rules] to [Enable].

12.5 Changing System User Box settings


You can change settings of created System User Boxes (Bulletin Board User Boxes, Relay User Boxes or Annotation User Boxes) or delete them.

(If the optional **Fax Kit FK-502** is installed, Bulletin Board User Boxes and Relay User Boxes can be selected.)

[Open System User Box]

In the administrator mode of **PageScope Web Connection**, select[Box] >> [Open System User Box], and specify the User Box to change settings.

(The following shows a page that is displayed when [Bulletin Board User Box] is selected)

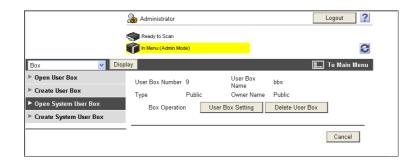

Item	Description
[User Box Setting]	Change the User Box settings. When PageScope Authentication Manager is used for authentication and you are logged in to the administrator mode, this item will not appear if you have selected a Personal User Box.
[Delete User Box]	Delete User Boxes. When PageScope Authentication Manager is used for authentication and you are logged in to the administrator mode, this item will not appear if you have selected a Personal User Box.

[User Box Setting] (When [Bulletin Board User Box] is selected)

Item	Description
[User Box Number]	Displays the User Box number.
[User Box Name]	Enter a User Box name (up to 20 characters).
[Auto Delete Docu- ment]	Specify the time before documents in users boxes are deleted. Select [Do Not Delete] if you do not delete documents in User Boxes. To specify the document deletion timing by day count, select [Specify days], and specify the number of days before documents are to be deleted automat- ically. To specify the document deletion timing by hours and minutes, select [Specify Time], and specify the time before documents are to be deleted automatically. This item is available when [Delete Setting] is set to [ON] in [System Set- tings]→[User Box Setting]→[Document Delete Time Setting].
[User Box Password is changed.]	To change the User Box password, select this check box and then enter the new password (up to eight characters, excluding space and double quotation (")).
[User Box Owner is changed.]	To change the User Box owner, select this check box and then select the User Box Type. When PageScope Authentication Manager is used for authentication and you are logged in to the administrator mode, this item will not appear if you have selected the Public User Box.

[User Box Setting] (When [Relay User Box] is selected)

Item	Description
[User Box Number]	Displays the User Box number.
[User Box Name]	Enter a User Box name (up to 20 characters).
[Relay Address]	Specify the relay address.
[Relay TX Password is changed]	To change the relay transmission password, select this check box and then enter the new password (up to eight characters).

[User Box Setting] (When [Annotation User Box] is selected)

Item	Description
[User Box Number]	Displays the User Box number.
[User Box Name]	Enter a User Box name (up to 20 characters).
[Auto Delete Docu- ment]	Specify the time before documents in users boxes are deleted. Select [Do Not Delete] if you do not delete documents in User Boxes. To print the numbers specified in the Annotation User Box without saving a document in the User Box, select [Do Not Keep]. To specify the document deletion timing by day count, select [Specify days], and specify the number of days before documents are to be deleted automat- ically. To specify the document deletion timing by hours and minutes, select [Specify Time], and specify the time before documents are to be deleted automatically.
[User Box Password is changed.]	To change the User Box password, select this check box and then enter the new password (up to eight characters, excluding space and double quotation (")).
[Change Count Up]	To change the count up, select the check box, and then select the count up. If the User Box contains documents, this item cannot be configured.
[Change Stamp Ele- ments]	To change the stamp elements, select this check box, and then specify [Pri- mary Field], [Secondary Field], [Date/Time Setting], [Print Position], [Density] and [Number Type].

12.6 Creating a new System User Box

Create new System User Boxes.

(If the optional Fax Kit FK-502 is installed, Bulletin Board User Boxes and Relay User Boxes can be created.)

[Create System User Box]

In the administrator mode of **PageScope Web Connection**, select[Box] >> [Create System User Box], and specify the System User Box to be created.

(The following shows a page that is displayed when [Bulletin Board User Box] is selected)

	& Administrator	Logout 🥐
	Ready to Scan	
	n Menu (Admin Mode)	2
Box 💌	Display	🗐 To Main Menu
▶ Open User Box	Create System User Box (Bullet	tin Board)
▶ Create User Box	User Box Number	
Open System User Box	 Use opening number 	
Create System User Box	C Input directly	(1-999999999)
-	User Box Name	
	Use Box Password.	
	User Box Password	
	Retype User Box Password	
	Туре	Public Y
	Auto Delete Document	
	O Not Delete	
	C Specify days	1 day 👻
	C Specify Time	min. (5-720)
		OK Cancel
		OK Cancer

[Bulletin Board User Box]

Item	Description
[User Box Number]	Specify the User Box number to be created. If you have selected [Input directly], enter the box number.
[User Box Name]	Enter a User Box name (up to 20 characters).
[Use Box Password.]	To use the User Box password, select this check box and then enter the password (up to 8 characters, excluding space and ").
[Туре]	Select the User Box type. If [Personal] is selected, specify the owner user name. If [Group] is selected, specify the owner account track name.
[Auto Delete Docu- ment]	Specify the time before documents in users boxes are deleted. Select [Do Not Delete] if you do not delete documents in User Boxes. To specify the document deletion timing by day count, select [Specify days], and specify the number of days before documents are to be deleted automat- ically. To specify the document deletion timing by hours and minutes, select [Specify Time], and specify the time before documents are to be deleted automatically.

[Relay User Box]

Item	Description
[User Box Number]	Specify the User Box number to be created. If you have selected [Input directly], enter the box number.
[User Box Name]	Enter a User Box name (up to 20 characters).
[Relay Address]	Specify the relay address.
[Relay TX Password]	Enter the relay TX password (up to eight characters).
[Retype Relay TX Pass- word]	Reenter the relay TX password for confirmation (up to eight characters).

[Annotation User Box]

Item	Description
[User Box Number]	Specify the User Box number to be created. If you have selected [Input directly], enter the box number.
[User Box Name]	Enter a User Box name (up to 20 characters).
[Use Box Password.]	To use the User Box password, select this check box and then enter the pass- word (up to 8 characters, excluding space and ").
[Auto Delete Docu- ment]	 Specify the time before documents in users boxes are deleted. Select [Do Not Delete] if you do not delete documents in User Boxes. To print the numbers specified in the Annotation User Box without saving a document in the User Box, select [Do Not Keep]. To specify the document deletion timing by day count, select [Specify days], and specify the number of days before documents are to be deleted automatically. To specify the document deletion timing by hours and minutes, select [Specify Time], and specify the time before documents are to be deleted automatically.
[Count Up]	Select the count up.
[Stamp Elements]	Specify [Primary Field], [Secondary Field], [Date/Time Setting], [Print Position], [Density], and [Number Type].

Reference

• You cannot register a password less than eight characters when [Security Settings]→[Security Details]→[Password Rules] is set to [Enable] in the [Administrator Settings] on the **Control Panel**. If a user password containing less than eight characters has already been registered, change the password so that it contains eight characters before setting [Password Rules] to [Enable].



13 Configuring Settings for Printer Function

13.1 Configuring initial settings for the printer function

Configure the initial settings for the printer function.

[Basic Setting]

In the administrator mode of PageScope Web Connection, select [Printer Setting] > [Basic Setting].

	Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	2
Print Setting 🛛 🔽 Disp	blay	E To Main Menu
Basic Setting	Basic Setting	
▶ PCL Setting	PDL Setting	Auto 💌
▶ PS Setting	Paper Tray	Auto 🗸
► TIFF Setting	Output Tray	Tray 2 💌
XPS Settings	2-Sided Print	OFF 🛩
► Interface Setting	Bind Direction	Left Bind 💌
Direct Print Settings	Staple	OFF 💌
	Punch	OFF 💌
Assign Account to Acquire Device Info	Number of Sets	1 (1-9999)
	- Default Paper Size	8 1/2" x 11"
	Original Direction	Portrait 💌
	Spool Print Jobs in HDD before RIP	ON 💌
	Banner Sheet Setting	OFF 💌
	Banner Sheet Paper Tray	Auto 🖌
	No Matching Paper in Tray Setting	Stop Printing(Tray Fixed)
	A4/A3<->LTR/LGR Auto Switch	OFF 💌
	Binding Direction Adjustment	Finishing Priority
	Line Width Adjustment	Thin 💌
	Gray Background Text Correction	ON 💌
	-	
		OK Cancel

Item	Description
[PDL Setting]	Select the printer definition language.
[Paper Tray]	Select the primary paper tray.
[Output Tray]	Select the primary output tray.
[2-Sided Print]	Select whether to print in the 2-sided print format.
[Bind Direction]	Select the binding position for 2-sided printing.
[Staple]	Select whether to staple printed sheets. To staple printed sheet, select the number of staples. The staple function is available only when the optional finisher is installed.
[Punch]	Select whether to punch printed sheets. To punch printed sheets, select the number of punched holes. The punch function is available only when the optional finisher and punch kit are installed.
[Number of Sets]	Enter the number of copies to be printed.
[Default Paper Size]	Select the paper size.
[Original Direction]	Select the orientation of an image to be printed.
[Spool Print Jobs in HDD before RIP]	Select whether to spool print jobs to HDD.

Item	Description	
[Banner Sheet Setting]	Select whether to print banner sheets for each print job. Printing banner sheets prevent mixing different printing materials.	
[Banner Sheet Paper Tray]	Select the primary paper tray for printing banner sheets.	
[No Matching Paper in Tray Setting]	Select the operation to be taken when there is no appropriate sized paper in the specified paper tray. Select [Switch Trays (Tray Priority)] to supply paper from a different paper tray. Select [Stop Printing (Tray Fixed)] to stop printing and display a warning mes- sage.	
[A4/A3<->LTR/LGR Auto Switch]	Converts between inch and metric units. Select whether to print an A4 (Letter)/A3 (Ledger)-sized original by full size when a paper tray containing Letter (A4)/Ledger (A3)-sized paper is selected. Selecting [ON] forces full size printing, which may cause images be defective.	
[Binding Direction Ad- justment]	Select the binding position adjustment method used for 2-sided printing.	
[Line Width Adjust- ment]	To adjust the line width so as to make thin lines and small letters easier to see, select the line breadth.	
[Gray Background Text Correction]	To adjust the line width in gray scale background so as to make thin lines and small letters easier to see, select [ON]. Selecting [OFF] applies the [Line Width Adjustment] setting in gray scale background.	

13.2 Configuring the initial settings for the PCL print function

Configure the initial settings for the PCL print function.

[PCL Setting]

In the administrator mode of PageScope Web Connection, select [Printer Setting] >>> [PCL Setting].

	& Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	E
Print Setting	play	💷 To Main Menu
▶ Basic Setting	PCL Setting	
PCL Setting	Symbol Set	PC-8, Code Page 437 🛛 👻
▶ PS Setting	Typeface	
► TIFF Setting	Resident Font	Courier
•	C Download Font	(0-999)
XPS Settings	Font Size	
Interface Setting	Scalable Font	12.00 Point (4.00-999.75)
Direct Print Settings	Bitmap Font	10.00 Pitch (0.44-99.00)
Assign Account to Acquire	Line/Page	64 (5-128)
Device Info	CR/LF Mapping	OFF 🖌
	-	
		OK Cancel

Item	Description
[Symbol Set]	Select the symbol set.
[Typeface]	Specify whether to select a font from internal fonts (resident fonts) or from downloaded fonts (download fonts) when the font being used is not specified.
[Font Size]	Specify either the font pitch or the font point size, depending on the selected typeface.
[Line/Page]	Enter the number of lines per page.
[CR/LF Mapping]	Select the CR/LF substitution method when printing text data.

13.3 Configuring the initial settings for the PS print function

Configure the initial settings for the PS print function.

[PS Setting]

In the administrator mode of PageScope Web Connection, select [Printer Setting] - [PS Setting].

	& Administrator		Logout ?
	Ready to Scan		
	👔 In Menu (Admin Mode)		3
Print Setting Vis	play		E To Main Menu
▶ Basic Setting	PS Setting		
▶ PCL Setting	PS Error Print	OFF 🛩	
▶ PS Setting			
▶ TIFF Setting	ICC Profile Settings Photo		
► XPS Settings	RGB Color	Device Color 💌	
Interface Setting	Output Profile	Auto 💌	
Direct Print Settings	Text		
Assign Account to Acquire	RGB Color	Device Color 🛩	
Device Info	Output Profile	Auto 🛩	
	Figure/Table/Graph		
	RGB Color	Device Color 🛩	
	Output Profile	Auto 🐱	
	Simulation Profile	None 💌	
	Auto Trapping	OFF 🗸	
	Black Overprint	OFF V	
			OK Cancel

Item	Description
[PS Error Print]	Select whether to print error information when an error occurs during PS ras- terization.
[ICC Profile Settings]	Configure the default profile setting to be displayed in the printer driver.
[Photo]	Select the default setting for RGB color and output profile for photographs.
[Text]	Specify the default setting of RGB color and output profile for text.
[Figure/Table/Graph]	Select the default setting for RGB color and output profile for figures, tables, and graphs.
[Simulation Profile]	Select the default setting for simulation profile.
[Auto Trapping]	Select whether to print so as to prevent white space being generated around a picture. If white lines appear at borders of colors on a graph or figure, select "ON".
[Black Overprint]	Select whether to print so as to prevent white space being generated around a black character or figure.

13.4 Configuring the initial settings for the TIFF print function

Select this option to configure how to determine the paper size when directly printing TIFF or JPEG image data.

The direct print function provides three modes: printing data using the direct print function, printing data in external memory, and printing data in a cellular phone or PDA.

[TIFF Setting]

In the administrator mode of PageScope Web Connection, select [Printer Setting] >>> [TIFF Setting].

	& Administrator	Logout ?
	neady to Scan	
	In Menu (Admin Mode)	S
Print Setting 💽 Di:	splay	💷 To Main Menu
Basic Setting	TIFF Setting	
► PCL Setting	Auto Paper Select	Auto 💌
▶ PS Setting		
► TIFF Setting		OK Cancel
► XPS Settings		
► Interface Setting		
Direct Print Settings		
Assign Account to Acquire Device Info		

Item	Description
[Auto Paper Select]	Configure how to determine the paper size when directly printing image data. [Auto]: For TIFF/JPEG (JFIF), select this option to calculate the size of the image based on its resolution and the number of pixels to print the image on paper that fits the image size. Select this option to print images on paper of the same size as the image. For JPEG (EXIF), an image is printed based on the paper size that is specified in [User Settings] of Control Panel → [Printer Settings] → [Paper Setting] → [Paper Size]. An image is enlarged or reduced to fit the paper size. [Priority Paper Size]: When printing from a cellular phone or PDA, an image is printed based on the paper size that is specified in [User Settings] of Control Panel → [Cellular Phone/PDA Setting] → [Print] → [Paper]. When using the direct print function of PageScope Web Connection or print- ing from the external memory, an image is printed based on the paper size that is specified in [User Settings] of Control Panel → [Printer Settings] → [Paper Setting] → [Paper Size]. An image is enlarged or reduced to fit the paper size.

13.5 Configuring the initial settings for the XPS print function

Configure the initial settings for the XPS print function.

[XPS Settings]

In the administrator mode of PageScope Web Connection, select [Printer Setting]
> [XPS Settings].

	-		
	Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		C
Print Setting 🛛 🔽 Dis	play		💷 To Main Menu
▶ Basic Setting	XPS Settings		
PCL Setting	Verify XPS Digital Signature	OFF 💌	
► PS Setting	Print XPS Errors	ON 💌	
► TIFF Setting			
► XPS Settings			OK Cancel
Interface Setting			
Direct Print Settings			
Assign Account to Acquire Device Info			
	-		

Item	Description
[Verify XPS Digital Sig- nature]	Select whether to verify a digital signature when printing XPS data. Selecting [ON] prevents printing data whose signature is invalid.
[Print XPS Errors]	Select whether to print an error information when the digital signature of XPS data is invalid.

13.6 Specifying the timeout of the interface

Specify the timeout for interface.

[Interface Setting]

In the administrator mode of PageScope Web Connection, select [Printer Setting] >> [Interface Setting].

	Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		3
Print Setting 🛛 🔽 Disp	lay		🚛 To Main Menu
▶ Basic Setting	Interface Setting		
► PCL Setting	Network Timeout	0sec. (10-	1000)
► PS Setting	USB Timeout	60 sec. (10-	1000)
► TIFF Setting			
XPS Settings			OK Cancel
► Interface Setting			
Direct Print Settings			
Assign Account to Acquire Device Info			
-	-		

Item	Description
[Network Timeout]	Enter the timeout of network communication.
[USB Timeout]	Enter the timeout of USB communication.

13.7 Disabling the direct print function

You can disable the direct print function of PageScope Web Connection which is enabled by default.

Direct Print Settings

In the administrator mode of PageScope Web Connection, select [Printer Setting] >>> [Direct Print Settings].

	Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		C
Print Setting 💽 Disp	lay		🚛 To Main Menu
▶ Basic Setting	Direct Print Settings		
▶ PCL Setting	PSWC Direct Print	ON 💌	
► PS Setting			
► TIFF Setting			OK Cancel
XPS Settings			
Interface Setting			
Direct Print Settings			
Assign Account to Acquire Device Info			

Item	Description	
[PSWC Direct Print]	To disable using the direct print function, select "OFF".	

13.8 Restricting users from obtaining device information using password

You can specify a password to obtain device information from the printer driver and restrict users from obtaining device information.

Reference

• For details on obtaining device information from the printer driver, refer to the User's Guide Print Operations.

[Assign Account to Acquire Device Info]

In the administrator mode of **PageScope Web Connection**, select [Printer Setting] ► [Assign Account to Acquire Device Info].



Item	Description
[Assign Account to Ac- quire Device Info]	Select [ON] when using a password to restrict users from obtaining device in- formation from the printer driver.
[Password is changed.]	Select this check box to change the password.
[Password]	Enter a password (up to 8 characters, excluding space and ").

Configuring Settings for Fax Functions


14 Configuring Settings for Fax Functions

14.1 Configuring Settings to Print a Stamp when Sending a Fax

You can specify whether to cancel stamp setting when sending a fax.

[Fax TX Settings]

In the administrator mode of **PageScope Web Connection**, select [System Settings] **>** [Stamp Settings] **>** [Fax TX Settings].

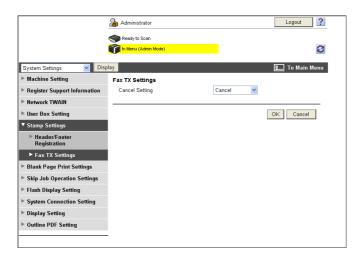

Item	Description
[Cancel Setting]	Specify whether to cancel stamp setting when sending a fax. Selecting [Cancel] sends faxes without printing the stamp on the originals.

14.2 Configuring Settings to Print the Header/Footer Position

Configure settings to print sender and reception information.

[Header/Footer Position]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ► [Header/Footer Position].

	& Administrator	Logout 🤶
	Ready to Scan	
	In Menu (Admin Mode)	3
Fax Settings 🛛 🔽 🚺	Display	E To Main Menu
Header/Footer Position	Header/Footer Position	
Line Parameter Setting	Header Position	Outside Body Text 👻
► TX/RX Settings	Print Receiver's Name	ON 💌
Function Setting	Footer Position	OFF 🔽
PBX Connection Setting		
Report Settings		OK Cancel
Multi Line Settings		
Network Fax Setting		
Header Information		

Item	Description
[Header Position]	Specify the position of the sender information to be added on a fax document sent from this machine. The added sender information is printed as a part of the image on the document received by the recipient. If you select [OFF], the sender information will not be added. [OFF] is not displayed for Hong Kong or USA models.
[Print Receiver's Name] [*]	Specify the items to be added as the sender information. If you select [ON], sender name, destination fax number (To: xxxx), transmission start date and time, transmission number, and the number of pages are added as the sender information. If you select [OFF], sender name, fax ID of this machine, transmission start date and time, transmission number, and the number of pages are added as the sender information.
[Footer Position]	Specify the position of the reception information (reception time and reception number) to be printed on a fax document received by this machine. If you select [OFF], the reception information will not be printed.

* This item is not displayed for Hong Kong or USA models.

14.3 Configuring settings for telephone and fax lines

Configure settings related to telephone and fax lines including the telephone dialing method, fax receive mode, and number of incoming calls.

[Line Parameter Setting]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] >>> [Line Parameter Setting].

	Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		3
Fax Settings	Display		I To Main Menu
Header/Footer Position	Line Parameter Setting		
Line Parameter Setting	Dialing Method	РВ 💌	
► TX/RX Settings	Receive Mode	Auto RX	
Function Setting	Number of RX Call Rings	2 x (0-15)	
PBX Connection Setting	Number of Redials	1 × (0-7)	
Report Settings	Redial Interval	3 min. (1-15)	
► Multi Line Settings	Line Monitor Sound	OFF 💌	
Network Fax Setting	Line Monitor Sound Vol.	16 (0-31)	
Header Information			
r fieader mormadon			OK Cancel

Item	Description
[Dialing Method]	Select a dialing method. Incorrect configuration of the dialing method may hamper a successful phone call.
[Receive Mode]	Select a receive mode. If you select [Auto RX], faxes are received automatically. If you expect frequent phone calls, for example if an external telephone is con- nected to this machine, set this mode to [Manual RX].
[Number of RX Call Rings]	Specify the number of quasi-ring back tone count between fax arrival and the start of reception.
[Number of Redials]	Specify the number of automatic redials when this machine cannot connect to the destination because the line is busy.
[Redial Interval]	Specify the interval of redials for automatic redialing.
[TEL/FAX Auto Switch]	Specify whether to automatically switch telephone and fax when an external telephone is connected to this machine. This item is displayed for Taiwan models.
[External Phone Moni- tor Call Sound]	Specify whether to output the telephone calling monitor sound from this ma- chine when an external telephone is connected to this machine. This item is available when the [TEL/FAX Auto Switch] check box is selected.
[External Phone Call Time]	Specify the period from the time an incoming call is received to the time when an external telephone is called when an external telephone is connected to this machine. This item is available when the [TEL/FAX Auto Switch] check box is selected.
[Line Monitor Sound]	Specify whether to hear the line sound from the speaker during communica- tion.
[Line Monitor Sound Vol.]	Specify the speaker volume.

14.4 Configuring settings to send or receive faxes

Configure settings related to transmission and reception of faxes including file handling at the time of a polling transmission and printing method at the time of reception of a fax.

[TX/RX Settings]

In the administrator mode of PageScope Web Connection, select [Fax Settings]

[TX/RX Settings].

	🌆 Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	2
Fax Settings 🛛 🔽 Dis	splay	E To Main Menu
Header/Footer Position	TX/RX Settings	
Line Parameter Setting	Duplex Print (RX)	OFF 💌
► TX/RX Settings	Letter/Ledger over A4/A3	ON 💌
▶ Function Setting	Print Paper Selection	Auto Select 👻
PBX Connection Setting	Print Paper Size	8.5x11 💌
Report Settings	Incorrect User Box No. Entry	Print 💌
	RX from Rejected Fax No.	Disconnect 🗸
Multi Line Settings	Tray Selection for RX Print	Auto 💌
Network Fax Setting	Min. Reduction for RX Print	96% 🖌
Header Information	Print Separate Fax Pages	OFF 💌
	 File After Polling TX 	Delete 💙
	No. of Sets (RX)	1 set. (1-10)
	Individual Receiving Line Setup	ON 💌
	Individual Sender Line Setup	ON Y
		OK Cancel
		OK Caliber

Item	Description
[Duplex Print (RX)]	Select whether to print a received fax on both side of sheets. This item is not available when [Print Separate Fax Pages] is set to [ON].
[Letter/Ledger over A4/A3]	Specify whether to use paper in inch-sized paper first when printing received faxes. This item is not displayed for Taiwan models.
[Print Paper Selection]	Select the priority order of paper trays used to print received faxes. If you select [Priority Size], received faxes are printed on paper of the priori- tized size. If the prioritized size is not specified, received faxes are printed on paper of the nearest size. If you select [Fixed Size], received faxes are printed on paper of only the spec- ified size. If [Tray Selection for RX Print] is set to other than [Auto], this item will be set to [Auto Select].
[Print Paper Size]	Select the size of paper used to print received faxes.
[Incorrect User Box No. Entry]	Select an action to be taken when the unregistered User Box number is spec- ified when a fax is received by using User Boxes.
[RX from Rejected Fax No.]	This item is not available.
[Tray Selection for RX Print]	If you want to fix the paper tray used to print received faxes, select the paper tray to be fixed. If [Print Paper Selection] is set to other than [Auto Select], this item will be set to [Auto].
[Min. Reduction for RX Print]	Specify a reduction ratio of received faxes. When a received fax does not fit within the standard paper size, this setting is used to adjust the size.
[Print Separate Fax Pages]	Select whether to divide a received fax into two or more pages when the doc- ument is larger than the standard paper size. This item is not available when [Duplex Print (RX)] is set to [ON].
[File After Polling TX]	Specify whether to delete a file after completing polling transmission of the file.
[No. of Sets (RX)]	If you need two or more sets of a received fax, specify the number of sets.

Item	Description
[Individual Receiving Line Setup]	Specify whether to receive a fax for each line. This item is available when two optional Fax Kit FK-502 are installed. This item is not displayed when [Line 2 Setting] is set to [TX Only] in [Multi Line Settings].
[Individual Sender Line Setup]	Specify whether to register sender information for each line. This item is available when two optional Fax Kit FK-502 are installed. This item is not displayed when [Line 2 Setting] is set to [RX Only] in [Multi Line Settings].

14.5 Configuring settings for the fax functions

Configure settings to use fax functions.

[Function ON/OFF Setting]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] → [Function Setting] → [Function ON/OFF Setting].

	0		2
	Administrator		Logout ?
	Ready to Scan		
	📦 In Menu (Admin Mode)		3
Fax Settings 🛛 🔽 Disp	lay		E To Main Menu
Header/Footer Position	Function ON/OFF Setting		
Line Parameter Setting	F-Code TX	ON 💌	
► TX/RX Settings	Relay RX	ON 🔽	
▼ Function Setting	Relay Printing	OFF 🔽	
Function ON/OFF Setting	Destination Check Display Function	OFF 🔽	
Memory RX Setting	Confirm Address (TX)	OFF 🔽	
Closed Network RX	Confirm Address (Register)	OFF 🚩	
Forward TX Setting			
Incomplete TX Hold			OK Cancel
▶ PC-Fax RX Setting			
TSI User Box Settings			
TSI User Box Registration			
PBX Connection Setting			
Report Settings			
Multi Line Settings			
Network Fax Setting			
Header Information			
	-		

Item	Description
[F-Code TX]	Select whether to use the F-code transmission function. This function sends documents to a specific User Box of a remote machine by entering the SUB address and the sender ID. To use the F-Code for transmis- sion, the remote machine must support the F-Code function.
[Relay RX]	Select whether to use this machine as a relay distribution station. A relay distribution station broadcasts documents received from a relay in- struction station to the relay distribution destinations. To use the relay distribution function, you must register a relay User Box.
[Relay Printing]	Specify whether to print relayed documents after the relay distribution.
[Destination Check Dis- play Function]	Select whether to display the list of the specified destinations when sending a fax.
[Number Display Func- tion]	This item is not available.
[Name Display Func- tion]	This item is not available.
[Confirm Address (TX)]	Specify whether to require re-entry of a fax destination for confirmation pur- poses when the user specifies the destination by directly entering the fax number. By having the user enter it twice, you can prevent the destination from being incorrectly entered.
[Confirm Address (Reg- ister)]	Specify whether to require re-entry of a fax destination for confirmation pur- poses when adding the destination with the address book. By having the user enter it twice, you can prevent the destination from being incorrectly entered and registered.

[Memory RX Setting]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] → [Function Setting] → [Memory RX Setting].

Reference

• The Memory RX function stores received documents in the Memory RX User Box, and prints them when required.

	Administrator		Logout ?
	Ready to Scan		
	In Menu (Admin Mode)		8
Fax Settings 🗸 Disp	ulav.		I To Main Menu
Header/Footer Position	Memory RX Setting		
Line Parameter Setting	Fax Line 1	ON 💌	
► TX/RX Settings	Fax Line 2	OFF 🛩	
▼ Function Setting	Password is changed.		
Function ON/OFF Setting	Memory RX User Box Password		
Memory RX Setting			
Closed Network RX			OK Cancel
Forward TX Setting			
Incomplete TX Hold			
PC-Fax RX Setting			
TSI User Box Settings			
TSI User Box Registration			
PBX Connection Setting			
Report Settings			
▶ Multi Line Settings			
Network Fax Setting			
Header Information			
	-		

Item	Description
[Fax Line 1]	Select whether to perform the forced memory reception via fax line 1. This item is available when two optional Fax Kit FK-502 are installed while [In- dividual Receiving Line Setup] is set to [ON] in [TX/RX Settings].
[Fax Line 2]	Select whether to perform the forced memory reception via fax line 2. This item is available when two optional Fax Kit FK-502 are installed while [In- dividual Receiving Line Setup] is set to [ON] in [TX/RX Settings].
[Password is changed.]	Select this check box to change the password.
[Memory RX User Box Password]	Enter the password for the Memory RX User Box (up to eight characters).

[Closed Network RX]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] → [Function Setting] → [Closed Network RX].

Reference

• The Closed area Rx function accepts only transmissions from recipient machines with a matching password. It is available only when the remote machine is one of our models and supports the closed network reception (with password) function.

	Administrator	Logout ?
	Ready to Scan	
	n Menu (Admin Mode)	3
Fax Settings 🛛 🔽 Disp	lay	🚛 To Main Menu
Header/Footer Position	Closed Network RX	
Line Parameter Setting	Password is changed.	
► TX/RX Settings	Closed Network RX Password	
▼ Function Setting		
Function ON/OFF Setting		OK Cancel
Memory RX Setting		
Closed Network RX		
Forward TX Setting		
Incomplete TX Hold		
▶ PC-Fax RX Setting		
TSI User Box Settings		
TSI User Box Registration		
PBX Connection Setting		
Report Settings		
Multi Line Settings		
Network Fax Setting		
Header Information		

Item	Description
[Password is changed.]	Select this check box to change the password.
[Closed Network RX Password]	Enter the password for the closed network reception (four digits).

[Forward TX Setting]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] → [Function Setting] → [Forward TX Setting].

Reference

- The Forward TX function transfers the received document to a pre-specified destination.
- This function cannot be configured together with [PC-Fax RX Setting], [TSI User Box Settings], or [Memory RX Setting].
- The Forward TX Setting can be configured for each line when receiving faxes for each line (two optional **Fax Kit FK-502** are installed while [Individual Receiving Line Setup] is set to [ON] in [TX/RX Settings]).

	Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	•
Fax Settings 🔽 Disp	lay	To Main Menu
Header/Footer Position	Forward TX Setting(Fax Line 1)	
▶ Line Parameter Setting	Fax Forwarding Settings	
► TX/RX Settings	Output Method	Forward & Print
▼ Function Setting	Forward Dest.	
	Select from Address Book	
Function ON/OFF Setting		Search from List
Memory RX Setting		V
Closed Network RX		Registered Address Number
► Forward TX Setting		Check Destination
▶ Incomplete TX Hold	C Select from Group	
▶ PC Fax RX Setting		Search from List
► TSI User Box Settings		Registered Address Number
TSI User Box Registration		Check Destination
	C Direct Input	
PBX Connection Setting	Forwarding Destination	
Report Settings	T of warding Destination	(Numeric characters, #, *, -, T, P)
Multi Line Settings	Line Setting	No Selection
Network Fax Setting		
► Header Information		
		OK Cancel

Item	Description
[Forward TX Setting]	Specify whether to use the forward transmission function.
[Output Method]	Select an output function. If [Forward & Print] is selected, received faxes are forwarded and printed on this machine. If [Forward & Print (If TX Fails)] is selected, received faxes are printed on this machine only when they cannot be forwarded.
[Forward Dest.]	Specify the forward destination of received faxes. Specify the destination using one of the three methods: [Select from Address Book], [Select from Group], and [Direct Input].
[Line Setting]	If two Fax Kit FK-502 are installed, specify the line used to forward received faxes.

[Incomplete TX Hold]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] → [Function Setting] → [Incomplete TX Hold].

Reference

• The Fax Retransmit function temporarily saves documents, which were not sent within the specified number of times for attempts to send, in the fax retransmit User Box. You can use this function to open the fax retransmit User Box later to manually redial.

	& Administrator		Logout ?
	Ready to Scan		
	in Menu (Admin Mode)		3
Fax Settings 🛛 🔽 Dis	play		E To Main Menu
Header/Footer Position	incomplete TX Hold		
Line Parameter Setting	Incomplete TX Hold		
► TX/RX Settings	File Storage Duration	12 🕶 Hour	
▼ Function Setting			
Function ON/OFF Setting			OK Cancel
Memory RX Setting			
Closed Network RX			
Forward TX Setting			
Incomplete TX Hold			
▶ PC-Fax RX Setting			
TSI User Box Settings			
TSI User Box Registration			
PBX Connection Setting			
Report Settings			
Multi Line Settings			
Network Fax Setting			
··· network i ux setting			

Item	Description
[Incomplete TX Hold]	Specify whether to temporarily retain the fax that even the auto-redialing func- tion has failed to send for such reasons as a communications error or the re- cipient machine being busy, in the Fax Retransmit User Box.
[File Storage Duration]	Specify a duration to retain the file.

[PC-Fax RX Setting]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] → [Function Setting] → [PC-Fax RX Setting].

Reference

- The PC-Fax RX function saves a document received as a fax in a User Box of this machine. You can print and send saved data. Data is saved in the Memory RX User Box or a specified User Box.
- This function cannot be configured together with [TSI User Box Settings], [Forward TX Setting], or [Memory RX Setting].
- The PC-Fax RX setting can be configured for each line when receiving faxes for each line (two optional **Fax Kit FK-502** are installed while [Individual Receiving Line Setup] is set to [ON] in [TX/RX Settings]).

Administrator Logout Peadet/Footer Position Peadet/Footer Position PC-Fax RX Setting(Fax Line 1) PC-Fax RX Setting(Sax Close 1) PC-Fax RX Setting PC-Fax RX Setting PC-Fax RX Setting PC-Fax RX Setting			
Fax Settings Display Header/Footer Position Header/Footer Position Header/Footer Sotting TX/XX Sottings Function ON/OFF Setting Function ON/OFF Setting Memory RX Setting Forward TX Setting Incomplete TX Hold PCFax RX Setting Insomplete TX Hold PCFax RX Setting Stil User Box Settings TSI User Box Settings PBX Connection Settings Multi Line Settings Nutli Line Settings Network Fax Setting		& Administrator	Logout ?
Fax Settings Display Fax Settings Header/Footer Position Line Parameter Setting TX/RX Settings Function Setting Function Setting Memory RX Setting Function Setting Closed Network RX Forward TX Setting Incomplete TX Hold PC-Fax RX Setting Incomplete TX Hold PCFax RX Setting TSI User Box Settings TSI User Box Registration PBX Connection Settings Multi Line Settings Network Fax Setting		Ready to Scan	
▶ Heade/Footer Position ▶ Line Parameter Setting ▶ TX/RX Settings ▶ Function Ok/OFF Setting ▶ Function Ok/OFF Setting ▶ Memory RX Setting ▶ Memory RX Setting ▶ Memory RX Setting ▶ Memory RX Setting ▶ Closed Network RX ▶ Incomplete TX Hold ▶ PC-Fax RX Setting ▶ TSI User Box Settings ▶ TSI User Box Settings ▶ TSI User Box Settings ▶ Multi Line Settings ▶ Network Fax Setting		n Menu (Admin Mode)	C
 Line Parameter Setting TX/RX Settings Function ON/OFF Setting Function ON/OFF Setting Porward TX Setting Closed Network RX Forward TX Setting Incomplete TX Hold PC-Fax RX Setting TSI User Box Settings TSI User Box Settings Multi Line Settings Network Fax Setting 	Fax Settings 🔽 Dis	play	🚛 To Main Menu
 TX/RX Settings Function Setting Function ON/OFF Setting Memory RX Setting Closed Network RX Forward TX Setting Incomplete TX Hold PCFax RX Setting TSI User Box Settings TSI User Box Registration PBX Connection Setting Network Fax Setting 	► Header/Footer Position	PC-Fax RX Setting(Fax Line 1)	
Function Stitling Function SNOFF Setting Function SNOFF Setting Memory RX Setting Closed Network RX Forward TX Setting Incomplete TX Hold PCF-ax RX Setting TSI User Box Registration PBX Connection Settings Multi Line Settings Network Fax Setting	Line Parameter Setting	PC-Fax RX Setting	Allow 💌
 Function ON/OFF Setting Memory RX Setting Closed Network RX Forward TX Setting Incomplete TX Hold PCFast RX Setting TSI User Box Registration PBX Connection Setting Report Settings Multi Line Settings Network Fas Setting 	► TX/RX Settings	Receiving User Box Destination	Memory RX User Box 💌
 Function ON/OFF Setting Memory RX Setting Closed Network RX Forward TX Setting Incomplete TX Hold PCFax RX Setting TSI User Box Settings TSI User Box Registration PBX Connection Setting Report Settings Multi Line Settings Network Fax Setting 	▼ Function Setting	Print	ON 🗸
 Memory RX Setting (one-byte numeric, W, *) Closed Network RX Forward TX Setting Incomplete TX Hold PC-Fax RX Setting TSI User Box Settings TSI User Box Registration PBX Connection Setting Report Settings Multi Line Settings Network Fax Setting 	Function ON/OFF Setting		
Closed Network RX Forward TX Setting Not Cancel Cancel Contemposition PCF-ax RX Setting TSI User Box Settings PGX Connection Setting Report Settings Multi Line Settings Network Fax Setting	Memory RX Setting	Communication Password	
Incomplete TX Hold Cancel Can			(one-byte numeric, #, *)
 Incomplete TX Hold PC-Fax RX Setting TSI User Box Registration PBX Connection Setting Report Settings Multi Line Settings Network Fax Setting 	► Forward TX Setting		OK Cancel
 TSI User Box Settings TSI User Box Registration PBX Connection Setting Report Settings Multi Line Settings Network Fax Setting 	Incomplete TX Hold		
 TSI User Box Registration PBX Connection Setting Report Settings Multi Line Settings Network Fax Setting 	▶ PC-Fax RX Setting		
 PBX Connection Setting Report Settings Multi Line Settings Network Fax Setting 	TSI User Box Settings		
 ▶ Report Settings ▶ Multi Line Settings ▶ Network Fax Setting 	TSI User Box Registration		
► Multi Line Settings ► Network Fax Setting	PBX Connection Setting		
▶ Network Fax Setting	Report Settings		
	Multi Line Settings		
► Header Information	Retwork Fax Setting		
	Header Information		
		_	

Item	Description
[PC-Fax RX Setting]	Specify whether to permit receiving PC-FAX.
[Receiving User Box Destination]	Select a receiving User Box destination of PC-FAX.
[Print]	Specify whether to print received faxes after completing the reception.
[Password Check]	Select this check box to check the password.
[Communication Pass- word]	Enter the communication password. (up to eight characters)



In the administrator mode of **PageScope Web Connection**, select [Fax Settings] → [Function Setting] → [TSI User Box Settings].

Reference

- The TSI distribution function automatically distributes the document received with the sender fax number (TSI) to the forwarding destination specified for each sender.
- This function cannot be configured together with [PC-Fax RX Setting], [Forward TX Setting], or [Memory RX Setting].
- The TSI User Box Setting can be configured for each line when receiving faxes for each line (two optional **Fax Kit FK-502** are installed while [Individual Receiving Line Setup] is set to [ON] in [TX/RX Settings]).

	& Administrator	Logout 🤶
	Ready to Scan	
	n Menu (Admin Mode)	3
Fax Settings 🛛 🔽 Dis	play	E To Main Menu
Header/Footer Position	TSI User Box Settings(Fax Line 1)	
▶ Line Parameter Setting	I TSI User Box Setting	
► TX/RX Settings	Action when TSI User Box is not set.	
▼ Function Setting	Print	OFF 💌
Function ON/OFF Setting		
Memory RX Setting		OK Cancel
Closed Network RX		
► Forward TX Setting		
► Incomplete TX Hold		
▶ PC-Fax RX Setting		
► TSI User Box Settings		
TSI User Box Registration		
► PBX Connection Setting		
► Report Settings		
▶ Multi Line Settings		
Retwork Fax Setting		
▶ Header Information		
	_	

Item	Description
[TSI User Box Setting]	Select whether to enable the TSI distribution. This function distributes received faxes to each phone number based on the TSI (telephone numbers information) of the fax transmitter.
[Action when TSI User Box is not set.]	Select an action to be taken when receiving unregistered TSI information. If you select [Automatically Print], the received document is printed. If you select [Memory RX User Box], the received document is saved in the Memory RX User Box. If you select [Specified User Box] and specify a User Box in [Select from User Box No.], the received document is saved in the specified user box. For the destination User Box, a Public, Personal, or Group User Box can be specified.
[Print]	Specify whether to print received faxes after completing the reception.

[TSI User Box Registration]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] ►> [Function Settings] ►> [TSI User Box Registration] ►> [Create].

Reference

• The forwarding destinations can be registered for each line when receiving faxes for each line (two optional **Fax Kit FK-502** are installed while [Individual Receiving Line Setup] is set to [ON] in [TX/RX Settings]).

Ready to Scan In Menu (Admin Mode) Y TSI User Box Registration(Fax Li No. Sender (TSI) Forwarding Destination © Select from Address Book	To Main Menu Ine 1) (Numeric characters, #, *, -, T, P) Search from List Registered Address Number Check Destination
y TSI User Box Registration(Fax Li No. Sender (TSI) Forwarding Destination	Ine 1) I (Numeric characters, #, *, -, T, P) Search from List Registered Address Number
TSI User Box Registration(Fax Li No. Sender (TSI) Forwarding Destination	Ine 1) I (Numeric characters, #, *, -, T, P) Search from List Registered Address Number
No. Sender (TSI) Forwarding Destination	(Numeric characters, #, *, -, T, P)
Sender (TSI) Forwarding Destination	Search from List Registered Address Number
Forwarding Destination	Search from List Registered Address Number
•	Search from List Registered Address Number
•	Registered Address Number
	Registered Address Number
	-
	-
001.14	Check Destination
C Select from Group	
	Search from List
	Registered Address Number
	Check Destination
C Select from User Box No.	
	Search from List
	▼
	Registered Box Number

Item	Description
[No.]	Displays the registration number.
[Sender (TSI)]	Enter the fax ID of the sender (TSI: telephone numbers information).
[Forwarding Destina- tion]	Specify forwarding destinations for each TSI. Specify the destination using one of the three methods: [Select from Address Book], [Select from Group], and [Select from User Box No.].

14.6 Configuring Settings for PBX Connection

Configure settings for PBX connection.

[PBX Connection Setting]

In the administrator mode of **PageScope Web Connection**, select [Fax Settings] **>>** [PBX Connection Setting].

	& Administrator	Logout ?
	Ready to Scan	
	In Menu (Admin Mode)	2
Fax Settings 🛛 🔽 Dis	play	💷 To Main Menu
Header/Footer Position	PBX Connection Setting	
Line Parameter Setting	PBX Connection Setting	
TX/RX Settings	Outside Line	(0-9999)
* Function Setting		
PBX Connection Setting		OK Cancel
Report Settings		
Multi Line Settings		
Network Fax Setting		
Header Information		
	_	

Item	Description
[PBX Connection Set- ting]	Select this check box when you connect this machine to a PBX line.
[Outside Line]	Enter the outside line number. When a fax number registered in the address book or a program destination is specified as an outside line, the outside line number specified in this setting is dialed prior to the fax number.

14.7 Configuring Settings to Output Fax Reports

i.

Configure settings to output fax reports.

[Report Settings]

In the administrator mode of PageScope Web Connection, select [Fax Settings] >>> [Report Settings].

	ゐ Administrator		Logout ?
	Ready to Scan		
	📦 In Menu (Admin Mode)		3
Fax Settings 🛛 🔽 🛛	Display		🚛 To Main Menu
Header/Footer Position	Report Settings		
Line Parameter Setting	Activity Report	Every 100 Comm. 💌	
► TX/RX Settings	Output Time Settings		
Function Setting	Hour	9	
PBX Connection Setting	Minute	0	
 Report Settings 	TX Result Report	lf TX Fails 💌	
	Sequential TX Report	ON 💌	
Multi Line Settings	Timer Reservation TX Report	ON 💌	
Network Fax Setting	Confidential Rx Report	ON 💌	
Header Information	Bulletin TX Report	ON 💌	
		ON 💌	
	Relay Request Report	ON 💌	
	PC-Fax TX Error Report	OFF 🚩	
	Broadcast Result Report	All Destinations 🛛 👻	
	TX Result Report Check	Not Specify 🔽	
	Remark Column Print Setup	Normal Printing 🗠	
	Network Fax RX Error Report	ON 💌	
	MDN Message	ON 💌	
	DSN Message	OFF 🛩	
	Print E-mail Message Body	Print 💌	
		[OK Cancel

Item	Description			
[Activity Report]	Select the output method of activity reports.			
[Output Time Settings]	When you set the output timing of activity reports to [Daily] or [100/ Daily], specify the report output time.			
[TX Result Report]	Select the output conditions for transmission result reports.			
[Sequential TX Report]	Specify whether to print sequential transmission reports.			
[Timer Reservation TX Report]	Specify whether to print timer reservation transmission reports.			
[Confidential Rx Re- port]	Specify whether to print confidential reception reports.			
[Bulletin TX Report]	Specify whether to print Bulletin transmission reports.			
[Relay TX Result Re- port]	Specify whether to print relay transmission result reports.			
[Relay Request Report]	Specify whether to print relay request reception reports.			
[PC-Fax TX Error Report]	Specify whether to print PC-FAX transmission error reports.			
[Broadcast Result Re- port]	Select the output method of broadcast result reports.			
[TX Result Report Check]	Specify whether to view the transmission result report check pages.			

Item	Description
Remark Column Print Setup	Configure settings to print remarks for activity reports. If you select [Normal Printing], the line status or sending setting will be printed. If User Authentication or Account Track is not enabled, the mode is set to [Nor- mal Printing]. If you select [User Name Printing], the user name will be printed. This item is available when User Authentication is enabled. If you select [Account Name Printing], the account name will be printed. This item is available when Account Track is enabled.
[Network Fax RX Error Report]	Specify whether to print reception error reports when using the network fax function.
[MDN Message]	Specify whether to print a report when receiving the response to a MDN request.
[DSN Message]	Specify whether to print a report when receiving the response to a DSN request.
[Print E-mail Message Body]	Specify whether to print the message body of an E-mail message received successfully.

If two Fax Kit FK-502 are installed, configure settings for the second line.

[Multi Line Settings]

In the administrator mode of PageScope Web Connection, select [Fax Settings] - [Multi Line Settings].

Fax Settings Display Fax Settings Display I header/Footer Position Multi Line Settings PBX Connection Setting Patron Settings Potron Setting Potron Setting <th></th> <th>🌆 Administrator</th> <th>Logout ?</th>		🌆 Administrator	Logout ?
Fax Settings Display Im To Main Menu Header/Footer Position Im Parameter Setting Im Parameter Setting Line Parameter Setting Dialing Method PB TX/RX Settings Number of RX Call Rings 2 x (0-15) PBX Connection Setting PC-FAX TX Setting No Selection Im Parameter Setting Multi Line Settings PC-FAX TX Setting No Selection Im Parameter Setting Network Fax Setting Im Poisplay Function Name Display Function Name Display Function Name Display Function Name Display Function Sender Fax No. Im 2 Setting Ime 2 Setting TX and RX Im 2 Setting		Ready to Scan	
Header/Footer Position Multi Line Settings Line Parameter Setting Dialing Method TX/RX Settings Dialing Method Function Setting Number of RX Call Rings PBX Connection Setting Line Monitor Sound PBX Connection Settings Function Setting Number of RX Call Rings Q		In Menu (Admin Mode)	3
Line Parameter Setting Line Parameter Setting TX/RX Settings Line Parameter Setting Function Setting Number of RX Call Rings PBX Connection Setting Line Monitor Sound PBX Connection Setting Function Setting Number of RX Call Rings Q	Fax Settings 🛛 🔽 Di	splay	🗐 To Main Menu
Image: Construction Setting Dialing Method PB Function Setting Number of RX Call Rings 2 x (0-15) Ine Monitor Sound OF PBX Connection Setting Function Setting Report Settings PC-FAX TX Setting No Selection Multi Line Settings Image: Number Display Function Network Fax Setting Name Display Function Multi Line Usage Setting Line 2 Setting Line 2 Setting TX and RX Sender Fax No. (Numeric characters, space, +)	Header/Footer Position	Multi Line Settings	
▶ TX/RX Settings Number of RX Call Rings 2 x (0.15) ▶ PBX Connection Setting Line Monitor Sound 0FF ♥ ▶ PBX Connection Settings PC-FAX TX Setting No Selection ♥ ▶ Multi Line Settings Image: Number Display Function Name Display Function ▶ Network Fax Setting Multi Line Usage Setting Line 2 Setting ▶ Header Information X and RX ♥ Sender Fax No.	Line Parameter Setting	Line Parameter Setting	
▶ Function Setting Number of RX Call Rings 2 x (0-15) ▶ PBX Connection Setting Function Setting PF ♥ ▶ Report Settings PC-FAX TX Setting No Selection ♥ ▶ Multi Line Settings Image: Number Display Function Name Display Function ▶ Network Fax Setting Multi Line Usage Setting Line 2 Setting ▶ Header Information Sender Fax No. (Numeric characters, space, +)	► TX/RX Settings	Dialing Method	PB 🔽
▶ PBX Connection Setting Line Monitor Sound OFF ▼ ▶ Report Settings Function Setting No Selection ▼ ▶ Multi Line Settings	0	Number of RX Call Rings	2 x (0-15)
Report Settings PC-FAX TX Setting No Selection Multi Line Settings Image: Number Display Function Network Fax Setting Name Display Function Header Information Multi Line Usage Setting Line 2 Setting TX and RX Sender Fax No. (Numeric characters, space, +)	3	Line Monitor Sound	OFF 💌
▶ Multi Line Settings Image: Number Display Function ▶ Network Fax Setting Name Display Function ▶ Header Information Multi Line Usage Setting Line 2 Setting TX and RX ♥ Sender Fax No. (Numeric characters, space, +)	Ū.	Function Setting	
Network Fax Setting Name Display Function Display Number Header Information Multi Line Usage Setting Line 2 Setting TX and RX Sender Fax No. (Numeric characters, space, +)	Report Settings	PC-FAX TX Setting	No Selection 💌
Multi Line Usage Setting Line 2 Setting Sender Fax No. (Numeric characters, space, +)	Multi Line Settings	Number Display Function	
► Header Information Line 2 Setting TX and RX Sender Fax No. (Numeric characters, space, +)	▶ Network Fax Setting	Name Display Function	Display Number 👻
Line 2 Setting TX and RX V Sender Fax No. (Numeric characters, space, +)	Header Information	Multi Line Usage Setting	
(Numeric characters, space, +)		Line 2 Setting	TX and RX 💌
		Sender Fax No.	
OK Cancel			(Numeric characters, space, +)
OK Cancel			
			OK Cancel

Item	Description
[Line Parameter Set- ting]	Configure line parameters for the extension line.
[Dialing Method]	Select a dialing method for the extension line.
[Number of RX Call Rings]	Specify the number of quasi-ring back tone count between fax arrival and the start of reception.
[Line Monitor Sound]	Specify whether to hear the line sound from the speaker during communica- tion.
[Function Setting]	Configure settings for the extension line function.
[PC-FAX TX Setting]	Select the line used for PC-FAX transmission.
[Number Display Func- tion]	This item is not available.
[Name Display Func- tion]	This item is not available.
[Multi Line Usage Set- ting]	Configure the operation settings of Line 2 (an extension line).
[Line 2 Setting]	Specify the communication method for Line 2 (an extension line). You can specify [TX Only], [RX Only], or [TX and RX] for an extension line.
[Sender Fax No.]	Enter the fax ID (up to 20 characters, including + and space). Usually enter the fax number of the fax machine. The registered fax number is printed as the sender information on the fax re- ceived by the recipient.

14.9 Registering the Sender Name and Fax ID

You can register the sender name and fax ID of this machine.

Reference

• The sender name can be registered for each line when registering sender information for each line (two optional **Fax Kit FK-502** are installed while [Individual Sender Line Setup] is set to [ON] in [TX/RX Settings]).

[Header Information]

In the administrator mode of PageScope Web Connection, select [Fax Settings] >>> [Header Information].

	<u>م </u>	dministr	ator		Lo	gout
	S F	Ready to S	can			
	In Menu (Admin Mode)					
Fax Settings 🛛 💌 🚺	Display				E T	o Main Me
Header/Footer Position	Sen	der Fax	No.			
Line Parameter Setting	Se	ender Fa	x No.			
TX/RX Settings	-					
▶ Function Setting	TTIL	_ist . Line 1	1 : 2	Sender Name	Edit	Delete
PBX Connection Setting	1	C C	C C	Senuel Name	Edit	Delete
Report Settings	2	C	C		Edit	Delete
Multi Line Settings	3	0	C		Edit	Delete
Network Fax Setting	4	0	0		Edit	Delete
Header Information	5	0	0		Edit	Delete
		6	6		Edit	Delete
	7	6	6		Edit	Delete
	8	6	6		Edit	Delete
	9	0	0		Edit	Delete
	10	0	0		Edit	Delete
	11	0	0		Edit	Delete
	12	0	0			
		0	6		Edit	Delete
	13				Edit	Delete
	14	•	•		Edit	Delete
	15	0	•		Edit	Delete
	16	•	•		Edit	Delete
	17	0	0		Edit	Delete
	18	0	0		Edit	Delete
	19	•	•		Edit	Delete
	20	•	0		Edit	Delete

Item	Description
[Sender Fax No.]	Enter the fax ID (up to 20 characters, including #, *, +, and space). Normally enter the fax number of this machine. This setting is not required when sending an Internet fax.
For 1 line: [Default] For 2 lines: [Line 1]	Specify the default sender name to be used for line 1. If the sender name is not specified when sending a fax, the default specified in this item is printed on an original.
[Line 2]	Specify the default sender name to be used for line 2. If the sender name is not specified when sending a fax, the default specified in this item is printed on an original. This item is available when two optional Fax Kit FK-502 are installed while [In- dividual Sender Line Setup] is set to [ON] in [TX/RX Settings].
[Sender Name]	Displays the registered sender name.
[Edit]	Click this button to register or edit the sender name.
[Delete]	Click this button to delete the registered sender name.

[Edit]

Item	Description
[No.]	Displays the registration number.
[Sender Name]	Enter the sender name (up to 30 characters).

Reference

• The header position can be specified as required. If necessary, you can configure settings to prevent sender information from being printed. For details, refer to page 14-3.



14.10 Using a fax server

To use this machine with fax servers, register applications and servers using the applications.

You can register up to five applications and servers. You can also configure custom items for each registered application.

[Application Registration]

In the administrator mode of **PageScope Web Connection**, select [Store Address] → [Application Registration] → [Registration/Edit].

Reference

- The [Application Registration] menu is displayed when the optional Fax Kit FK-502 is not installed.
- Only when the optional **Fax Kit FK-502** is not installed and the Internet fax function is disabled, registered applications can be displayed and operated from the **Control Panel** of this machine.

PageScope Web Connection provides the following templates. Each template provides different custom items predefined for each application.

[WalkUp Fax]

[No.]	[Button Name]	[Function Name]	[Keyboard Type]	[Default Value]	[Options]
1	[Sender Name (CS)]	[Name]	[ASCII]	[Walkup]	_
2	[Fax Number (CS)]	[PersonalFaxNumber]	[ASCII]	-	_
3	[TEL Number (CS)]	[PersonalVoiceNum- ber]	[ASCII]	-	-
4	[Subject]	[Subject]	[ASCII]	-	_
5	[Billing Code 1]	[BillingCode1]	[ASCII]	-	-
6	[Billing Code 2]	[BillingCode2]	[ASCII]	-	-

[Fax with Account]

[No.]	[Button Name]	[Function Name]	[Keyboard Type]	[Default Value]	[Options]
1	[User ID]	[ID]	[ASCII]	[Walkup]	-
2	[Sender Name (CS)]	[Name]	[ASCII]	-	-
3	[Password]	[Password]	[ASCII]	_	-
4	[Password Auth#]	[Authentication]	-	-	[None]
5	[Subject]	[Subject]	[ASCII]	-	-
6	[Billing Code 1]	[BillingCode1]	[ASCII]	_	-
7	[Billing Code 2]	[BillingCode2]	[ASCII]	-	-
8	[CoverSheet Type]	[CoverSheet]	-	-	-
9	[Hold For Preview]	[HoldForPreview]	-	-	[No]

[Secure Docs]

[No.]	[Button Name]	[Function Name]	[Keyboard Type]	[Default Value]	[Options]
1	[User ID]	[ID]	[ASCII]	[Walkup]	-
2	[Password]	[Password]	[ASCII]	-	-
3	[Password Auth#]	[Authentication]	-	-	[None]
4	[Delivery Method]	[Delivery]	-	-	[Secure]
5	[Subject]	[Subject]	[ASCII]	-	-
6	[Billing Code 1]	[BillingCode1]	[ASCII]	-	-

[No.]	[Button Name]	[Function Name]	[Keyboard Type]	[Default Value]	[Options]
7	[Billing Code 2]	[BillingCode2]	[ASCII]	-	-
8	[CoverSheet Type]	[CoverSheet]	-	-	-
9	[Document PW]	[DocumentPassword]	[ASCII]	-	-

[Certified Delivery]

[No.]	[Button Name]	[Function Name]	[Keyboard Type]	[Default Value]	[Options]
1	[User ID]	[ID]	[ASCII]	[Walkup]	_
2	[Password]	[Password]	[ASCII]	-	-
3	[Password Auth#]	[Authentication]	-	-	[None]
4	[Delivery Method]	[Delivery]	-	-	[Certified]
5	[Subject]	[Subject]	[ASCII]	-	_
6	[Billing Code 1]	[BillingCode1]	[ASCII]	-	-
7	[Billing Code 2]	[BillingCode2]	[ASCII]	-	-
8	[CoverSheet Type]	[CoverSheet]	-	-	-
9	[Document PW]	[DocumentPassword]	[ASCII]	-	-

After selecting the template type, configure the following settings.

	🌆 Administrator	Logout ?
	ready to Scan	
	In Menu (Admin Mode)	3
Store Address 🛛 🔽	Display	E To Main Menu
▶ Address Book	Application Registration	
▶ Group	Application Setting	
▶ Program	No.	1
Temporary One-Touch	Application Name	
Subject	Server Setting	
▶ Text	Host Address	0.0.0.0
Application Registration	File Path	
▶ Prefix/Suffix	User ID	
	Password	
	anonymous	OFF 💌
	PASV Mode	OFF 🔽
	Proxy	OFF 💌
	Port No.	21 (1-65535)
		Back Next Cancel
		Duck Next Caller

Item	Description
[No.]	Displays the registration number of the application.
[Application Name]	Enter the application name (up to 16 characters).
[Host Address]	Enter the host address of the server using the application (up to 15 characters).
[File Path]	Enter the destination file path (up to 96 characters).
[User ID]	Enter the user ID used to log in to the server (up to 47 characters).
[Password is changed.]	Select this check box to change the password.
[Password]	Enter the password used to log in to the server (up to 31 characters).
[anonymous]	Select whether to enable anonymous access.
[PASV Mode]	Select whether to enable the PASV mode.
[Proxy]	Select whether to enable the proxy.

Item	Description
[Port No.]	Enter a port number.
[Next]	Click this button to display the custom items list. Click [Edit] of the item you want to add or change. The function setting page is displayed.

[Function Settings]

Item	Description
[No.]	Displays the number of the selected item.
[Button Name]	Enter the button name (up to 16 characters).
[Function Name]	Select the function name. The required setting items differ depending on the selected function.
[Message on Panel]	Enter the name displayed on the Control Panel (up to 32 characters).
[Display Method]	Select the display method on the Control Panel.
[Default Value]	Enter the default value. To hide the default value, select the [Input string shown as ****] check box. The allowable number of characters differ depending on the selected function.
[Keyboard Type]	Select the keyboard type to display on the Control Panel .
[Options] (when "Au- thentication" is select- ed)	Configure options for Authentication.
[Options] (when "Deliv- ery" is selected)	Configure options for Delivery.
[Options] (when "Hold- ForPreview" is select- ed)	Configure options for Hold For Preview.
[Input Type] (when "De- laySendDataTime" is selected)	Select the time specification.
[Default] (when "Delay- SendDataTime" is se- lected)	Select whether to display the device time.

14.11 Using the Fax Server Communicating in E-Mail Format

When using the fax server communicating in E-mail format, you can configure settings to automatically add a prefix and suffix to a destination number.

[System Connection Setting]

In the administrator mode of **PageScope Web Connection**, select[System Settings]►►[System Connection Setting].

	& Administrator		Logout ?
	Ready to Scan		
	📦 In Menu (Admin Mode)		C
System Settings 🛛 🔽 Disp	lay		🚛 To Main Menu
▶ Machine Setting	System Connection Setting		_
Register Support Information	Prefix/Suffix Automatic Setting	OFF 💌	
▶ Network TWAIN	Application Connection Setting		-
▶ User Box Setting	PageScope My Panel Manager	OFF V	
Returns Nettings	My Spool Bluetooth Print Settings	OFF V	
▶ Blank Page Print Settings	Bidetootn Print Settings		
Skip Job Operation Settings			OK Cancel
▶ Flash Display Setting			Outer
System Connection Setting			
▶ Display Setting			
Outline PDF Setting			

Item	Description
[Prefix/Suffix Automat-	Select whether to automatically add a prefix and suffix to a destination number.
ic Setting]	To automatically add a prefix and suffix, select [Store Address]⊷[Prefix/Suffix], and register the target prefix and suffix in No. 1. For details, refer to page 11-30.

Reference

If [Prefix/Suffix Automatic Setting] is set to [ON], the following restrictions will be applied.

- [Fax Settings] is not available (excluding [Destination Check Display Function], [Confirm Address (TX)], and [Confirm Address (Register)]).
- [Store Address] >> [Application Registration] are not available.
- [Bulletin Board User Box], [Polling TX User Box], [Compulsory Memory RX User Box], and [Re-Transmission User Box] are not available.
- [Bulletin Board User Box] and [Relay User Box] cannot be registered.
- Confidential RX is not available.
- [Off-Hook] is not available.
- When sending, [Line Settings], [Communication Method Setting], [Fax Header Setting] is not available in [Communication Setting].
- The Network Fax function is not available.
- [Tone], [Pause], [-], and [Line Settings] are not available when registering a fax destination in the address book.
- You can output [Activity Report], [TX Report], and [RX Report] in [Job History].
- A number excluding a prefix and suffix is displayed in [Address] of [Job History].
- [Address Type] is set to E-mail in [Current Jobs] and [Job History].
- [Meter Count] is updated only when [Scans] is enabled in [Scan/Fax]; however, [Fax TX] is not updated.



15 Appendix

15.1 Product specifications (Network functions)

Item	Specification
Туре	Embedded
Frame type	IEEE802.2/802.3/Ethernet II/IEEE802.3SNAP
Cable type	10Base-T/100Base-TX/1000Base-T
Connector	RJ-45
Bluetooth perform- ance *1	Communication protocol: Bluetooth 2.0 + EDR Supported profile: OPP/BPP/SPP
Main supported proto- cols	TCP/IP (IPv4/IPv6), BOOTP, ARP, ICMP, DHCP, DHCPv6, AutoIP, SLP, SN- MP, FTP, LPR/LPD, RAW Socket, SMB over TCP/IP, IPP, HTTP, POP, SMTP, LDAP, NTP, SSL, IPX/SPX, AppleTalk, Bonjour, NetBEUI, WebDAV, DPWS, S/MIME, IPsec, DNS, DynamicDNS, LLMNR, LLTD, SSDP, SOAP
Supported LDAP Serv- ers	OpenLDAP 2.1x, Active Directory, Exchange 5.5/2000/2003, Sun Java Directory Server (Netscape/iPlanet Directory Server), Novell NetWare 5.x/6.x NDS, Novell eDirectory 8.6/8.7, and Lotus Domino Server (5.x/6.x)* ² .
Supported LDAP pro- tocol	LDAP Protocol Version 3 (Version 2 is not supported)
Supported SSL ver- sions	SSL2, SSL3, and TLS1.0 (An x.509 certificate must be installed on the server.)
Multiprotocol	Auto detection
Operating environ- ments of PageScope Web Connection	 Compatible Web browsers: <for 2000="" 2003="" 2008="" nt4.0="" server="" vista="" windows="" xp=""></for> Microsoft Internet Explorer Ver. 6/7/8 (JavaScript and Cookies enabled) Netscape Navigator 7.02 or later (JavaScript and Cookies enabled) Mozilla Firefox 1.0 or later (JavaScript and Cookies enabled) <for 9.x="" macintosh="" macos="" x=""></for> Netscape Navigator 7.02 or later (JavaScript and Cookies enabled) Mozilla Firefox 1.0 or later (JavaScript and Cookies enabled) <for linux=""></for> Netscape Navigator 7.02 or later (JavaScript and Cookies enabled) <for linux=""></for> Netscape Navigator 7.02 or later (JavaScript and Cookies enabled) Mozilla Firefox 1.0 or later (JavaScript and Cookies enabled) <for linux=""></for> Netscape Navigator 7.02 or later (JavaScript and Cookies enabled) Mozilla Firefox 1.0 or later (JavaScript and Cookies enabled) <por linux=""></por>
	 Plug-in Ver.7.0 or later required to select Flash as the display format. Plug- in Ver.9.0 or later required to use the Data Management Utility (font/macro data management).
Settings	Saved to non-volatile memory

*¹ Install the optional **Local Interface Kit EK-605** in this machine.

 $^{\star 2}$ When using the Lotus Domino Server, and setting the search condition to "OR", the function will not work correctly.

15.2 Displaying the [Network Settings] Screen (Control Panel)

This section describes a procedure for displaying the [Network Settings] menu from the Control Panel.

- 1 Press Utility/Counter.
- 2 Press [Administrator Settings].
 - → In [Utility], an item can also be selected by pressing the key on the **Keypad** for the correspondent number. For [Administrator Settings], press the **3** key on the **Keypad**.

Job List Meter Count	Use the menu buttons or keypad to make a selection.
Meter count	Utility
Name Status	1 One-Touch/User Box Registration
	2 User Settings
	3 Administrator Settings 8 Device Information 4 Check Consumable Life
Delete Job Details	
Y М С К	03/18/2009 15:40 Close Close

3 Enter the password, and then press [OK].

	Use the keyb Press [C] to	ooard or keypad to ty o erase the entered A	pe in the Administra dministrator passwor	tor password. d.			
Utility > Administrator Settings							
1							
	—						
		ete					
1 2	3 4	5 6 7	8 9 0				
q W	e r	t y u	i o p				
a s	d f	g h j	k ;				
ZX	C V	b n n		Shift			
Space							
			_				
	03/18/2009 Memory	15:41 100%	A Enlarge	Cancel OK			

The [Administrator Settings] screen appears.

	Use the menu buttons or keypad to make a selection.						
Bookmark							
DOONIICITY	Administrator Settings						
			1/2 *	←Back For- → #			
Utility	1	System Settings	6	Copier Settings			
Administrator Settings	2	Administrator/ Machine Settings	7	Printer Settings			
	3	Dne-Touch/User Box Registration	8	Fax Settings			
	4 ¥	ser Authentication/ ccount Track	9	System Connection			
	5	Network Settings	0	Security Settings			
		15:34 100%		Close			

15-3

4 Press [Network Settings].

The [Network Settings] screen appears.



NOTICE

To enable changed network settings, turn the main power of this machine off and on again.

To turn the main power switch off and on, first turn the main power off, and then turn it on after 10 or more seconds have elapsed. Not doing so may result in an operation failure.

15.3 [Network Settings] menu list (Control Panel)

To configure network settings in the Control Panel of the machine, refer to this menu list.

This section describes the keys displayed when you press [Network Settings].

Reference

For details on displaying the [Network Settings] screen, refer to page 15-3.

15.3.1 [Network Settings] (1/2)

You can configure the following items in the [Network Settings] (1/2) screen.



[TCP/IP Settings]

First level	Second level	Third level	Fourth level	Fifth level
[IPv4 Settings]	[Manual Input]	[IP Address]		
		[Subnet Mask]		
		[Default Gateway]		
	[Auto Input]	[DHCP Settings]	[ON]/[OFF]	
		[BOOTP Settings]	[ON]/[OFF]	
		[ARP/PING Set- tings]	[ON]/[OFF]	
		[AUTO IP Set- tings]	[ON]/[OFF]	
[IPv6 Settings]	[Auto IPv6 Set- tings]	[ON]		
		[OFF]	[Global Address]	[Prefix Length]
			[Gateway Address]	
			[Link-Local Address	s]
	[DHCPv6 Setting]	[ON]/[OFF]		
DNS Host]	[DNS Host Name]			
	[Dynamic DNS Settings]	[Enable]/[Disable]		
DNS Domain]	[Domain Name Auto Retrieval]	[Enable]/[Disable]		
	[Search Domain Name Auto Re- trieval]	[Enable]/[Disable]		
	[Default DNS Doma	in Name]		
	[DNS Search Domain Name 1] to [DNS Search Domain Name 3]			

First level	Second level	Third level	Fourth level	Fifth level				
DNS Server Set- ings (IPv4)]	[DNS Server Auto Obtain]	[Enable]/[Disable]						
	[Priority DNS Server]							
	[Secondary DNS Se	erver 1] to [Secondary	/ DNS Server 2]					
DNS Server Set- ings (IPv6)]	[DNS Server Auto Obtain]	[Enable]/[Disable]						
	[Priority DNS Server	[Priority DNS Server]						
	[Secondary DNS Se	erver 1] to [Secondary	/ DNS Server 2]					
Psec Settings]	[IKE Settings]	[Group 1] to [Group	o 4]					
		[Encryption Algo-	[DES_CBC]					
		rithm]	[3DES_CBC]					
			[OFF]					
		[Authentication	[MD5]					
		Algorithm]	[SHA-1]					
			[OFF]					
		[Key Validity Period	[]					
		[Diffie-Hellman	[Group 1]					
		Group]	[Group 2]					
	[IPsec SA Set- tings]	[Group 1] to	[Security Proto-	[AH]				
		[Group 8]	col]	[ESP]				
				[ESP_AH]				
				[OFF]				
			[ESP Encryption Algorithm]	[DES_CBC]				
				[3DES_CBC]				
				[AES_CBC]				
				[AES_CTR]				
				[NULL]				
				[OFF]				
			[ESP Authentica-	[MD5]				
			tion Algorithm]	[SHA-1]				
				[OFF]				
			[AH Authentica-	[MD5]				
			tion Algorithm]	[SHA-1]				
				[OFF]				
		[Lifetime After Esta	blishing SA]					
	[Peer]	[Group 1] to	[Encapsulation	[Tunnel Mode]				
		[Group 10]	Mode]	[Transport Mode				
				[OFF]				
			[IP Address]					
			[Pre-Shared Key Te	ext]				
			[Perfect Forward Secrecy]	[ON]/[OFF]				
	[Enable]	[Set 1] to [Set 5]	<u>u</u>	<u> </u>				

First level	Second level	Third level	Fourth level	Fifth level
[IP Filtering (Deny	[Enable]	[Set 1] to [Set 5]		
Access)]	[Disable]			
[RAW Port	[Port 1] to [Port 6]	[Job Setting]		
Number]		[OFF]		
[LLMNR Setting]	[Enable]/[No Limit]	•		

[NetWare Settings]

First level	Second level	Third level	Fourth level	Fifth level		
[IPX Settings]	[ON]	[Ethernet Frame	[Auto Detect]			
		Type]	[802.2]			
			[802.3]			
			[Ethernet II]			
			[802.3SNAP]			
	[OFF]	[OFF]				
[NetWare Print Settings]	[ON]	[PServer]	[Print Server Name]			
			[Print Server Passw	word]		
			[Polling Interval]			
			[NDS/Bindery Setting]	[NDS]		
				[NDS & Bindery]		
			[File Server Name]			
			[NDS Context Name]			
			[NDS Tree Name]			
		[Nprinter/Rprinter]	[Print Server Name]			
			[Printer Number]			
	[OFF]					
	[Status]					
[User Authentica- tion Setting (NDS)]	[ON]/[OFF]					

	-				
First level	Second level	Third level	Fourth level	Fifth leve	
[PSWC Settings]	[ON]/[OFF]				
[IPP Settings]	[ON]/[OFF]				
[Accept IPP Jobs]	[ON]/[OFF]				
[Support Infoma-	[Print Job]				
tion]	[Valid Job]				
	[Cancel Job]				
	[Open Job Attributes]				
	[Open Job]				
	[Open Printer Attributes]				
Printer Informa-	[Printer Name]				
ion]	[Printer Location]				
	[Printer Information]				
	[Print URI]				
IPP Authentica- ion Settings]	[ON]/[OFF]				
Authentication	[requesting-user-name]				
Method]	[basic]				
	[digest]				
User Name]					
Password]					
[realm]					
amj					

[HTTP Server Settings]

[FTP Settings]

First level	Second level	Third level	Fourth level	Fifth level
[FTP TX Settings]		[Input Host Name]		
		dress]	[IPv4 Address Input]	
	1	[IPv6 Address Input]		
	[Proxy Server Port N		lumber]	
	[Port No.]			
		[Connection Timeou	ıt]	
	[OFF]			
[FTP Server Set- tings]	[ON]/[OFF]			

First level	Second level	Third level	Fourth level	Fifth leve	
[Client Settings]	[ON]	[NTLM Settings]	[v1]		
			[v2]		
			[v1/v2]		
		[User Authentica- tion (NTLM)]	[ON]/[OFF]		
		[DFS Setting]	[Enable]/[Invalid]		
	[OFF]				
[Print Settings]	[ON]	[NetBIOS Name]			
		[Print Service Name]			
		[Workgroup]			
	[OFF]				
WINS Settings]	[ON]	[Automatic Re- trieval Settings]	[Enable]/[Disable]		
		[WINS Server Address]			
		[Node Type Set-	[B Node]		
		ting]	[P Node]		
			[M Node]		
			[H Node]		
	[OFF]				
[Direct Hosting Setting]	[ON]/[OFF]				

[SMB Settings]

First level	Second level	Third level	Fourth level	Fifth level		
[Enabling LDAP]	[ON]/[OFF]	·	·	·		
[Setting Up LDAP]	[LDAP Server Name]				
	[Max.Search Result	s]				
	[Timeout]					
	[Initial Setting for	[Name]				
	Search Details]	[E-Mail]				
		[Fax Number]				
		[Last Name]				
		[First Name]				
		[City]				
		[Company Name]				
		[Department]				
	[Change Search	[Name]				
	Attribute]	[Nickname]				
	[Server Address]					
	[Search Base]					
	[SSL Setting]	[ON]/[OFF]				
	[Port Number]					
-	[Port Number (SSL)]					
	[Certificate Verifi- cation Level Set- tings]	[Expiration Date]	[Confirm]/[Do Not Confirm]			
		[Key Usage]	[Confirm]/[Do Not	t Confirm]		
		[Chain]	[Confirm]/[Do Not	t Confirm]		
		[Expiration Date Confirmation]	[Confirm]/[Do Not	t Confirm]		
		[CN]	[Confirm]/[Do Not	t Confirm]		
	[Authentication	[Anonymous]				
	Туре]	[Simple]				
		[Digest-MD5]				
		[GSS-SPNEGO]				
		[NTLM v1]				
		[NTLM v2]				
	[Select Sever Au-	[Use Settings]				
	thentication Method]	[Use User Authentication]				
		[Dynamic Authentic	cation]			
	[Referral Setting]	[ON]/[OFF]				
	[Login Name]					
	[Password]					
	[Domain Name]					
	[Reset All Settings]					
	[Check Connection]					

[LDAP Settings]

[Default LDAP Server Setting]

bizhub C360/C280/C220

Third level Fourth level Fifth level **First level** Second level [E-Mail TX [Scan to E-mail] [ON]/[OFF] (SMTP)] [Status Notifica-[ON]/[OFF] tion] **[Total Counter** [ON]/[OFF] Notification] [SMTP Server Ad-[Input Host Name] dress] [IPv4 Address Input] [IPv6 Address Input] [Binary Division] [ON]/[OFF] [Divided Mail Size] [Connection Timeout] [Server Capacity] [SSL Settings] [SMTP over SSL] [Start TLS] [OFF] [Port No.] [Port Number (SSL)] [Certificate Verifi-[Expiration Date] [Confirm]/[Do Not Confirm] cation Level Set-[Key Usage] [Confirm]/[Do Not Confirm] tings] [Chain] [Confirm]/[Do Not Confirm] [Expiration Date [Confirm]/[Do Not Confirm] Confirmation] [CN] [Confirm]/[Do Not Confirm] [Detail Settings] [SMTP Authenti-[ON] [User ID] cation] [Password] [Domain Name] [Authentication Setting] [OFF] [POP Before [ON]/[OFF] SMTP Authentication] [POP Before SMTP Time] [E-Mail RX (POP)] [POP Server Ad-[ON] [Input Host Name] dress] [IPv4 Address Input] [IPv6 Address Input] [Connection Timeout] [SSL Setting] [ON]/[OFF] [Port No.] [Port Number (SSL)]

[E-Mail Settings]

First level	Second level	Third level	Fourth level	Fifth level
		[Certificate Verifi- cation Level Set-	[Expiration Date]	[Confirm]/[Do Not Confirm]
		tings] [Login Name]	[Key Usage]	[Confirm]/[Do Not Confirm]
			[Chain]	[Confirm]/[Do Not Confirm]
			[Expiration Date Confirmation]	[Confirm]/[Do Not Confirm]
			[CN]	[Confirm]/[Do Not Confirm]
		[Password]		
		[APOP Authenti- cation]	[ON]/[OFF]	
		[Check for New Messages]	[Yes]/[No]	
		[Polling Interval]		
	[OFF]			
[S/MIME Commu- nication Settings]	[ON] [Digital Signature] [E-Mail Text En- cryption Method]	[Do not add signature]		
			[Always add signature]	
			[Select when sending]	
			[RC2-40]	
		cryption method]	[RC2-64]	
			[RC2-128]	
			[DES]	
			[3DES]	
			[AES-128]	
			[AES-192]	
			[AES-256]	
		[Print S/MIME In- formation]	[Yes]/[No]	
		[Automatically Obtain Certifi- cates]	[Yes]/[No]	
		[Certificate Verifi- cation Level Set-	[Expiration Date]	[Confirm]/[Do Not Confirm]
		tings]	[Key Usage]	[Confirm]/[Do Not Confirm]
			[Chain]	[Confirm]/[Do Not Confirm]
			[Expiration Date Confirmation]	[Confirm]/[Do Not Confirm]

[OFF]

[SNMP Settings]

First level	Second level	Third level	Fourth level	Fifth level
SNMP v1/v2c [P]]	[ON]/[OFF]			
[SNMP v3 (IP)]	[ON]/[OFF]			
[SNMP v1 (IPX)]	[ON]/[OFF]			
[UDP Port Number]				
[SNMP v1/v2c	[Read Community N	ame Settings]		
Settings]	[Write Setting]	[Enable]/[Invalid]		
	[Write Community N	lame Settings]		
[SNMP v3 Set-	[Context Name Set	tings]		
tings]	[Discovery User Permissions]	[ON]/[OFF]		
	[Discovery User Na	me Settings]		
	[Read User Name S	Settings]		
	[Security Level]	[OFF]		
		[auth-password]		
		[auth-password/priv-password]		
	[Password Set-	[Read auth]		
	ting] (Read)	[Read priv]		
		[Write auth]		
		[Write priv]		
	[Write User Name S	ettings]		
	[Security Level]	[OFF]		
		[auth-password]		
		[auth-password/	priv-password]	
	[Password Set-	[Read auth]		
	ting] (Write)	[Read priv]		
		[Write auth]		
		[Write priv]		
	[Encryption Algo-	[DES]		
	rithm]	[AES-128]		
	[Authentication	[MD5]		
	Algorithm]	[SHA-1]		
[TRAP Setting]	[Allow]/[Restrict]			
[TRAP Setting When Authentica- tion Failed]	[Enable]/[Invalid]			

[AppleTalk Settings]

First level	Second level	Third level	Fourth level	Fifth level
[AppleTalk Set- tings]	[ON]	[Printer Name]		
		[Zone Name]		
		[Current Zone]		
	[OFF]			

[Bonjour Setting]

First level	Second level	Third level	Fourth level	Fifth level
[Bonjour Setting]	[ON]	[Bonjour Name]		
	[OFF]			

15.3.2 [Network Settings] (2/2)

You can configure the following items in the [Network Settings] (2/2) screen.



[TCP Socket Settings]

First level	Second level	Third level	Fourth level	Fifth level
[TCP Socket]	[ON]	[Use SSL/TLS]	[ON]/[OFF]	
		[Port Number]		
		[Port Number (SSL)]]	
	[OFF]	-		
[TCP Socket (AS-	[ON]	[Port Number (ASCI	I Mode)]	
CII Mode)]	[OFF]			

[Network Fax Settings]

Reference

• Ask your service representative to configure this setting. For details, contact your service representative.

First level	Second level	Third level	Fourth level	Fifth level
[Network Fax Function Settings]	[IP Address Fax Function]	[ON]/[OFF]		
	[Internet Fax Function]	[ON]/[OFF]		
[SMTP TX Set-	[Port No.]			
tings]	[Connection Timeo	ut]		
[SMTP RX Set-	[ON]	[Port No.]		
tings]		[Connection Tim	eout]	
	[OFF]			

[WebDAV Settings]

First level	Second level	Third level	Fourth level	Fifth level			
[WebDAV Client	[ON]	[Proxy Server Ad-	[Input Host Name]				
Settings]		dress]	[IPv4 Address Input	:]			
			[IPv6 Address Input	:]			
		[Proxy Server Port I	[Proxy Server Port Number]				
		[User Name]					
		[Password]					
		[Chunk Transmis- sion]	[Yes]/[No]				
		[Connection timeou	ıt]				
		Character Code] [Certificate Verification Level Set- tings]	[UTF-8]				
			[Windows Code Page]				
			[Expiration Date]	[Confirm]/[Do Not Confirm]			
			[Key Usage]	[Confirm]/[Do Not Confirm]			
			[Chain]	[Confirm]/[Do Not Confirm]			
			[Expiration Date Confirmation]	[Confirm]/[Do Not Confirm]			
			[CN]	[Confirm]/[Do Not Confirm]			
	[OFF]						
[WebDAV Server	[ON]	[SSL Setting]	[Non-SSL Only]				
Settings]			[SSL Only]				
			[SSL/Non-SSL]				
		[Password Set-	[Password Setting]				
		ting]	[Initial Password]				
	[OFF]						

First level	Second level	Third level	Fourth level	Fifth level
[Web Service	[Friendly Name]			
Common Set- tings]	[Publication Serv- ice]	[Enable]/[Invalid]		
	[SSL Setting]	[ON]/[OFF]		
[Printer Settings]	[ON]	[Printer Name]		
		[Printer Location]		
		[Printer Information]		
	[OFF]			
[Scanner Settings]	[ON]	[Scanner Name]		
		[Scanner Location]		
		[Scanner Informatio	n]	
		[Connection Timeou	ıt]	
	[OFF]	1		

[Web Service Settings]

[SSDP Settings]

First level	Second level	Third level	Fourth level	Fifth level	
[ON]	[Multicast TTL Se	[Multicast TTL Setting]			
[OFF]					

[OFF]

First level	Second level	Third level	Fourth level	Fifth level	
[Device Setting]	[MAC Address]	1			
	[LLTD Setting]	[Enable]/[Disable]			
	[Network Speed]	[Auto Setting]			
		[10Mbps Half Duple	x]		
		[10Mbps Full Duples	x]		
		[100Mbps Half Dupl	ex]		
		[100Mbps Full Duple	ex]		
		[1Gbps Full Duplex]			
[Time Adjustment Setting]	[ON]	[Auto IPv6 Re- trieval]	[On]/[Off]		
		[Host Address]	[Input Host Name]		
			[IPv4 Address Inpu	ut]	
			[IPv6 Address Inpu	ut]	
		[Port Number]			
		[Set Date]			
		[Auto Time Ad- justment]	[On]/[Off]		
		[Polling Interval]			
	[OFF]				
Status Notifica- tion Setting]	[Register Notifica- tion Address]	[IP Address 1] to [IP Address 5]	[Address]	[Input Host Nam	
				[IPv4 Address In put]	
				[IPv6 Address In put]	
			[Port Number]		
			[Community Name]		
			[Notification Items]	
		[IPX Address]	[Address]	[Network Ad- dress]	
				[Node Address]	
			[Community Name]		
			[Notification Items]		
		[E-mail 1] to [E-	[Edit E-Mail Address]		
		mail 10]	[Notification Items]	
Total Counter Notification Set- ings]	[Notification Schedule Setting]	[Schedule 1] to [Schedule 2]	[Monthly]	[Monthly Fre- quency]	
ແມ່ລວງ				[Date Setting]	
			[Weekly]	[Weekly Frequen cy]	
				[Day of the Week	
			[Daily]	[Interval of Day(s	
	[Notification Ad- dress Setting]	[Address 1] to [Address 3]	[Edit E-Mail Addre	ss]	
	Gress Getting]		[Schedule Set- tings]	[Schedule 1] to [Schedule 2]	
	[Model Name]				

[Detail Settings]

First level	Second level	Third level	Fourth level	Fifth level
[PING Confirma-	[PING TX Ad-	[Input Host Name]		
tion]	dress]	[IPv4 Address Input]	
		[IPv6 Address Input]	
	[Check Connection]			
[SLP Setting]	[Enable]/[Disable]			
[LPD Setting]	[Enable]/[Disable]			
[Prefix/Suffix Set-	[ON/OFF Setting]	[ON]/[OFF]		
ting]	[Prefix/Suffix Set-	[Prefix]		
	ting]	[Suffix]		
[Error Code Dis- play Setting]	[ON]/[OFF]	·		

[IEEE802.1x Authentication Settings]

First level	Second level	Third level	Fourth level	Fifth level	
[ON]	[Auth. Status]				
	[Reset Job Settings]]			
	[Certificate Verifi-	[Expiration Date]	[Confirm]/[Do Not C	onfirm]	
	cation Level Set- tings]	[CN]	[Confirm]/[Do Not C	onfirm]	
_	5-1	[Chain]	[Confirm]/[Do Not C	onfirm]	

[OFF]

[Bluetooth Setting]

Reference

• This function is available when the optional Local Interface Kit EK-605 is installed in this machine.

First level	Second level	Third level	Fourth level	Fifth level

[Enable]/[Invalid]

15.4 Network Error Codes

Functions	Code	Description
IEEE802.1X	1	Connection has already been established.
	2	Parameter error.
	3	Unable to find the destination AP (SSID).
	4	The authentication mode does not match the AP (IEEE8021X/WPA-EAP/WPA-PSK/NONE).
	5	Negotiation of the EAP method failed.
	6	The EAP authentication failed (user ID, password, certificate, etc.)
	7	Encryption negotiation with the AP failed (TKIP/CCMP).
	8	Failed to retrieve the client certificate.
	9	The client certificate has expired.
	10	Verification error of the server certificate (EAP-TLS/EAP-TTLS/PEAP).
	11	Although the WPA-PSK mode is selected, the Pre-Shared Key is not specified.
	12	An authentication error occurred in the WPA-PSK mode (un- matched Pre-Shared Key).
	13	The phase 2 method is not specified (PEAP).
	14	Negotiation of the phase 2 method failed (PEAP).
	15	Response from the server has timed out.
	16	Failed to allocate memory.
	17	Failed to start the supplicant task.
	18	The driver does not work.
	19	The server certificate has expired (EAP-TLS/EAP-TTLS/PEAP).
	20	CA verification error of the server certificate (EAP-TLS/EAP-TTLS/PEAP).
	21	Server ID verification error of the server certificate (EAP-TLS/EAP-TTLS/PEAP).
	22	The CA certificate is not specified (EAP-TLS/EAP-TTLS/PEAP).
	23	The server ID is not specified (EAP-TLS/EAP-TTLS/PEAP).
	24	The setting combination is correct.
	25	Connection and authentication are complete.
	26	The server certificate does not have the expected usage (EAP-TLS/EAP-TTLS/PEAP).
	27	The server certificate has expired (EAP-TLS/EAP-TTLS/PEAP).
	28	Access to the server to check for expiration of the server certificate is rejected (EAP-TLS/EAP-TTLS/PEAP).
	29	Access to the server to check for expiration of the server certificate has timed out (EAP-TLS/EAP-TTLS/PEAP).
	30	Unable to check for expiration because the CRL size that has been retrieved to check for the expiration of the server certificate exceeds the maximum capacity that can be retained (1MB) (EAP-TLS/EAP-TTLS/PEAP).
	31	Incorrect format of the server certificate (EAP-TLS/EAP-TTLS/PEAP).
	32	Verification of the server certificate is invalid (EAP-TLS/EAP-TTLS/PEAP).

Functions	Code	Description
IEEE802.1X	33	Although the environment is configured to use the HDD, it is unable to perform verification because the HDD path has not been specified (EAP-TLS/EAP-TTLS/PEAP).
	34	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that can be verified at a time is 20) (EAP-TLS/EAP-TTLS/PEAP).
	35	Parameter error of the certificate (EAP-TLS/EAP-TTLS/PEAP).
	36	Internal error of the certificate verification (EAP-TLS/EAP-TTLS/PEAP).
LDAP	1	An invalid operation occurred.
	4	The number of search results has exceeded the maximum number of items allowed.
	7	The LDAP server does not support SASL.
	10	Unable to trace the link although Referral is specified.
	32	Cannot find the search route.
	49	Failed to log in to the LDAP server.
	80	An unexpected error occurred.
	85	The connection has timed out.
	86	The supported SASL does not match the LDAP server side.
	88	Cancelled by the user.
	90	A memory shortage occurred.
	91	Unable to connect to the LDAP server.
	92	The supported LDAP version does not match the LDAP server side.
	128	Failed to resolve the LDAP server name using the DNS server.
	129	The certificate of the LDAP server has expired.
	130	Mutual authentication using GSS-SPNEGO (Kerberos v5) failed.
	131	The search result remains.
	2238	The CN field of the LDAP server certificate does not match the server address.
	2239	The LDAP server certificate does not have the expected usage for a server.
	2240	The LDAP server certificate is not trusted. To trust the certificate, the certificate must be registered to the system.
	2241	The LDAP server certificate has expired.
	2242	The CA server rejected the connection.
	2243	The connection to the server that checks for expiration of the cer- tificate has timed out.
	2244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	2261	The format of the LDAP server certificate is invalid.
	2263	Although the environment is configured to use the HDD, it is una- ble to perform verification because the HDD path has not been specified.
	2264	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that can be verified at a time is 20).
	2266	Internal error of the certificate verification.
	2267	The device certificate does not exist.
	2268	No certificate is sent from the server.

Functions	Code	Description
LDAP	10000	Failed in authentication using a PKI card.
	12236	The ticket certificate has expired.
	12239	The ticket certificate does not have the expected usage for a server.
	12240	The ticket certificate is not trusted. To trust the certificate, the cer- tificate must be registered to the system.
	12241	The ticket certificate has expired.
	12242	The CA server rejected the connection.
	12243	The connection to the server that checks for expiration of the cer- tificate has timed out.
	12244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	12261	The format of the ticket certificate is invalid.
	12263	Although the environment is configured to use the HDD, it is una- ble to perform verification because the HDD path has not been specified.
	12264	Unable to perform verification because there are too many certifi- cates to be verified (the maximum number of certificates that can be verified at a time is 20).
	12266	Internal error of the certificate verification.
E-Mail/	1	Failed to log in to the E-mail server.
nternet Fax	2	An internal error occurred.
	3	Failed to connect to the server.
	4	The connection has timed out.
	5	Decoding failed due to invalid MIME format or S/MIME format.
	6	Available free memory is insufficient. Reception is not possible.
	7	Job ID is invalid.
	9	Failed to delete an E-mail message.
	10	The mail box is full.
	11	Failed to search the certificate.
	12	Failed to retrieve the device certificate or private key.
	13	An I/O error occurred. An HDD operation error occurred, or memory capacity of the com- puter may be insufficient.
	14	The S/MIME function is disabled.
	15	The HDD is disabled.
	16	The format of the certificate from the E-mail sender is invalid.
	2236	The certificate has expired, or the validity period has not yet started.
	2238	The CN field of the certificate does not match the server address.
	2239	The certificate does not have the expected usage.
	2240	The certificate is not trusted. To trust the certificate, the certificate must be registered to the system.
	2241	The certificate has expired.
	2242	The CA server rejected the connection.
	2243	The connection to the server that checks for expiration of the cer- tificate has timed out.
	2244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).

Functions	Code	Description
E-Mail/ Internet Fax	2261	The format of the certificate is invalid.
	2263	Failed to initialize the certificate verification.
	2264	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that can be verified at a time is 20).
	2266	Internal error of the certificate verification.
	2267	The device certificate does not exist.
	2268	No certificate is sent from the server.
TP TX	22	Parameter error (e.g. the file name is NULL).
	27	Parameter is invalid.
	42	The specified protocol is unavailable.
	52	The process is cancelled by a device reset.
	55	A buffer shortage occurred.
	56	The FTP connection is already open.
	57	Failed to connect to the server.
	60	The connection has timed out.
	61	The connection has been interrupted.
	62	The device is not connected to the network.
	70	The network connection is busy.
	450	The file has not been deleted.
	451	The file transfer failed (e.g. due to insufficient server capacity).
	452	The file transfer failed (e.g. due to insufficient server capacity).
	530	Incorrect login name or password.
	550	The specified folder does not exist.
	552	The file operation failed (e.g. due to insufficient server capacity).
MB transmission	42	The specified protocol is unavailable.
	52	The process is cancelled by a device reset.
	55	A buffer shortage occurred.
	57	Failed to connect to the server.
	62	The device is not connected to the network. The connection has been interrupted.
	70	The network connection is busy.
	4096	The host name is not specified. The specified host name does not exist on the network.
	4097	The user name is not specified. Unable to log in with the specified user name and password. The user does not have write permission to the folder. Failed to log in due to an SMB protocol error.
	4098	The folder name is not specified. The specified folder does not exist.
	4099	The user name is not specified. Unable to log in with the specified user name and password. The user does not have write permission to the folder. Failed to log in due to an SMB protocol error.
	4100	The specified file name is invalid.
	4101	The specified file already exists and is write-protected. The folder and the disk are write-protected.
	4102	The specified media to be written is not formatted. The file system of the specified media to be written is faulty.

Functions	Code	Description
SMB transmission	4103	The server capacity is full.
	4104	The server capacity has become full while writing data.
	4105	Other errors to which an error code is not assigned.
	10000	Failed in authentication using a PKI card.
	12236	The certificate has expired, or the validity period has not yet started.
	12239	The certificate does not have the expected usage.
	12240	The certificate is not trusted. To trust the certificate, the certificate must be registered to the system.
	12241	The certificate has expired.
	12242	The CA server rejected the connection.
	12243	The connection to the server that checks for expiration of the cer- tificate has timed out.
	12244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	12263	Although the environment is configured to use the HDD, it is unable to perform verification because the HDD path has not been specified.
	12264	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that can be verified at a time is 20).
	12266	Internal error of the certificate verification.
	12267	The device certificate does not exist.
	12268	No certificate is sent from the server.
SMTP transmission	22	Invalid argument.
	27	The file size is too large.
	28	Insufficient memory of the device.
	32	The pipe is broken.
	42	The specified protocol is unavailable.
	51	Unable to reach the destination network.
	52	The connection aborted by the network.
	55	A buffer shortage occurred.
	57	The socket is not connected.
	58	The connection has been interrupted.
	60	The operation has timed out.
	61	The connection is rejected.
	62	The device is not connected to the network.
	67	The host is shut down.
	70	The operation is expected to be blocked.
	421	SMTP server error. Since the service is unavailable, the transfer channel is closed.
	432	SMTP server error. The password must be changed.
	450	SMTP server error. Unable to access to the mail box.
	451	SMTP server error. The requested action has been cancelled because an error oc- curred while processing a job.

Functions	Code	Description
SMTP transmission	452	SMTP server error. Shortage of the system storage capacity.
	453	SMTP server error. No E-mail massage.
	454	SMTP server error. Temporary authentication failure.
	458	SMTP server error. Unable to queue a message to the node.
	459	SMTP server error. The node is not permitted.
	499	SMTP server error. An unsupported SMTP error code of 400s is received from the SMTP server.
	500	SMTP server error. Syntax error (command unrecognized).
	501	SMTP server error. Syntax error in parameters or arguments.
	502	SMTP server error. The command is not implemented.
	503	SMTP server error. Bad sequence of commands.
	504	SMTP server error. The command parameter is not implemented.
	521	SMTP server error. The server does not receive E-mail messages.
	530	SMTP server error. The access is rejected.
	534	SMTP server error. The authentication mechanism is too weak.
	535	SMTP server error. Authentication error.
	538	SMTP server error. The requested authentication mechanism requires encryption.
	550	SMTP server error. The requested action is not executed.
	551	SMTP server error. The user is not connected locally.
	552	SMTP server error. The requested E-mail action is cancelled.
	553	SMTP server error. The requested action is not accepted.
	554	An SMTP server error, or an internal error when sending data. The transaction failed.
	555	SMTP server error. MAIL/RCPT parameter error.
	599	SMTP server error. An unsupported SMTP error code of 500s is received from the SMTP server.
	2236	The certificate has expired, or the validity period has not yet start- ed.
	2238	The CN field of the certificate does not match the server address.
	2239	The certificate does not have the expected usage.
	2240	The certificate is not trusted. To trust the certificate, the certificate must be registered to the system.

Functions	Code	Description
SMTP transmission	2241	The certificate has expired.
	2242	The CA server rejected the connection.
	2243	The connection to the server that checks for expiration of the cer- tificate has timed out.
	2244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	2261	The format of the certificate is invalid.
	2263	Failed to initialize the certificate verification.
	2264	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that can be verified at a time is 20).
	2266	Internal error of the certificate verification.
	2267	The device certificate does not exist.
	2268	No certificate is sent from the server.
	3000	An unexpected error occurred.
	3001	An unexpected error occurred within the library being used.
	3002	An invalid channel is specified.
	3003	SMTP server address is invalid.
	3004	Parameter error (MIMEBodyHeader).
	3005	Parameter error (DisplayName).
	3006	Parameter error (character set).
	3007	Parameter error (From address).
	3008	Parameter error (To address).
	3009	Parameter error (CC address).
	3010	Parameter error (BCC address).
	3011	Parameter error (pEmailSet is NULL).
	3012	Parameter error (destination certificate is NULL).
	3013	Parameter error (E-mail body).
	3014	The HDD is disabled.
	3015	The S/MIME function is disabled.
	3016	The device certificate cannot be used in S/MIME (e.g. self-signed certificate error, the private key type is not RSA).
	3018	An invalid encryption algorithm is specified.
	3019	An invalid signature algorithm is specified.
	3020	The E-mail address included in the destination certificate does not match the destination address (To/Cc/Bcc).
	3021	The E-mail address included in the certificate does not match the sender (From) address.
	3022	Format error of the certificate.
	3023	Parameter error (Disposition-Notification-To).
	3024	Message syntax error of the receiver side.
	3025	The SMTP server does not support the STARTTLS command.
	3026	PKI card access error.
VebDAV transmission	22	The format of the URL of the target resource is invalid. Parameter error.
	27	Attempted to send data that exceeds the maximum transferrable size for transfer coding.

Functions	Code	Description
WebDAV transmission	42	The specified protocol is unavailable.
	52	The process is cancelled by a device reset.
	55	A buffer shortage occurred.
	56	The connection has already been established.
	57	The connection to the WebDAV server failed (including connection time out).
	62	The device is not connected to the network.
	70	The network connection is busy.
	72	The connection has been interrupted with the condition that is in- sufficient to the specified size.
	1001	The server does not support WebDAV. Unable to upload data to the server.
	1002	The intermediate resource is not a collection (directory) (e.g. the specified folder does not exist).
	1003	The target resource is a collection (directory).
	1011	Although "https" is specified for the resource URL, it is unavailable because the SSL library is not included for the modularity.
	1012	Although "https" is specified for the resource URL, the connection is interrupted because the WebDAV server certificate has expired.
	1013	The CONNECT method is issued to the proxy server to establish an SSL connection via a proxy, but it is rejected.
	1017	A communication error occurred while sending a request.
	1018	A communication error occurred while receiving a response.
	1027	nContentLength exceeds the maximum transferable size.
	1030	Although use of a proxy has been specified, the proxy setting in- formation is unavailable.
	1031	The connection to the proxy server failed (including connection time out).
	1098	Failed in chunk TX to SharePoint Server.
	1099	Other internal error occurred (e.g. memory shortage).
	2236	The certificate has expired, or the validity period has not yet started.
	2238	The CN field of the certificate does not match the server address.
	2239	The certificate does not have the expected usage.
	2240	The certificate is not trusted. To trust the certificate, the certificate must be registered to the system.
	2241	The certificate has expired.
	2242	The CA server rejected the connection.
	2243	The connection to the server that checks for expiration of the cer- tificate has timed out.
	2244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	2261	The format of the certificate is invalid.
	2263	Failed to initialize the certificate verification.
	2264	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that can be verified at a time is 20).
	2266	Internal error of the certificate verification.
	2267	The device certificate does not exist.

Functions	Code	Description
WebDAV transmission	2268	No certificate is sent from the server.
SMB browsing	32	The connection has been interrupted.
	42	The specified protocol is unavailable.
	57	Failed to connect to the server.
	62	The device is not connected to the network. The internal channel detected an error immediately before estab- lishing communication.
	67	The host is shut down.
	4096	The group name/host name is not specified. The specified group name/host name does not exist on the net- work.
	4097	The user name is not specified. Unable to log in with the specified user name and password. Failed to log in due to an SMB protocol error.
	4098	Administrative shares do not exist. The shared resource name is not specified. The shared resource does not exist.
	4099	The user name is not specified. Unable to log in with the specified user name and password. Failed to log in due to an SMB protocol error.
	4102	The specified media to be written is not formatted. The file system of the specified media to be written is faulty.
	4105	Other errors to which an error code is not assigned.
	4352	The browser machine (master browser/backup browser) is not found.
	4353	Unable to log in to the browser machine (master browser/backup browser).
	4354	The sub folder does not exist.
	4355	The request is not accepted due to an invalid call sequence etc.
	4368	The number of groups is too large.
	4369	The number of host PCs is too large.
	4370	The number of shared resources is too large.
	10000	Failed in authentication using a PKI card.
	12236	The certificate has expired, or the validity period has not yet started.
	12239	The certificate does not have the expected usage.
	12240	The certificate is not trusted. To trust the certificate, the certificate must be registered to the system.
	12241	The certificate has expired.
	12242	The CA server rejected the connection.
	12243	The connection to the server that checks for expiration of the cer- tificate has timed out.
	12244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	12263	Although the environment is configured to use the HDD, it is unable to perform verification because the HDD path has not been specified.
	12264	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that can be verified at a time is 20).
	12266	Internal error of the certificate verification.
	12267	The device certificate does not exist.

Functions	Code	Description
SMB browsing	12268	No certificate is sent from the server.
User Authentication	1	Invalid parameter (e.g. the number of characters exceeds the limit blank). The authentication function setting is disabled.
	2	Failed to resolve the name using the DNS server.
	3	Unable to find the authentication server.
	4	Failed to authenticate.
	5	Failed to allocate memory. An unexpected error occurred (which does not occur under nor- mal usage conditions).
	6	An authentication request is received while an internal task of the user authentication client is being performed.
	7	The connection was interrupted while the user authentication was being performed.
	10000	Failed in authentication using a PKI card.
	12236	The certificate has expired, or the validity period has not yet start ed.
	12239	The certificate does not have the expected usage.
	12240	The certificate is not trusted. To trust the certificate, the certificate must be registered to the system.
	12241	The certificate has expired.
	12242	The CA server rejected the connection.
	12243	The connection to the server that checks for expiration of the certificate has timed out.
	12244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	12261	The format of the certificate is invalid.
	12263	Although the environment is configured to use the HDD, it is una ble to perform verification because the HDD path has not been specified.
	12264	Unable to perform verification because there are too many certif cates to be verified (the maximum number of certificates that car be verified at a time is 20).
	12266	Internal error of the certificate verification.
WebDAV client	0	When receiving a response: Successfully received data, but the response body is missing. When sending a request: Successfully sent data, and is waiting fo a response to be received.
	1	When receiving a response: Successfully received data, and continuously receives the response body. When sending a request: Successfully sent data, and is waiting for an instruction to send the request body.
	2	When receiving a response: Successfully received the response body, and its reception has been completed. When sending a request: The ID of the client that is not opened is specified.
	3	When receiving a response: The reception has timed out. When sending a request: An invalid request method has been specified.
	4	When receiving a response: A reception error occurred. Or an invalid request URL is specified. When sending a request: An invalid request URL is specified.

Functions	Code	Description
WebDAV client	5	When receiving a response: Content-Length or the received data size exceeds the maximum transferable size. Or the size of the message body is too large. When sending a request: The size of the message body is too large.
	6	When receiving a response: The process is cancelled by a reset. Or the size of the message body exceeds the maximum transfer- able size. When sending a request: The size of the message body exceeds the maximum transferable size.
	7	When receiving a response: An internal error occurred. Or the process is cancelled by an internal reset. When sending a request: The process is cancelled by an internal reset.
	8	Failed to connect to the WebDAV server.
	9	An error occurred while sending data to the WebDAV server.
	10	A timeout occurred while sending data to the WebDAV server.
	11	Failed to connect to the proxy server.
	12	The proxy server rejected the connection request.
	13	Although use of a proxy has been specified, the proxy setting information is unavailable.
	14	Failed to authenticate the proxy server.
	15	Other error was returned from the proxy server.
	16	An internal error occurred.
	17	The process is cancelled because MIO_REQBODY_ERROR is specified by the device application.
	2236	The certificate has expired, or the validity period has not yet started.
	2238	The CN field of the certificate does not match the server address
	2239	The certificate does not have the expected usage.
	2240	The certificate is not trusted. To trust the certificate, the certificate must be registered to the system.
	2241	The certificate has expired.
	2242	The CA server rejected the connection.
	2243	The connection to the server that checks for expiration of the certificate has timed out.
	2244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	2261	The format of the certificate is invalid.
	2263	Failed to initialize the certificate verification.
	2264	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that car be verified at a time is 20).
	2266	Internal error of the certificate verification.
	2267	The device certificate does not exist.
	2268	No certificate is sent from the server.
WS scan	1	The specified client is not registered.
	2	Parameter is invalid.
	3	The Web service or WS scan function is disabled.
	4	The device is not connected to the network.
	5	Waiting for connection from CP.

Functions	Code	Description
WS scan	6	The certificate of the destination computer is not valid when the validity period of a certificate is checked.
	22	Invalid argument.
	42	The specified protocol is unavailable.
	52	The connection aborted by the network.
	53	The connection has been interrupted.
	55	A buffer shortage occurred.
	57	The socket is not connected.
	60	The operation has timed out.
	70	The operation is expected to be blocked.
	72	The Retrievelmage waiting period has timed out.
	2236	The certificate has expired, or the validity period has not yet started.
	2238	The CN field of the certificate does not match the server address
	2239	The certificate does not have the expected usage.
	2240	The certificate is not trusted. To trust the certificate, the certificate must be registered to the system.
	2241	The certificate has expired.
	2242	The CA server rejected the connection.
	2243	The connection to the server that checks for expiration of the certificate has timed out.
	2244	Unable to check for expiration because the CRL size exceeds the maximum capacity that can be retained (1MB).
	2261	The format of the certificate is invalid.
	2263	Although the environment is configured to use the HDD, it is una ble to perform verification because the HDD path has not been specified.
	2264	Unable to perform verification because there are too many certificates to be verified (the maximum number of certificates that can be verified at a time is 20).
	2265	Parameter of the certificate verification is invalid.
	2266	Internal error of the certificate verification.
	2267	The device certificate does not exist.
	2268	No certificate is sent from the server.
Bluetooth	0	The reception of the object data specification range has been completed (not the last data).
	1	The reception of the object data specification range has been completed (the last data).
	2	Failed in communication.
	3	An error was detected in the peripheral hardware of Bluetooth.
	4	Failed to allocate memory.
	5	The process has been cancelled by the device.

15.5 Glossary

Term	Description
10Base-T /100Base-TX /1000Base-T	A set of specifications under the Ethernet standards. Those cables that consist of twisted copper wire pairs are used. The transmission speed of 10Base-T is 10 Mbps, of 100Base-TX is 100 Mbps, and of 1000Base-T is 1000 Mbps.
2in1	A function to send the original by double-page spread, consolidating two pages on a sheet.
Active Directory	A network service provided by Microsoft. Active Directory can centrally manage all types of information including servers, clients, printers and other hardware re sources, as well as properties and access permissions of users on the network.
Adobe [®] Flash [®]	Software or its file format developed by Adobe Systems Inc. (formerly by Macro media, Inc.), used to create a content by compiling vector-graphic animations and sounds. The software allows handling interactive contents using keyboard or mouse. The files can be kept relatively compact and accessed from a Web browser with dedicated plug-in software.
Anonymous FTP	While FTP sites are usually protected using some account name and password mechanism, an anonymous FTP system permits anyone to access the FTP site by simply entering "anonymous" as the account name, without a password.
APOP	The acronym for Authenticated Post Office Protocol. While usual POP does not encrypt the password used for receiving an E-mail, APOP encrypts the password. This authentication method helps enhance the E-mail security.
AppleTalk	The generic name for the protocol suite developed by Apple Computer for computer networking.
Auto IP	A function to obtain an IP address automatically. If one fails to get an IP address via DHCP, the auto IP gets an IP address from the space of "169.254.0.0".
bit	The abbreviation for binary digit. The smallest unit of information (data quantity) handled by a computer or printer. A bit uses only a 0 or a 1 to indicate data.
Bluetooth	One of short-range wireless communication technologies used to connect port- able information devices, which are a few meters apart. This function enables you to wirelessly connect a laptop computer, PDA, or cellular phone to transfer voices or data.
BMP	The abbreviation for bitmap. It is a file format used to save image data. (The file extension is ".bmp"). Commonly used on Windows platforms. BMP covers the color depth from mon- ochrome (2 values) to full color (16,777,216 colors). BMP images are not suitable for compressed storage.
Bonjour	A Macintosh network technology, automatically detecting devices connected to the network and configuring the devices. Previously called "Rendezvous", and has been changed to "Bonjour" since Mac OS X v10.4.
BOOTP	 The abbreviation for Bootstrap Protocol. The protocol is used for a client computer on the TCP/IP network to load network configuration automatically from a server. Instead of BOOTP, DHCP, an advanced protocol based on BOOTP, is typically used today.
bps	The acronym for bit per second, which is a unit of data transmission, indicating the amount of data transmitted per second.
Byte	A byte indicates a unit of information (data quantity) handled by a computer or printer. A byte consists of eight bits.
СМҮК	The acronym for Cyan, Magenta, Yellow, and Black. The colors in the toner/ink used for color printing. Changing the mixing ratio of the four CMYK colors enables any type of color to be created.
CSV	The acronym for Comma Separated Values, which is one of the formats used for saving database or spreadsheet data as a text file. (The file extension is ".csv".) Data can be shared among different applications by being separated by commas (as the delimiter).
Default Gateway	A device, such as a computer or router, used as a "gateway" to access computers on different LANs.

Term	Description
DHCP	The acronym for Dynamic Host Configuration Protocol. The protocol is used for a client computer on the TCP/IP network to load network configuration automatically from a server. Just using a DHCP server to centrally manage IP addresses of the DHCP clients enables you to construct a network without IP address conflicts or other troubles
DNS	The acronym for Domain Name System. DNS allows for obtaining the IP address corresponding to a host name in network environments. This system enables a user to access other computers on the net- work by specifying host names instead of elusive and non-intuitive IP addresses
DPI (dpi)	The acronym for Dots Per Inch. A unit of resolution used for printers and scan- ners. This indicates the number of dots used to represent an inch. The higher this value, the higher the resolution.
DSN	The acronym for Delivery Status Notifications, which is a delivery status notifica- tion message being returned from a receiver to a sender when the E-mail is de- livered to the receiver's mail server.
Dynamic authentica- tion (LDAP setting)	An authentication method option used when connecting to a LDAP server form a multifunctional product. Select this option if you want an user to enter the login name and password each time the user logs on the LDAP server to refer to destination information.
ECM	The acronym for Error Correction Mode. An error resending method used for G3 communication. ECM checks whether the data is correctly sent to the destination, and should it be not the case, ECM re- sends the same data while maintains the serial communication. If a receiver also provides the ECM mode, this machine uses the ECM-based communication with the receiver unless the ECM mode is disabled.
FTP	The acronym for File Transfer Protocol, which is used to transfer files via the In- ternet, intranet or other TCP/IP network.
F-Code	A communication procedure related to the usage of subaddress of T.30* stand- ardized by ITU-T (international telecommunication union).F code is provided by Japanese Communications Industrial Corporation. Various kinds of capabilities are available for the communication among fax machines with the F code func- tion irrespective of difference of the fax machine brand. This machine uses F code for the bulletin boards, relay request, confidential communication, and password transmission. (* a communication standard)
G3	A fax communication mode standardized by the ITU-T (International Telecommu- nication Union). G3 and G4 are provided for the communication modes. Today, G3 is more widely used than G4.
GSS-SPNEGO/ Simple/Digest MD5	Authentication methods used for logging in to the LDAP server. The different authentication method, GSS-SPENEGO, SIMPLE or Digest MD5 is used for a LDAP server depending on the type of the server being used or server settings.
HTTP	The acronym for HyperText Transfer Protocol. This is a protocol used to send or receive data between a Web server and a client (such as a Web browser). HTTP can exchange files such as images, sounds, and movies that are associated with documents, including their presentation formats and other information.
ICM	The acronym for Image Color Management, which is a color management system used for Windows. ICM adjusts the difference of a color caused by different I/O devices, such as monitors, scanners and printers, and reproduce the color mostly common to any those devices.
IEEE802.1X	A standard used in a wired or wireless LAN to authenticate terminals gaining access to the network. A LAN switch compatible with IEEE802.1X permits a user to connect with the LAN after authentication (to confirm whether the user is authorized).
IPP	The acronym for Internet Printing Protocol, which is used to send or receive print data or control printers via the Internet or other TCP/IP network. IPP can also send and print data to printers in remote areas via the Internet.
IPsec	The name of a security technology used for the TCP/IP network. IPsec allows service with enhanced security by determining the protocol used for the encryption of transmit packets and for authentication.

Term	Description
IPv6	The acronym for Internet Protocol version 6. With the number of devices on the Internet increasing, the IPv6 protocol has been arranged to replace the current IPv4 protocol. The length of an IP address has been changed to 128 bits and security functions and other features have been added.
IPX	One of the protocols used for NetWare. IPX runs in the network layer of the OSI reference model.
IPX/SPX	The abbreviation for Internetwork Packet Exchange/Sequenced Packet Ex- change, which is a protocol developed by Novell, Inc., typically used in NetWare environments.
IP Address	An address or a code used to identify an individual network device on the Inter- net. IPv4 (Internet Protocol version 4), a protocol widely used today, adopts a 32- bit number for an IP address separated into four sections. An example of an IPv4 IP address is: 192.168.1.10. On the other hand, IPv6 (Internet Protocol version 6), the next generation protocol, adopts 128-bit IP addresses. The IP address is as- signed to every computer or other device connected to the Internet.
IP Address Fax	The IP is an address or code used to identify individual devices on the Internet. IP Address Fax uses the addresses to send or receive faxes within the intranet.
JPEG	The acronym for Joint Photographic Experts Group. It is a file format used to save image data. The compression ratio is generally 1/10 to 1/100. JPEG is an effective method to compress photographs and other natural images.
Kerberos	A network authentication system used for Windows 2000 or later, used as the Ac- tive Directory authentication. Kerberos arranges an authentic site within the net- work to provide two-phase authentication processes of users login and the use of network resources, allowing users to be securely and efficiently authenticated
LAN	The acronym for Local Area Network, which is a network constructed by connecting computers on the same floor, in the same building, or in neighboring buildings.
LLMNR	The acronym for Link-local Multicast Name Resolution, which is a protocol used for the name resolution of neighboring computers. LLMNR uses simple exchange of request and response messages to perform name resolution of neighboring computers without configuring DNS server or clients.
LLTD	The acronym for Link Layer Topology Discovery, which is a technology investi- gating how the devices on the network are connected. Network devices with this technology are recognized by Windows Vista/Server 2008 on the network, and displayed as icons configured on the network map of Windows Vista.
LPD	The acronym for Line Printer Daemon. This is a platform-independent printer pro- tocol running on the TCP/IP network. The protocol was originally developed for BSD UNIX, and has become one of the printing protocols typically used among general computers.
LPR/LPD	The acronym for Line Printer Request/Line Printer Daemon. This is a printing method implemented via networks, used for Windows NT or UNIX based systems. It uses TCP/IP to output printing data from Windows or UNIX to a printer on the network.
LDAP	The acronym for Lightweight Directory Access Protocol, which is a protocol used to access a database that can manage E-mail addresses and environmental information of network users on the Internet, intranet, or other TCP/IP network.
MAC address	MAC is the acronym for Media Access Control. A MAC address is an ID number unique to each Ethernet card, enabling sending or receiving data to or from other Ethernet cards. A Mac address consists of 48-bit numbers. The first 24 bits are controlled by IEEE and used to allocate a unique number to each manufacture, whereas the latter 24 bits are used by each manufacturer to assign a unique number to each card.
MDN	The acronym for Message Disposition Notifications, which is a message sent to confirm that the mail has been unsealed, a response to a sender when the sender requests for doing so.
MH	The acronym for Modified Huffman, which is a data compression encoding meth- od used for fax transmissions. Text-based originals are compressed to approxi- mately 1/10 the original size.

Term	Description
MIB	The acronym for Management Information Base, which defines the format of management information for network devices that are collected using SNMP in TCP/IP communication. Two types of MIB are provided, that is, the private MIB specific to each manufacturer and the standardized MIB.
MMR	The acronym for Modified Modified Read, which is a data compression encoding method used for fax transmissions. Text-based originals are compressed to approximately 1/20 the original size.
NDPS	The acronym for Novell Distributed Print Services. This provides a high perform- ance printing solution in NDS environments. By using the NDPS as a printer serv- er, you can output from the desired printer, automatically download the printer driver of a newly installed printer, simplify and automate complicated manage- ment environments related to printer use, and integrate management related to the network printer.
NDS	The acronym for Novell Directory Services. This allows the centralized management in a hierarchical structure of shared re- sources such as servers, printers and users information on the network, as well as the access privilege and other information related to the users.
NetBIOS	The abbreviation for Network Basic Input Output System, which is a communica- tion interface developed by IBM.
NetBEUI	The abbreviation for NetBIOS Extended User Interface. This is a network protocol developed by IBM. NetBEUI enables you to construct a small-scale network simply by configuring computer names.
NetWare	A network operating system developed by Novell. This uses NetWare IPX/SPX for the communication protocol.
Nprinter/Rprinter	A remote printer support module used when using a printer server in NetWare environments. Rprinter is used for NetWare 3.x, and Nprinter for NetWare 4.x.
NTLM	The acronym for NT LAN Manager, which is a user authentication method used for Windows NT or later. NTLM encodes password using MD4 or MD5 encoding method.
NTP	The acronym for Network Time Protocol, which is a protocol used to adjust the computer's internal clock precisely via the network. In a hierarchical method, the time is adjusted with the server at the highest level using GPS to acquire the correct time, which is then referenced by each lower level host.
OCR	The acronym for Optical Character Reader, which is a device or software that converts handwritten or printed characters to text data by optically scanning them and comparing them with previously stored patterns for identification.
OHP/OHT	A transparent sheet used for OHP (overhead projector), used for presentations.
OS	The acronym for Operating System. This is base software used to control the system of a computer. Windows, MacOS, or Unix is an OS.
PASV	The abbreviation for PASsiVe, a mode used to connect to an FTP server from within a firewall. If this mode is not selected, the firewall regards the access as unauthorized and blocks the connection, disabling any file transmission.
РВ	A push telephone line.
PC-FAX	A function to send a fax directly from a computer without using paper.
PDF	The acronym for Portable Document Format. This is an electronically formatted document with file extension of ".pdf". PDF is a PostScript based format, and can be viewed using Adobe Acrobat Reader, a free viewer software.
PDL	The acronym for Page Description Language. This is a language used to instruct a page printer about images being printed on each page.
POP3	The acronym for Post Office Protocol - Version 3, which is a commonly used transmission protocol (transmission convention) for the transmission and reception of E-mail. POP3 has functions including mail box authentication, E-mail download, list information check, and E-mail deletion.

Term	Description
POP Before SMTP	A user authentication method used when sending E-mail messages. POP Before SMTP receives E-mail messages first, then authenticates the user using the POP server. The IP address, passed through the user authentication by the POP serv- er, is then permitted to use the SMTP server. This method prevents third parties without permission to use the mail server from sending mail messages.
PostScript	A typical page-descriptive language developed by Adobe and is commonly used for high quality printing.
PPD	The acronym for PostScript Printer Description, which is a file with the description of resolution, available paper sizes, and other information specific to a PostScript printer model.
PPI	The acronym for Pixels Per Inch, which is a unit of resolution used mainly for mon- itors or scanners. PPI indicates how many pixels are contained per inch.
Proxy server	A server installed for the connection with the Internet. A proxy server acts as a proxy of client computers to contact the Internet to ensure security effectively for the total organization.
PServer	A print server module available in Netware environments. This module monitors, changes, pauses, restarts, or cancels print jobs.
RAW port number	A TCP port number used when the RAW protocol is selected for Windows or other TCP printing. The RAW port number is usually set to 9100.
realm (IPP setting)	An area used for allowing security functions. The area is used to organize user names, passwords and other authentication information, and define the security policy in the area.
Referral setting (LDAP setting)	If no relevant destination data is found on an LDAP server, the LDAP server itself instructs which LDAP server to be searched for the next. The referral setting configures whether the multifunctional product is responsible for searching the next LDAP server.
RIP	The acronym for Raster Image Processor. RIP extracts picture images from text data created using PostScript or other page description language. This processor is usually integrated into a printer.
RGB	The acronym for Red, Green, and Blue. The RGB are the three primary colors used on monitors and other devices to re- produce full colors by changing their brightness ratio.
Samba	UNIX server software which uses SMB (Server Message Block) to make UNIX system resources available to Windows environments.
SLP	The acronym for Service Location Protocol, which is a protocol capable of finding services on the TCP/IP network, and the automatic configuration of clients.
S/MIME	The acronym for Secure/Multipurpose Internet Mail Extensions, which is a proto- col used to add encryption, digital signature, and other features to MIME (E-mail operations). Public key method is used for encryption, using a different key for encryption and decryption.
SMB	The acronym for Server Message Block, which is a protocol allowing the share of files and printers mainly over the Windows network.
SMTP	The acronym for Simple Mail Transfer Protocol, which is a protocol used to trans- mit or transfer E-mail.
SNMP	The acronym for Simple Network Management Protocol, which is a management protocol in the TCP/IP network environments.
SSL/TLS	The acronym for Secure Socket Layer/Transport Layer Security, which is an en- coding method used to transmit data between the Web server and a browser in a secure manner.
Super G3 (SG3)	A G3 communication mode complying with ITU-T V.34. Compared with usual G3 communication, it allows the higher rate transmission (up to 33,400bps).
TCP/IP	The acronym for Transmission Control Protocol/Internet Protocol, which is a de facto standard protocol widely used for the Internet. An IP address is used to identify each network device.
TCP Socket	TCP Socket indicates an API used for the TCP/IP network. This socket is used to open a transmission route for input or output of usual files.

Term

TIFF

15
Description
The acronym for Tagged Image File Format. It is a file format used to save image data. (The file extension is ".tif"). By using the "tag" indicating the data type, information for various image formats can be saved in a single image data.
A type of outline font developed by Apple and Microsoft, and currently used as a standard font type for Macintosh and Windows. This type of font can be used both for display and printing.
The acronym for Transmitting Subscriber Identification, which is the ID of a fax transmission terminal.
An interface standard defined for between imaging devices including scanners and digital cameras and applications including graphics software. To use a TWAIN compatible device, a relevant TWAIN driver is required.
The acronym for Universal Serial Bus, which is a general-purpose interface de- fined for connecting a mouse, printer, and other devices with a computer.
A communication mode used for super G3 fax transmission. Super G3 mode

	iornation for various image formats can be saved in a single image data.
TrueType	A type of outline font developed by Apple and Microsoft, and currently used as a standard font type for Macintosh and Windows. This type of font can be used both for display and printing.
TSI	The acronym for Transmitting Subscriber Identification, which is the ID of a fax transmission terminal.
TWAIN	An interface standard defined for between imaging devices including scanners and digital cameras and applications including graphics software. To use a TWAIN compatible device, a relevant TWAIN driver is required.
USB	The acronym for Universal Serial Bus, which is a general-purpose interface de- fined for connecting a mouse, printer, and other devices with a computer.
V34	A communication mode used for super G3 fax transmission. Super G3 mode transmission may not be activated because of a telephone line status where the receiver's or sender's machine is connected to a telephone line via a private branch exchange switchboard. If this occurs, the G3 mode should be disabled by turning V34 off.
Web service	Which is a technology useful for detecting a device on the network, using the device functions or obtaining the device information. Web service comes equipped with Windows Vista, and is used to detect devices on the network and to perform printing or scanning via the network.
WINS	The acronym for Windows Internet Naming Service. This is a service, available in Windows environments, to call the name server responsible for conversion be- tween a computer name and an IP address.
Zone	A name used for an AppleTalk network. Zone is used to group multiple devices on the AppleTalk network.
Z-Folded Original	This function first determines the document size that cannot be detected correct- ly because of folds, then scans and sends the document after the verification. This function is available only when the original is scanned by ADF.
Outline font	A font using lines and curves to display an outline of a character. Large characters can be displayed on a screen or printed with no jagged edges.
Check Dest. & Send	A function to send a fax after comparing the specified fax number with the fax number information of the recipient (CSI). Only when those numbers match, the function sends the fax. If the numbers are not matched, a transmission error occurs. Therefore, this prevents misdirected transmissions.
Reference Allowed Level	A feature for specifying settings so that only certain people are able to view cer- tain destination information for the security of the information. When synchro- nized with user authentication, only information with an access permission level matching that specified for the user can be viewed.
Uninstallation	To delete software installed on a computer.
Ethernet	LAN transmission line standard.
Batch transmission	A function to send documents as one document at a specified time if the docu- ments have the same transmission conditions such as destination, transmission time, memory transmission or resolution, and are stored in the same memory.
Print job	Print request transmitted from a computer to a printing device.
Install	To install hardware, operating systems, applications, printer drivers, or other software on to a computer.
Internet Fax	A transmission method by which the scanned original data is transmitted among Internet fax machines and computers as TIFF format E-mail attachments via the intranet (in-house network) and the Internet.
Web browser	Software used to view Web pages. Typical Web browsers include Internet Explorer and Netscape Navigator.
Overseas communi- cation	This is a function used to communicate with an overseas recipient. If an overseas communication mode is set, the fax is sent with a lower speed. Specifying an overseas transmission mode ensures the fax transmission when faxing to the location where transmission conditions are poor, even within the country.

Term	Description
Resolution	The resolution value indicates how much detail of an object can be reproduced precisely on an image or a print matter.
Gradation	The shading levels of an image. Larger number of the levels can reproduce smoother transition of the shading.
File extension	Characters added to a file name for the recognition of the file format. The file ex- tension is added after a dot of a file name, for example, ".bmp" or ".jpg".
Pixel	The smallest constitutional unit of an image.
Color matching	A technology for minimizing the difference in colors among different devices such as scanners, displays and printers.
Brightness	Brightness of a display or other screen.
Queue name	A logical printer name required for LPD/LPR printing. A name assigned to each device for allowing printing to the device via network.
Forced memory re- ception	A function to store received documents in memory, and print them when re- quired.
Shared printer	A printer connected to a server on the network and configured to be used by mul- tiple computers.
Quick memory transmission	A method used to start sending fax immediately after scanning a page of the orig- inal. This method allows even an original with many pages to be sent without overflowing the memory.
Client	A computer using services provided by servers via the network.
Group	The grouping of multiple abbreviation numbers. It will be convenient to use the group when a volume of serial broadcasts or serial pollings are distributed to the same destination addresses.
Gray scale	A form presenting monochrome image by using the gradation information shifting from black to white.
Bulletin board	A function to post documents to be viewed, or to store the documents to be transmitted via polling.
Gateway	Hardware and software used as the point where a network is connected to a net- work. A gateway not only connects networks but also changes data formats, ad- dresses, and protocols according to the connected networks.
Number of Originals	Transmission with information of the total number of pages. A function used for quick memory transmission. This allows the recipient to check whether the all pages were received or not (In case of memory transmission, the total no. of pages are automatically added).
Mixed Original	A function to set different sizes of originals, detect the size of each original, and send them accordingly.
Contrast	The difference in intensity between the light and dark parts of the image (light/dark variation). "Low contrast" indicates an image with little light/dark variation, while "High contrast" an image with large light/dark variation.
Compact PDF/XPS	A compression method for minimizing the data size using the PDF or XPS format, used when digitalizing color documents. Compact PDF allows high compression performance by identifying the text and image regions, and applying the resolution and compression method optimized for each region. The compact PDF method can be selected in this machine when using the scan- ning function to digitalize documents.
Resending	A function to select and resend a document that was not send but stored in the memory. The document can be resent either to the same destination or to another destination.
Subnet mask	A value used to divide a TCP/IP network into small networks (subnetworks). This is used to identify how many higher-order bits of an IP address are used for the network address.
Thumbnail	A function to display the content of an image or document file as a small image (image displayed when the file is opened).
Single-page TIFF	A TIFF file that contains only a single page.
Screen font	A font used for displaying characters/symbols on a CRT or other monitor.

Dither

Long Original

Term	Description
Spool	The acronym for Simultaneous Peripheral Operation On-Line. Data to be output to a printer is not sent directly to the printer, but is temporarily stored in another location. The stored data is then sent collectively to the printer.
Background Remov- al	A function to adjust the shading of background color before sending the original.
Sharpness	A function to enhance the edge of characters before sending the document.
Main scanning di- rection	The horizontal direction for scanning originals.
Manual transmission	An operation to send a fax while checking the status of the receiver.
Default value	A setting value configured for the machine prior to shipment from the factory. Some default values can be changed by using the settings menu. It will be convenient to set a frequently used value to the default value according to your application.
Confidential com- munication	A function used to transmit an original only to specific people who you want to read it. Originals sent via confidential communication are not printed when received, and are saved in a confidential box of the recipient's fax machine. The document can be printed by some specific operation such as entering the access code for the confidential box.
Screen frequency	The density of dots used to create the image.
Scanning	The reading of an image in scanner operation by moving aligned image sensors step by step. The direction of moving image sensors is called the main scanning direction, and the direction of image sensors alignment is called the sub-scan- ning direction.
Transmission reser- vation	A function to program the next transmission during transmission or printing.
Dialing Method	There are three Dialing methods: PB (push-button dialing), 10PPS (pulse dialing /10 pps), and 20PPS (pulse dialing /20 pps).
Temporary docu- ment saving	A function to save received documents automatically to memory when the ma- chine is unable to print the documents for some reason such as running out of paper. When a proper action is taken such as refilling of paper, the temporarily saved document is printed out.
Temporary forward transmission	A function to manually forward the received original that is in the standby state to be output, by using the setting check button on the Control Panel . The function must be set while the fax/scan screen is displayed, otherwise the operation will be halted due to the paper running out or a paper jam.
Timer TX	A function to transmit a fax at the specified time. It reduce costs by transmitting faxes in the late evening or early morning when discount telephone services are available.
Abbreviated/ad- dress	A function to register frequently used fax numbers of recipients. When registering abbreviated/addresses, you should also register the destination name and the search string, so that you can specify the destination using the search string to select.
Receiving	A fax machine status when it receives a call.
Relay distribution station	A feature to broadcast the fax to the relay distribution destination by receiving the relay request from the relay instruction station. The relay distribution function is not available in this machine.
Relay instruction station	A fax machine sending a relay broadcast request.
Relay broadcast	A function to broadcast fax messages via other fax machine (called a relay distri- bution station). When you have multiple broadcast destinations in remote place, you may configure one of the destinations as a relay station to transfer the broad-

cast via the relay station, so that you can reduce the total communication rate.

A function to send original pages longer than the standard size. Long size docu-

A method of presenting the quasi-shading of gray using black and white colors. This method is easier to process than error diffusion, but may stir some uneven-

ments can be sent by selecting this function.

ness on the image.

Term	Description
Default	An initial setting. The settings selected in advance and enabled when the machine is turned on, or the settings selected in advance and enabled when the function is activated.
Transmission time	The time needed to send a fax. The higher the resolution or larger the paper, the longer the transmission takes.
Baudrate	The transmission rate of a modem. This machine can communicate at a high transmission rate of 33,600bps. When selecting overseas communication mode, the machine communicates at 7200bps or 4800bps, a rate suitable for noise-resistance.
Broadcast	A transmission of a single original to multiple recipients in one operation.
Driver	Software that works as a bridge between a computer and a peripheral device.
Density	The amount of density of an image.
Density Compensa- tion	A color tone correction function used for output devices such as printers and displays.
Password TX	A function to send a fax with a password. If the recipient's fax machine is set to closed network reception, the sender's fax machine should transmit the same password as used for the closed network reception.
Sending	Sending indicates making a call. For fax, sending indicates sending originals or dialing for pollings.
Sender Name	The name of a sender. On the receiver's side, the name is printed as a part of the sender's information at the edge of the transmitted original.
Transmission source record	The transmission time, name, telephone number, page number, and other infor- mation on the sender's side printed at the edge of the document on the receiver's side.
Hard disk	A large capacity storage device for storing data. The data is retained even after the power is turned off.
Halftone	A method for presenting the shading of an image by using different sizes of black and white dots
Peer-to-peer	A type of network allowing connected devices to communicate each other with- out using a dedicated server.
Pixel	Pixel. the smallest constitutional unit of an image.
Bitmap Font	A font using a collection of dots to present characters. Jagged edges are con- spicuous for the larger size Bitmap Font characters.
Sender Fax No.	An identification code used for the mutual recognition for fax transmission. Usually the fax number is registered for the fax ID.
Sub-scanning direc- tion	The vertical direction for scanning originals.
Book Copy	A function to separate the front cover, back cover, right pages, and left pages into individual pages when sending a book or catalog by fax.
Plug and play	A mechanism of immediately detecting a peripheral device when it is connected to a computer, and automatically searching an appropriate driver so that the de- vice becomes operable.
Printer driver	Software that works as a bridge between a computer and a printer.
Printer buffer	A memory area temporarily used for processing data of print jobs.
Print queue	A software system used by a spooler to save generated print jobs.
Frame type	A type of communication format used in NetWare environments. For mutual communication, the same frame type is required.
Preview	A function allowing you to view an image before being processed for printing or scanning.
Program	A function to register frequently used destination fax numbers, or stereotyped transmission operation procedures. By simply pressing a program key, you can specify the destination, or configure a function automatically to start communication.
Protocol	A rule enabling a computer to communicate with other computers or peripherals

Term	Description
Property	Attribute information. When using a printer driver, you can use its property to configure different func- tions. Also by using a file property, you can check the attribute information about the file.
Profile	A color attribute file. This contains overall input and output correlation data of primary colors, specifically used by the color input and output devices to reproduce colors.
Closed Network RX	A function to accept only transmissions from recipient machines with a matching password.
Host name	The name of a device on the network.
Pause	A temporary break in dialing. In this machine, each pause creates a one second break during dialing.
Port Number	A number used to identify the transmission port assigned to each process run- ning on a computer on the network. The same port cannot be used by multiple processes.
Polling	A function available on the receiver's side to request a sender to send originals set or stored in the sender's machine or memory.
Multi Page TIFF	A TIFF file that contains multiple pages.
Memory	A storage device used for storing data temporarily. Some types of memory retain data even after the power is turned off, while others not.
Memory overflow	A condition where the fax memory becomes full while scanned documents or temporarily stored documents are saved.
Memory transmis- sion	A method used to start a fax transmission after scanning originals and storing them in memory. If memory transmission is used, the total number of pages are automatically printed in the page number of the transmission source information and an image of the first page of the sent document is printed in the transmission report. However, the memory may become full if the document contains many pages, or there is a large amount of information due to high image quality.
Main Scanning	The operation of scanning a document optically, and converting the document into image data.
Scan Size	A function to specify the scanning size of an original to transmit it. If the width of the paper in the recipient's fax machine is smaller than that of the transmitted document, the document will usually be reduced for printing purposes. If you do not want to reduce the document size, specify the same document size as that of the paper in the recipient's fax machine, so that you can send the document with its original size.
Redial	A function to re-dial a fax number after waiting for a specified length of time when recipient's line is busy. Both manual redial and automatic redial functions are available.
2-Sided Binding Di- rection	A function to specify the binding position of a double-sided document when it is sent using ADF. Two types of binding positions are available for a double-sided original: One is the top/bottom binding with the binding position at the top or bottom of the original.The other is left/right binding with the binding position at the left (or right) of the original.Note that the second side of the original has a different top/bottom relationship.
Local printer	A printer connected to a parallel or USB port of a computer.
Erase	A function of erasing dark shadow around the document before transmitting it via fax, when scanning a booklet form document or a document with ADF kept open.



16 Index

16.1 Index by item

A

Active directory	7-10
Address book	11-7
Administrator mode	3-5
Administrator password	8-39
Administrator settings	15-3
Annotation user box	12-17
APOP authentication	4-16
AppleTalk	5-11
Automatic logout time	3-12

В

Blank pages	
Bluetooth	5-19
Bonjour	5-10
Bulletin board user box	

С

Certificate	8-2, 8-9, 8-11, 8-13
Certificate validation	8-16, 8-31, 9-7
Copy guard	8-38
Create system user box	12-16
Create user box	

D

31
-2
20
-9

Е

E-mail address	11-7, 11-13
E-mail body	11-29
E-mail notification	10-15
E-mail subject	11-29
E-mail transmission (SMTP)	4-9
Export	10-27
Extension lines	14-18
External certificates	8-34

F

Fax	
Fax address	
Fax ID	14-19
Fax reports	14-16
Fax server	14-21
Flash	3-11
Font/macro	11-2
FTP destination	11-8, 11-15
FTP server	9-9

FTP TX	4-26
G	
Group	11-12, 11-24
H	
	14.0
Header/footer position Help	
neip	
IEEE802.1X authentication	
Import	
Initialize	
Interface	
Internet fax	
Internet fax address	•
IP address	
IP address fax	
IP address fax destinations IP address filtering	
IPP printing	
IPsec	
IPv6	
	7 05 40 5
LDAP over SSL	
License registration List Function Display	
LIST FUNCTION DISPLAY	
M	
Machine information	11-3
Main Menu	1-7
Meter count	•
MFP authentication	7-2
Ν	
NDS over IPX/SPX	
NDS over TCP/IP	
NetWare	5-12
Network error codes	
Network map	10-11
Network settings	15-3, 15-5
No destination entry	11-26
NTLM authentication	7-15
0	
OpenAPI	0.4
OpenAPT Outline PDF	

Ρ

PageScope Web Connection	3-2
Password copy	8-38
PBX	14-15
PCL print	13-4
POP before SMTP	
POP over SSL	4-14
Port9100 printing	5-2
Prefix/suffix	11-30
Print setting	13-2
Program	
Protocol	
PS print	13-5
Public key	
Public user	

R

Reference allowed	8-36
Relay user box	12-16
ROM version	10-26

S

S/MIME	
Scan to authorized folder settings	8-42
Scan to e-mail	4-8
Scan to home	4-6
Scan to me	4-17
Sender name	14-19
Single color / 2 color output	10-40
Skipping jobs	10-38
SMB	8-18
SMB destination	11-8, 11-16
SMB print	5-4
SMB TX	4-2
SMTP authentication	4-12
SMTP over SSL	4-10
SNMP	10-12
Specification	15-2
SSL	8-2, 8-20, 8-21
Start TLS	4-10
Status notification	10-15, 10-18
Store address	8-37
Support information	11-4
System user box	12-14
т	
Tab Function Display	1-6

Tab Function Display1-6TCP socket9-2TCP/IP2-2Telephone and fax lines14-4Temporary one-touch destination11-28TIFF print13-6Timer10-28Total counter notification10-21TRAP notification10-18TWAIN4-32

U

User authentication 	11 19
W	
Web service	21
WebDAV destination 11-9, 11-	
WebDAV over SSL4-3	
WebDAV server9	
WebDAV transmission4-2	28
Wizard3	-9
WS print5-	17
WS scan4-	34
X	
XPS print13	-7

A

Account Track Registration	7-8
Address Reference Setting	8-36
Administrative Setting	7-4
Administrator Password Setting	8-39
AppleTalk Settings	5-11, 15-14
Application Registration	14-21
Assign Account to Acquire Device Info	13-10
Auto Logout	3-12
Automatically Obtain Certificates	8-15

В

Basic Setting	13-2
Black Compression Level	6-7, 6-17
Blank Page Print Settings	10-37
Bluetooth Setting	.5-19, 15-18
Bonjour Setting	.5-10, 15-14

С

Certificate Verification Level Settings4-30, 8-16, 9-7
Certificate Verification Settings
Client Setting4-3, 7-18
Closed network RX14-9
Color/Grayscale Multi-Value Compression Method
Copy Security8-38
Counter
Create System User Box12-16
Create User Box12-13
Creating and installing a self-signed Certificate8-4

D

Default Function Permission	7-13
Delete Secure Print File	12-3
Delete Time Setting	12-4
Delete Unused User Box	12-2
Detail Settings	15-17
Device Certificate Setting	8-3
Device Setting	2-3
Direct Hosting Setting	4-5
Direct Print Settings	13-9
Display Setting	3-7
Document Delete Time Setting	12-5
Document Hold Setting	12-6

Е

Edit Font/Macro	11-2
E-mail	8-14
E-Mail RX (POP)	4-13, 4-14, 6-10
E-mail Settings	15-11
E-mail TX (SMTP) 4-9,	, 4-10, 10-15, 10-22
Export Certificates	8-11
External Certificate Setting	8-34
External Memory Function Settings	12-7

External Server Settings

	7-11,	7-16,	7-19,	7-23,	7-26,	7-28
--	-------	-------	-------	-------	-------	------

F

Fax TX Settings	14-2
Flash Display Setting	3-11
Format All Destination	10-32
Forward TX Setting	14-10
FTP Server Setting	9-10
FTP Settings	15-8
FTP TX Setting	4-26
Function ON/OFF Setting	14-7

G

General Settings 7-3, 7-12, 7-17, 7-20, 7-24, 7-27
Get Request Code10-33
Group11-12

Н

Header Information	14-19
Header/Footer Position	14-3
Header/Footer Registration	11-5
HTTP Server Settings	15-8

I

Icon	11-11
ID & Print Delete Time	12-9
IEEE802.1X Authentication Setting	. 8-30, 8-31
IEEE802.1X Authentication Settings	15-18
IEEE802.1X Authentication Trial	8-33
I-Fax Advanced Setting	6-6, 6-11
IKE	8-26
Import Certificates	8-7
Import/Export	10-27
Incomplete TX Hold	14-11
Install a Certificate	8-6
Install License	10-34
Interface Setting	13-8
Internet Fax RX Ability	6-12
IP Address Fax Operation Settings	6-18
IP Filtering	8-24
IPP Authentication Settings	5-8
IPP Setting	5-7
IPsec	8-26

L

LDAP Setting	
Line Parameter Setting	14-4
LLMNR Setting	4-5
LLTD Setting	10-11
LPD	5-2
Machine Setting Manage Copy Protect Data	

Manage Font/Macro	11-36
Manage Stamp Data	11-34
Manual Setting	10-3
Memory RX Setting	14-8
Multi Line Settings	14-18

Ν

NetWare Settings 5-12, 7-21, 10-12,	10-19, 15-7
NetWare Status	5-16
Network Error Code Display Setting	10-30
Network Fax Function Settings	6-4, 6-14
Network Fax Settings 6-6, 6-11,	6-17, 15-15
Network Setting Clear	10-31
Network TWAIN	4-33

0

Open System User Box	12-14
Open User Box	12-11
OpenAPI Setting	9-6
Outline PDF Setting	10-39

Ρ

PBX Connection Setting	14-15
PC-Fax RX Setting	14-12
PCL Setting	13-4
Peer	8-28
Power Save Setting	10-28
Prefix/Suffix	11-30
Prefix/Suffix Automatic Setting	14-24
Print Setting	5-5
Printer Settings	5-18
Program	11-13
Protocol setting	
PS Setting	13-5
PSWC Settings	3-3
Public User	8-40
Public User Box Setting	12-10

R

RAW Port Number	5-3
Register Support Information	11-4
Remove a Certificate	8-8
Report Settings	14-16
Request a Certificate	8-5
Reset	10-31
Restrict User Access	8-37
ROM Version	10-26

S

S/MIME SA	•
Scan to Authorized Folder Settings	8-42
Scan to Home Settings	4-7
Scanner Settings	4-35
Setting up LDAP	10-7, 10-8
Skip Job Operation Settings	10-38
SLP	4-32
SMB Settings	15-9

SMTP RX Setting	6-16
SMTP TX Setting	6-15
SNMP Setting	10-13
SNMP Settings	15-13
SSDP Settings	
SSL Setting	97
	0-1
Status Notification Setting	
	10-16, 10-20
Status Notification Setting	10-16, 10-20 11-7

Т

TCP Socket Setting	4-33, 9-3
TCP Socket Settings	
TCP/IP Setting	2-5
TCP/IP Settings	2-2, 15-5
Temporary One-Touch	11-28
Text	11-29
TIFF Setting	13-6
Time Adjustment Setting	10-4
Total Counter Notification Settings	10-23
TRAP Setting	10-19
TSI User Box Registration	14-14
TSI User Box Settings	14-13
TX/RX Settings	14-5

U

User Box Operation	12-8
User Registration	7-6
User/Account Common Setting	10-40

W

Web Service Common Settings

web Service Common Settings	
-	. 4-34, 5-17, 8-20, 8-21
Web Service Settings	
WebDAV Client Settings	4-29
WebDAV Server Settings	9-11
WebDAV Settings	
Weekly Timer Setting	
WINS Setting	4-4
Wizard	
Х	
\wedge	
XPS Settings	13-7



http://konicaminolta.com